Instruction Manual

MODEL 803D
DIFFERENTIAL VOLTMETER

FLUKE

ELECTRONICS FOR INDUSTRY
INSTRUMENTS / COMPONENTS

JOHN FLUKE MFG. CO., INC.
P.O. Box 7428 Seattle, Washington 98133

June 25, 1963

MODEL 803D
DIFFERENTIAL VOLTMETER

803D _____ and above
803DR _____ and above
803D/AG _____ and above
803DR/AG _____ and above

Copyright, John Fluke Mfg. Co., 1968

ADDENDUM

FLUKE MODELS

801B, 803B, 803D, 821A, 823A, and 825

The DC Differential Voltmeter Calibration procedure is ammended to employ the Fluke Model 332A DC Voltage Calibrator in lieu of the several instruments listed in section IV of the manual.

Procedures included in the manual call for the use of an Eppley standard cell, a galvonometer, two silver contact push-button switches, two resistors, a precision voltage divider and a power supply. The procedure is complex, requiring four expensive standards, and introduces error possibilities if considerable care is not exercised in assembling the set-up.

The Fluke Model 332A DC Voltage Calibrator provides, in one instrument, a reliable 0.003% accuracy over the entire range of DC input of the test instrument.

Generally, operation of the Model 332A DC Voltage Calibrator involves simply connecting the input of the instrument under test to the Model 332A output and dialing the desired voltage level on the Model 332A. As an example, consider calibration of the Model 803B on its 50 volt range.

a. Set the VOLTAGE RANGE dials of the Model 332A to 50 volts.

b. Connect the Model 803B INPUT to the Model 332A OUTPUT.

c. Set the Model 803B as follows:

RANGE	50
NULL	0.01
voltage readout dials	49.9910

d. Set the POWER switch of the Model 332A to STANDBY/RESET and then to ON.

e. Null the Model 803B by adjusting 50 V DC ADJ control R323.

For more detailed operation procedures consult the instruction manual for the Model 332A DC Voltage Calibrator and the manual for the instrument under test.

Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_07977

TABLE OF CONTENTS

Section	Title	Page
I	INTRODUCTION AND SPECIFICATIONS	1-1
	1-1. Introduction	1-1
	1-2. Damage in Shipment	1-1
	1-3. Specifications	1-1
II	OPERATING INSTRUCTIONS	2-1
	2-1. Controls, Terminals, and Indicators	2-1
	2-2. Zeroing Instructions	2-3
	2-3. Preliminary Operation	2-3
	2-4. Operation as a DC Differential Voltmeter	2-3
	2-5. Operation as an AC Differential Voltmeter	2-3
	2-6. Operation as a Conventional VTVM	2-4
	2-7. Measurement of Voltage Excursions About a Nominal Value	2-4
	2-8. Recording Voltage Excursions	2-5
	2-9. Measurement of High Resistances	2-6
	2-10. Notes on Measuring AC or DC Voltages	2-6
	2-11. Notes on Measuring DC Voltages	2-7
	2-12. Notes on Measuring AC Voltages	2-7
III	THEORY OF OPERATION	3-1
	3-1. General	3-1
	3-2. DC Vacuum Tube Voltmeter	3-1
	3-3. 0 to 500 Volt Reference Supply	3-3
	3-4. AC to DC Converter	3-4
	3-5. AC - DC Polarity Switch	3-5
IV	MAINTENANCE	4-1
	4-1. General	4-1
	4-2. Periodic Maintenance	4-1
	4-3. Corrective Maintenance	4-1
	4-4. Calibration	4-6
V	LIST OF REPLACEABLE PARTS	5-1
VI	ACCESSORIES	6-1
	6-1. Precision Voltage Dividers	6-1
	6-2. Potentiometric Recorder	6-2
	WARRANTY	
	CIRCUIT DIAGRAM	

LIST OF ILLUSTRATIONS

Figure	Title	Page
Frontispiece	Model 803D AC/DC Differential Voltmeter	iv
2-1	Controls, Terminals, and Indicators (sheet 1 of 2)	2-1
2-1	Controls, Terminals, and Indicators (sheet 2 of 2)	2-2
2-2	Recommended Null Settings	2-3
2-3	VTVM Ranges	2-4
2-4	Full Scale AC Deflections	2-5
2-5	Percent Error Due to Harmonic Distortion	2-7
2-6	Signal Voltage with Converter Noise	2-8
3-1	803D AC/DC Differential Voltmeter Block Diagram	3-1
3-2	Function of Polarity Switch	3-5
4-1	Troubleshooting (sheet 1 of 2)	4-2
4-1	Troubleshooting (sheet 2 of 2)	4-3
4-2	Tube Voltage Chart	4-4
4-3	Transistor Voltage Chart	4-5
4-4	Calibration Equipment	4-6
4-5	Adjustment Locations	4-7
4-6	AC to DC Converter Calibration Set-up	4-8
5-1	Final Assembly (sheet 1 of 2)	5-3
5-1	Final Assembly (sheet 2 of 2)	5-4
5-2	Front Panel Assembly (sheet 1 of 2)	5-6
5-2	Front Panel Assembly (sheet 2 of 2)	5-7
5-3	Reference Supply Board Assembly	5-9
5-4	Null Detector Chassis Assembly (sheet 1 of 2)	5-12
5-4	Null Detector Chassis Assembly (sheet 2 of 2)	5-15
5-5	Range Resistor Board Assembly	5-17
5-6	Kelvin-Varley Resistor Board Assembly	5-18
5-7	Converter/AC Range Switch Assembly (sheet 1 of 2)	5-21
5-7	Converter/AC Range Switch Assembly (sheet 2 of 2)	5-22
5-8	Chopper Drive Assembly	5-23

MODEL 803D

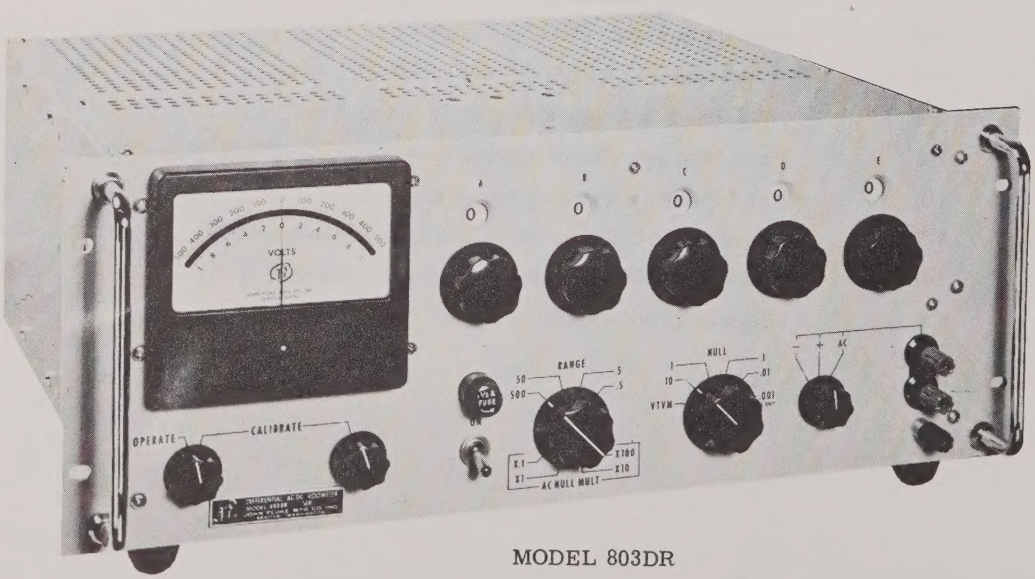

MODEL 803DR

SECTION I

INTRODUCTION AND SPECIFICATIONS

1-1. INTRODUCTION

a. This instruction manual is for use with the 803D series AC/DC Differential Voltmeters. These are available in either a cabinet model or a standard 19 inch rack model, and with either a standard cell or a Zener diode as the reference element. Model designations are: 803D (cabinet model, standard cell); 803DR (rack model, standard cell); 803D/AG (cabinet model, Zener diode); and 803DR/AG (rack model, Zener diode).

b. The high accuracy, portability, and compactness of the 803D make this instrument ideal for the precise measurement of almost any AC or DC voltage. Ease of operation, inherent protection from accidental overload, and high reliability contribute to the outstanding performance that assures suitability for both production line testing and precision laboratory measurements. This instrument is capable of being used as a vacuum tube voltmeter, as a precision potentiometer, and as a megohmmeter for measurement of high resistance. It can also be used to measure the excursions of a voltage about some nominal value. One feature that should be emphasized is that no current is drawn from the unknown source for DC measurements when balance is attained. Thus the determination of the unknown DC potential is independent of its source resistance. The 803D is basically used for measurements of DC voltages from 0 to 500 volts and AC voltages from 0.001 to 500 volts. However, high accuracy measurements to 30,000 volts DC are possible with precision voltage dividers especially designed for use with the Fluke Model 800 Series Differential Voltmeters. As additional features, this instrument contains a polarity switch for equal convenience in measuring positive or negative DC voltages and an adjustable recorder output which makes the 803D particularly useful for monitoring the stability of almost any AC or DC voltage. Furthermore, the 803D meter has taut-band suspension which eliminates problems due to meter stickiness.

c. When used as a DC differential voltmeter, the 803D operates on the potentiometric principal. An unknown voltage is measured by comparing it to a known adjustable reference voltage with the aid of a null detector. An accurate standard for measurements is obtained by setting the reference supply with a standard cell for the 803D and 803DR and with a Zener reference diode for the 803D/AG and 803DR/AG. The known adjustable reference voltage is provided by a 500 volt DC power supply and five Kelvin-Varley decade resistor strings that are set accurately by five voltage readout dials. In this way, the 500 volts can be precisely divided into increments as small as 10 microvolts. The unknown voltage is then simply read from the voltage dials. When used as an AC differential voltmeter, the 803D operates essentially the same as for DC differential measurements. The AC input voltage is converted to a DC voltage and this DC voltage is measured by comparing it to a known adjustable reference voltage. In the highest recommended null sensitivity range, potential differences between the unknown and the reference voltage of only 0.001 volts for DC and 0.001 volts for AC will cause full scale meter deflection.

d. The instrument is normally supplied ready for use on 115 volts. Upon request, instruments are supplied for 230 volts operation. If it becomes desirable to convert from one mode of operation to the other, refer to the instruction decal on the back of cabinet models or on the cover in rack models.

1-2. DAMAGE IN SHIPMENT

Immediately upon receipt, thoroughly inspect for any damage that may have occurred in transit. If any damage is noted, follow the instructions outlined on the warranty page at the back of this manual.

1-3. SPECIFICATIONS

AS A PRECISION POTENTIOMETER

DC ACCURACY:

±0.02% of input voltage from 0.1 to 500 VDC
±(0.02% +25 uv) below 0.1 VDC

AC ACCURACY:

Input Voltage	Basic AC Accuracy		Low Frequency AC Accuracy		High Frequency AC Accuracy	
	30 cps to 5 kc	20 cps to 10kc	10 cps to 20cps	5 cps to 10 cps	10 kc to 20 kc	20 kc to 100 kc
0.5 to 500	±0.1%	±0.15%	±0.5%	±2%	±0.3%	-
0.001 to 0.5	±(0.1% + 25uv)	±(0.15%+25uv)	±(0.5% + 25uv)	±(2% + 25uv)	±(0.3% + 25uv)	-
0.05 to 50	-	-	-	-	-	±1%

RANGE:

For DC Measurements

Input Voltage Range	Recommended Null Range	Input Resistance Per Volt of Input Voltage	
		At Null	1% of Full Scale Off Null
50-500	10-0-10	Infinite	100 Meg
	1-0-1	Infinite	1,000 Meg
5-50	1-0-1	Infinite	1,000 Meg
	0.1-0-0.1	Infinite	10,000 Meg
0.5-5	0.1-0-0.1	Infinite	10,000 Meg
	0.01-0-0.01	Infinite	100,000 Meg
0-0.5	0.01-0-0.01	Infinite	100,000 Meg
	0.001-0-0.001	Infinite	100,000 Meg

For AC Measurements

Input Voltage Range	Recommended Null Range	Input Impedance
50-500	100-0-100	1 Meg, 35 uuf
	10-0-10	1 Meg, 35 uuf
	1-0-1	1 Meg, 35 uuf
5-50	10-0-10	1.1 Meg, 35 uuf
	1-0-1	1.1 Meg, 35 uuf
	0.1-0-0.1	1.1 Meg, 35 uuf
0.5-5	1-0-1	1 Meg, 50 uuf
	0.1-0-0.1	1 Meg, 50 uuf
	0.01-0-0.01	1 Meg, 50 uuf
0.001-0.5	0.1-0-0.1	1 Meg, 50 uuf
	0.01-0-0.01	1 Meg, 50 uuf
	0.001-0-0.001	1 Meg, 50 uuf

RESOLUTION:

Voltage Readout Dial Resolution

Range Setting	Null Setting	Resolution
500	any	10 mv
50	any	1 mv
5	any	0.1 mv
0.5	any	0.01 mv

Meter Resolution
(1/4 of a small scale meter division)

Polarity Setting	Range Setting	Null Setting	Resolution
DC	any	10	50 mv
DC	any	1	5 mv
DC	any	0.1	0.5 mv
DC	any	0.01	0.05 mv
DC	any	0.001	0.005 mv
AC	500	1	500 mv
AC	500	0.1	50 mv
AC	50	1	50 mv
AC	500	0.01	5 mv
AC	50	0.1	5 mv
AC	5	1	5 mv
AC	50	0.01	0.5 mv
AC	5	0.1	0.5 mv
AC	0.5	1	0.5 mv
AC	5	0.01	0.05 mv
AC	0.5	0.1	0.05 mv
AC	0.5	0.01	0.005 mv

AS A VACUUM TUBE VOLTMETER

ACCURACY: 3% of full scale

RANGE:

Voltage Ranges		Input Impedance
DC:	500-0-500	50 Meg
	50-0-50	50 Meg
	5-0-5	50 Meg
	0.5-0-0.5	50 Meg
	10-0-10*	10 Meg
	1-0-1*	10 Meg
	0.1-0-0.1*	10 Meg
	0.01-0-0.01*	10 Meg
	0.001-0-0.001*	1 Meg
AC:	0-500	1 Meg, 35 uuf
	0-50	1 Meg, 35 uuf
	0-5	1 Meg, 50 uuf
	0-0.5	1 Meg, 50 uuf
	0-100**	1 Meg, 35 uuf
	0-10**	1 Meg, 35 uuf
	0-1**	1 Meg, 35 uuf
	0-0.1**	1 Meg, 35 uuf
	0-0.01**	1 Meg, 50 uuf
	0-0.001**	1 Meg, 50 uuf

*These ranges are obtained by using Null ranges with all five voltage readout dials set to 0.

**These ranges are obtained by the proper setting of the range and null switches with all five voltage readout dials set to 0.

GENERAL SPECIFICATIONS

REGULATION AND STABILITY OF 500 VOLT SUPPLY:

±0.0025% for a ±10% line change
±0.005% per hour after 30 min. warmup

STABILITY OF METER ZERO:

±0.25% of full scale for a ±10% line change

TERMINAL LINEARITY OF KELVIN-VARLEY DIVIDER:

±0.0005% (5 ppm) from 0 to 0.1 of full scale
±0.0005% to ±0.005% (5 ppm to 50 ppm) from 0.1 full scale to full scale

OPERATING TEMPERATURE RANGE:

Model 803D (Standard cell reference element)
Within DC accuracy specifications from 55°F to 95°F, derated at 0.001%/°F outside these limits to 35°F and 110°F

Within AC accuracy specifications from 55°F to 95°F, derated outside these limits to 35°F and 110°F as follows:

±0.003%/°F up to 10 kcps
±0.005%/°F above 10 kcps

Model 803D/AG (Zener diode reference element)
Within DC accuracy specifications from 55°F to 95°F, derated at 0.001%/°F outside these limits to 0°F and 125°F

Within AC accuracy specifications from 55°F to 95°F, derated outside these limits to 0°F and 125°F as follows:

±0.003%/°F up to 10 kcps
±0.005%/°F above 10 kcps

RELATIVE HUMIDITY:

Within specifications from 0 to 80% relative humidity

SHOCK AND VIBRATION:

Meets requirements of MIL-T-945A

INPUT POWER:

115/230VAC ±10%, 50 - 440 cps,
80 watts (803D), 85 watts (803D/AG)

SIZE:

Cabinet: 13" high x 9-3/4" wide x 16" deep
Rack: 7" high x 19" wide x 15-1/2" deep

WEIGHT:

Cabinet: Approximately 25 lbs.
Rack: Approximately 23 lbs.

SECTION II

OPERATING INSTRUCTIONS

2-1. CONTROLS, TERMINALS, AND INDICATORS

The location, circuit symbol, and a functional description of external controls, terminals, and indicators on the 803D Precision AC/DC Differential Voltmeter may be found in figure 2-1.

CONTROLS TERMINALS AND INDICATORS	LOCATION	CIRCUIT SYMBOL	FUNCTION DESCRIPTION
Input terminals	Front panel	J1, J2	Provided for connecting AC or DC voltage to be measured.
Chassis ground terminal	Front panel	J3	Provided for grounding purposes. A 0.47 uf capacitor is connected from the lower input binding post to the chassis ground post. The upper input post should never be connected to the chassis ground post. Since the instrument is equipped with a three-wire line cord with the third wire fastened to the chassis, the external circuit should be checked for conflicts in grounding before connecting lower input binding post (middle post) to the chassis post.
Power toggle switch	Front panel	S1	Applies AC line voltage to the primary circuit of the power transformer.
OPERATE-CALIBRATE switch	Front panel	S4	Remains in the OPERATE position at all times except when it is necessary to calibrate the internal 500 volt DC reference supply. When held in the CALIBRATE position, a representative sample of the reference voltage is compared to the voltage of an internal standard cell, or Zener reference diode for the /AG models, and any difference is indicated on the meter.
CALIBRATE control	Front panel	R2	Varies the output of the 500 volt DC reference supply. When the OPERATE-CALIBRATE switch is held in the CALIBRATE position, the reference supply is accurately set by adjusting the CALIBRATE control for zero meter deflection.
RANGE switch	Front panel	S2	Selects desired voltage range. Full scale voltage ranges of 500, 50, 5, and 0.5 volts are available. It also indicates the AC NULL MULT for each range position.

Figure 2-1. CONTROLS, TERMINALS, AND INDICATORS (sheet 1 of 2)

CONTROLS TERMINALS AND INDICATORS	LOCATION	CIRCUIT SYMBOL	FUNCTIONAL DESCRIPTION
NULL switch	Front panel	S3	Set to VTVM for determining the approximate value of unknown voltage prior to differential measurements. Five null switch ranges of 10, 1, 0.1, 0.01, and 0.001 volts are used for differential measurements. For the DC mode, the null ranges represent full scale differences between the unknown voltage and the amount of precision internal reference voltage that is set on the voltage readout dials. For the AC mode, the null range used times the applicable AC Null Multiplier, indicated by the range switch, represents the full scale difference between the unknown voltage and the amount set on the voltage dials.
A, B, C, D, and E voltage readout dials	Front panel	S6, S7, S8, S9, S10	Provide an in-line readout of the amount of internal reference voltage necessary to null the unknown voltage.
Decimal lights	Front panel	DS1, DS2, DS3, DS4	Serve as decimal points for the voltage readout dials. A different light illuminates for each position of the RANGE switch.
AC - DC polarity switch	Front panel	S5	Selects the AC, + DC, or - DC mode of operation. With this switch in the positive position, the polarity of the upper input binding post is positive with respect to the lower input binding post (middle post).
Output terminals	Rear panel	J4, J5	Provided for attaching a recorder to monitor voltage excursions.
Output level control	Rear panel	R1	Varies the output level of the output binding post from 0 to at least 18 millivolts full scale deflection.
Meter	Front panel	M1	Indicates approximate voltage when 803D is in VTVM mode and difference between unknown and internal reference voltage when 803D is in differential mode. The upper scale, 500-0-500, is used when the NULL switch is set to VTVM at all other times, the lower scale, 1-0-1, is used.
Mechanical zero control	Meter case	None	Sets meter to zero mechanically. This adjustment should be used only after instrument has been turned off for at least three minutes or when the internal meter terminals have been shorted.
Fuse	Rear panel of cabinet models, front panel of rack models.	F1	Fuse holder protrudes from instrument to provide easy access to the fuse. The fuse is a 1.5 ampere slow blowing type for 115 volt operation and a 0.75 ampere slow blowing type for 230 volt operation.

Figure 2-1. CONTROLS, TERMINALS, AND INDICATORS (sheet 2 of 2)

2-2. ZEROING INSTRUCTIONS

From time to time, it may be necessary to adjust the internal meter zero control. This will normally be necessary at somewhat more frequent intervals than regular calibration for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237. For later instruments, it should only be necessary to adjust the internal meter zero during regular calibration. Proceed as follows:

a. Mechanically zero the meter with the adjustment screw on the front of the meter case. If the instrument is in the case, it must be shut off for at least three minutes prior to this adjustment. If out of case, another method would be to short out the internal meter terminals prior to zeroing.

b. Set power switch to ON and allow a 20 minute warm-up period.

c. Set RANGE switch to 5 or 0.5 volts, voltage readout dials to zero, and NULL switch to VTVM.

d. Adjust R212 (R232 for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237), null detector ZERO ADJ, for zero meter deflection. This control may be reached through the ventilation holes in the cabinet model (see figure 4-5). In the rack model, an identified access hole is provided on the rear panel.

2-3. PRELIMINARY OPERATION

The following procedure prepares the voltmeter for operation:

a. Connect power plug to a 115 volt AC power source. If instrument has been wired for 230 volt operation, connect to 230 volts AC.

NOTE

The round pin on polarized three-prong plug connects instrument case to power system ground. Use a three-to-two pin adapter when connecting to a two-contact receptacle. For personnel safety, connect short lead to a suitable ground.

b. Set controls on 803D voltmeter as follows:

RANGE	500 volts
NULL	VTVM
AC - DC polarity	+ (positive)
all voltage readout dials	0 (zero)
power	ON

c. After a warmup period of at least ten minutes, advance OPERATE-CALIBRATE switch against spring tension to CALIBRATE, and adjust internal 500 volt DC reference supply with CALIBRATE control for zero meter deflection. Release OPERATE-CALIBRATE switch.

2-4. OPERATION AS A DC DIFFERENTIAL VOLTMETER

a. After completing preliminary operation, connect unknown voltage to input binding posts. If one side is grounded, always connect it to the lower input post (middle post).

b. Turn RANGE switch to lowest range that will allow an on-scale reading and note approximate value of unknown voltage as indicated on upper meter scale.

c. If meter reads to the left, turn AC - DC polarity switch to the negative position. The meter needle will deflect to the right. This is because polarity of unknown voltage is negative.

d. Noting the position of illuminated decimal light, set five voltage readout dials to approximate voltage determined in step b. For example, if approximate voltage is 35 volts, the decimal light between the B and C voltage readout dials will be illuminated. Therefore, set A dial to 3, B dial to 5, and C, D, and E dials to 0.

e. Set NULL switch to successively more sensitive null ranges, as indicated in figure 2-2, and adjust voltage readout dials for zero meter deflection in each null position. When the meter needle indicates to the right, the voltage under measurement is greater than the voltage set on the voltage readout dials. When the indication is to the left, the voltage is less than that set on the readout dials.

f. Read unknown voltage directly from the five voltage readout dials.

INPUT VOLTAGE RANGE	*RECOMMENDED NULL SETTING
50-500	10 then 1 (then 0.1 for voltages from 50 to 100 volts)
5-50	1 then 0.1 (then 0.01 for voltages from 5 to 10 volts)
0.5-5	0.1 then 0.01 (then 0.001 for voltages from 0.5 to 1 volt)
0-0.5	0.01 then 0.001

*Any null range may be used with any input voltage range; recommended settings are those most useful.

Figure 2-2. RECOMMENDED NULL SETTINGS

2-5. OPERATION AS AN AC DIFFERENTIAL VOLTMETER

a. After completing preliminary operation, set AC-DC polarity switch to AC.

b. Connect unknown AC voltage to input binding posts.

c. Turn RANGE switch to lowest range that will allow an on-scale reading and note approximate value of unknown voltage as indicated on upper meter scale.

d. Noting the position of illuminated decimal light, set five voltage dials to approximate voltage determined in step c. For example, if approximate voltage is 35 volts, the decimal light between the B and C voltage dials will be illuminated. Therefore, set A dial to 3, B dial to 5, and C, D, and E dials to 0.

e. Set null switch to 0.1 and then 0.01 volt, adjusting voltage dials for zero meter deflection in each position.

f. Read unknown voltage from the five voltage readout dials.

2-6. OPERATION AS A CONVENTIONAL VTVM

If it is desired to use the instrument as a VTVM only, additional ranges can be made available by converting the NULL ranges to VTVM ranges. This is made possible by setting the voltage readout dials to zero. Proceed as follows:

a. Perform preliminary operation procedures as stated in paragraph 2-3.

b. Consult figure 2-3, and select full scale voltage deflection desired. If the approximate value of the voltage to be measured is unknown, select the 500 volt range initially.

c. Set AC - DC polarity switch, RANGE switch, NULL switch, and voltage dials as indicated for the range selected.

d. Connect voltage to be measured to input binding posts. Deflection to the right indicates that an unknown DC voltage is of positive polarity. An unknown AC voltage will always cause deflection to the right.

e. Read voltage from upper or lower scale as listed in figure 2-3.

2-7. MEASUREMENT OF VOLTAGE EXCURSIONS ABOUT A NOMINAL VALUE

a. After completing preliminary operation as stated in paragraph 2-3, set AC - DC polarity switch to desired position.

b. Connect voltage to be observed to input binding posts. If meter reads to the left, the voltage being measured is negative DC; set polarity switch to the negative position in this case. This will cause meter pointer to deflect to the right.

c. Set RANGE switch to lowest range which will give an on-scale meter indication and note nominal value of voltage indicated.

d. Set the five voltage readout dials to nominal voltage.

e. Turn NULL switch to lowest position that will allow voltage excursions to remain on scale.

f. Read voltage excursions from meter. Note that full scale right and left meter deflections are equal to the NULL voltage setting for DC measurements. For AC measurements, full scale right and left meter deflections are equal to the NULL voltage setting multiplied by the AC NULL MULT indicated by the RANGE setting. Figure 2-4 shows full scale AC deflections for the recommended settings of the range and null switches.

Full-Scale Deflection	AC-DC Polarity Switch	Range Switch	Null Switch	Voltage Readout Dials	Meter Scale
DC:					
500-0-500	+	500	VTVM	No effect	Upper
50-0-50	+	50	VTVM	No effect	Upper
5-0-5	+	5	VTVM	No effect	Upper
0.5-0-0.5	+	0.5	VTVM	No effect	Upper
10-0-10	+	No effect	10	All zero	Lower
1-0-1	+	No effect	1	All zero	Lower
0.1-0-0.1	+	No effect	0.1	All zero	Lower
0.01-0-0.01	+	No effect	0.01	All zero	Lower
0.001-0-0.001	+	No effect	0.001	All zero	Lower
AC:					
0-500	AC	500	VTVM	No effect	Upper
0-50	AC	50	VTVM	No effect	Upper
0-5	AC	5	VTVM	No effect	Upper
0-0.5	AC	0.5	VTVM	No effect	Upper
0-100	AC	500	1	All zero	Lower
0-10	AC	500	0.1	All zero	Lower
		50	1		
0-1	AC	500	0.01	All zero	Lower
		50	0.1		
		5	1		
0-0.1	AC	50	0.01	All zero	Lower
		5	0.1		
		0.5	1		
0-0.01	AC	5	0.01	All zero	Lower
		0.5	0.1		
0-0.001	AC	0.5	0.01	All zero	Lower

Figure 2-3. VTVM RANGES

Range Switch Setting	Null Switch Setting	AC Null Multiplier	Full Scale AC Deflection (in volts)
500	1 0.1 0.01	X100	100 10 1
50	1 0.1 0.01	X10	10 1 0.1
5	1 0.1 0.01	X1	1 0.1 0.01
0.5	1 0.1 0.01	X0.1	0.1 0.01 0.001

Figure 2-4. FULL SCALE AC DEFLECTIONS

2-8. RECORDING VOLTAGE EXCURSIONS

a. GENERAL. Recorder output binding posts and an output level control are provided on the 803D for monitoring the excursions of an unknown voltage from the voltage indicated by the voltage readout dial settings. If the leakage resistance between the recorder and ground is less than 10,000 megohms, the accuracy of the voltmeter will be impaired. Therefore, the FLUKE Model A88 Isolation Amplifier is recommended for this application. The A88 will allow the use of a wide range of strip chart recorders for recording the voltmeter reading without regard to the input isolation characteristics of the recorder.

b. USE OF 803D WITH A88 AND A RECORDER. To use the A88 Isolation Amplifier and a recorder with the 803D, proceed as follows:

(1) Set A88 POWER switch to ON.

(2) When batteries are being used as a power source for A88, measure voltage at BATT TEST jacks. If voltage is between 11.7 and 14 volts DC, the batteries are satisfactory for use. However, if battery voltage is below 12.8 volts, batteries are approaching end of their useful life and should be replaced.

(3) Connect output terminals of differential voltmeter to INPUT terminals of isolation amplifier with teflon leads.

(4) Connect OUTPUT terminals of isolation amplifier to recorder input terminals.

(5) Perform preliminary operation as stated in paragraph 2-3.

(6) Short input terminals of 803D and set switches on 803D as follows:

AC-DC polarity	+ (positive)
RANGE	50
NULL	10
voltage readout dials	10.000

The 803D meter will indicate full scale. This provides up to a maximum of at least 18 millivolts at the output terminals depending on setting of the output level control.

(7) Turn on recorder and set recorder gain so that a recorder input of either ±2 volts or near maximum if maximum is below ±2 volts will cause recorder deflection desired for full scale deflection of differential voltmeter.

(8) Adjust output level control on differential voltmeter until recorder deflection obtained is that desired to correspond to full scale deflection of the differential voltmeter.

(9) Remove short from input terminals of the 803D. The voltmeter and recorder are now ready for recording the measurement of voltage excursions about a nominal value. Proceed as instructed under paragraph 2-7.

c. USE OF 803D WITH A RECORDER. To use a recorder with the 803D, proceed as follows:

(1) Connect 803D output terminals to input terminals of recorder with teflon leads.

CAUTION

Do not ground either of the 803D recorder output terminals or either of the recorder input terminals. If any of these terminals are grounded, current will be drawn from the 803D Kelvin-Varley voltage divider and the 803D will no longer be accurate.

(2) After connecting the recorder, perform preliminary operation as stated in paragraph 2-3.

(3) Check for excessive leakage as follows:

(a) Connect a DC voltage to the input of the 803D and differentially measure its potential in a recommended null range.

(b) Alternately connect and disconnect the recorder leads from the output terminals of the 803D while noting the meter needle deflection. More than one-quarter of a small scale division deflection indicates that excessive leakage has been introduced by the recorder. This will impair the accuracy of the 803D voltmeter.

(c) Disconnect the voltage.

(4) After the leakage test has been successfully completed, short input terminals of 803D.

(5) Set switches on 803D voltmeter as follows:

AC - DC polarity	+ (positive)
RANGE	50
NULL	10
Voltage readout dials	10.000

The 803D meter will indicate full scale deflection. This provides up to at least 18 millivolts at the output terminals depending on the setting of the output level control.

(6) Turn output level control until recorder deflection obtained is that desired to correspond to full scale deflection of 803D.

(7) Remove short from input terminals of 803D. The 803D and recorder are now ready for combined use. Proceed as instructed under paragraph 2-7.

2-9. MEASUREMENT OF HIGH RESISTANCES

One of the important features of the 803D voltmeter is its ability to be used as a megohmmeter for rapidly measuring high resistances from 1 megohm to 250,000 megohms. The following equation may be used to compute the resistance in megohms of an unknown connected to the input binding posts:

$$R_x = 10\left(\frac{E}{E_m} - 1\right) \text{ megohms,}$$

where:

R_x = unknown resistance in megohms

E = voltage indicated by voltage readout dials

E_m = voltage indicated on meter

10 = megohms of input resistance of VTVM circuit on 10, 1, and 0.1 null range.

When connecting the unknown resistance to the input terminals, use short isolated leads to prevent measuring leakage resistance between the leads.

a. FROM 1 MEGOHM TO 500 MEGOHMS. For rapid measurement of resistances from 1 megohm to 500 megohms, proceed as follows:

(1) Perform preliminary procedure as stated in paragraph 2-3.

(2) Set RANGE switch to 500 and NULL switch to 10.

(3) Connect unknown resistance between input terminals.

(4) Adjust voltage readout dials for full scale meter deflection.

(5) Subtract 10.00 from the amount set on the voltage readout dials to find the resistance of the unknown in megohms.

b. FROM 500 MEGOHMS TO 5,000 MEGOHMS. For rapid measurement of resistances from 500 to 5,000 megohms, proceed as follows:

(1) Perform preliminary procedure as stated in paragraph 2-3.

(2) Set RANGE switch to 500 and NULL switch to 1.

(3) Connect unknown resistance between input terminals.

(4) Adjust voltage readout dials for full scale meter deflection.

(5) Subtract 1.00 from the amount set on the voltage readout dials and multiply the result by 10 to find the resistance of the unknown in megohms.

c. FROM 5,000 MEGOHMS TO 50,000 MEGOHMS. For rapid measurement of resistances from 5,000 to 50,000 megohms, proceed as follows:

(1) Perform preliminary procedure as stated in paragraph 2-3.

(2) Set RANGE switch to 500 and NULL switch to 0.1.

(3) Connect unknown resistance between input terminals.

(4) Adjust voltage readout dials for full scale meter deflection.

(5) Multiply the amount set on the voltage readout dials by 100 to find the resistance of the unknown in megohms.

d. FROM 50,000 MEGOHMS TO 250,000 MEGOHMS. To determine the value of an unknown resistance between 50,000 megohms and 250,000 megohms, proceed as follows:

(1) Perform preliminary procedure as stated in paragraph 2-3.

(2) Set RANGE switch to 500 and NULL switch to 0.1.

(3) Connect unknown resistance between input terminals.

(4) Adjust voltage readout dials for a convenient meter deflection.

(5) The resistance in megohms may be calculated by substituting the meter reading in volts (E_m, 0 to 0.1 volt on bottom scale) and the voltage readout dial setting (E) into the following equation:

$$R_x = 10\,\frac{E}{E_m} \text{ megohms}$$

2-10. NOTES ON MEASURING AC OR DC VOLTAGES

a. ADJUSTMENT OF 500 VOLT REFERENCE SUPPLY. The 500 volt DC reference supply may be adjusted (paragraph 2-3, step c) at any time deemed necessary without heed to the position of the switches and without removing any input or output connections. However, until the instrument has warmed up to an equilibrium temperature (about 1/2 hour), it should be adjusted prior to each specific measurement for best accuracy. When making prolonged measurements, allow one hour warmup time to insure that 500 volt reference supply does not shift during the final warmup phase.

b. GROUND LOOP PRECAUTIONS. Ground loop currents should be avoided to assure accuracy when making measurements. Potential differences are often found at different points on power system grounds. When this is the case, current may flow from the power system ground through the 803D and the equipment under measurement and back to the power system ground. To avoid this when system being measured is grounded, do not connect shorting link from lower input binding post to chassis ground post.

c. USE OF SHORTING LINK. A 0.47 uf capacitor (C1) is connected from the lower input binding post to the chassis ground post to reduce the effect of circulating AC currents from the transformer. In some cases, it is possible for C1 to acquire a charge. For example, C1 will become charged through leakage resistance over a period of time if there is no external connection to the input terminals and the controls are set as follows: range to 500, null to any null range, polarity to +, and voltage readout dials to several hundred volts. This condition may cause an error on low level measurements (under 5 volts) due to C1 discharging through the Kelvin-Varley divider. Connecting the shorting link from the lower input post to the ground post will discharge C1 and thus prevent an inaccurate indication.

2-11. NOTES ON MEASURING DC VOLTAGES

a. RECOMMENDED NULL RANGES FOR DC MEASUREMENTS. Certain null ranges are recommended for use with each setting of the RANGE switch for the following reasons. With the RANGE switch at 500 volts the last voltage readout dial (E) changes the reference voltage in steps of 0.01 volt. Therefore, the unknown voltage would have to be an exact multiple of 0.01 volt if a null is to be obtained on the 0.1 or 0.01 volt NULL range. Furthermore, it is unlikely that an unknown voltage of a few hundred volts will be stable within 10 millivolts. Finally, the regulation of the reference supply is approximately ±0.0025% (±0.0125 volt) for a 10% change in line voltage. Although this is more than adequate when the instrument is used in the recommended way, a badly fluctuating line voltage may cause the 803D to meter the regulation of its own 500 volt reference supply. For example, when measuring 500 volts a line change of 10% may cause the 500 volt reference supply to change as much as 12.5 mv. Although this is small, the 803D will indicate full scale for a change as little as 100 mv or 10 mv if attempting to use the 0.1 or 0.01 null ranges.

b. EFFECT OF AC COMPONENTS ON DC MEASUREMENTS. An AC component of several times the unknown DC may be present on the unknown and the 803D will always indicate well within the specifications for frequencies over a few hundred cycles. An AC component may have an adverse effect if it is of a low frequency or if it has a frequency that is a multiple or submultiple of the chopper frequency. A double section low pass filter (R201, C201, R202, and C202) is used at the input of the null detector to reduce any AC present on the DC being measured. At lower frequencies, this low pass filter is less effective and the magnitude of the AC component is more significant. If this frequency is below 100 cycles, the accuracy may no longer be with specifications. For example, a 60 cycle AC voltage that is 10% of the input voltage will cause an error of approximately 0.001% which is well within the specifications. Also since the input attenuation is less for the more sensitive null settings, the accuracy may be affected only on the more sensitive null settings. When the frequency is very close to a multiple or submultiple of the chopper frequency (approximately 83 cycles), the meter needle will oscillate at the difference frequency. If AC components that affect the accuracy are ever encountered, additional filtering will be required. For an AC of a single frequency, a twin-T filter is effective and has the advantage of low total series resistance. For an AC variable frequency, an ordinary low pass filter may be used. In either case, high quality capacitors of high leakage resistance should be used.

c. MEASUREMENT OF NEGATIVE DC VOLTAGES. Because of a polarity switch, voltages which are negative with respect to ground as well as the more commonly encountered positive voltages may be measured with equal facility. If the upper input post is connected to the metal case or line ground, either at the 803D or at the source under measurement, the accuracy of the voltmeter may be reduced. However, with the polarity switch the upper input post never has to be connected to ground. If the unknown voltage is grounded, always connect the grounded side to the lower input post (middle post) and use the polarity switch to obtain the proper result.

2-12. NOTES ON MEASURING AC VOLTAGES

a. ERRORS DUE TO DISTORTION. The AC to DC converter in the 803D is an average measuring device calibrated in RMS. The converter will put out a DC voltage that is proportional to 1.11 times the average value of the AC input voltage. Thus, if the input signal is not a true sinusoid, the 803D reading is probably in error because the ratio of RMS to average is usually not the same in a complex wave as in a sine wave. The magnitude of the error is dependent on magnitude of the distortion and on its phase and harmonic relationship with respect to the fundamental. Figure 2-6 indicates how the accuracy will be affected by various harmonics for different percentages of distortion. If the distortion present in the signal is composed of even harmonics and is less than 2%, the error between the 803D reading and true RMS is fairly minor. A larger error can occur if the distortion is composed of odd harmonics, especially the third harmonic. Note that for 2% of third harmonic distortion the error in the reading could range from 0 to 0.687%.

Harmonic	% Distortion	% Error From True RMS*	
		Maximum Positive	Maximum Negative
Any even harmonic	0.1	0.000	0.000
	0.5	0.000	0.0001
	1.0	0.000	0.005
	2.0	0.000	0.020
Third harmonic	0.1	0.033	0.033
	0.5	0.167	0.168
	1.0	0.328	0.338
	2.0	0.667	0.687
Fifth harmonic	0.1	0.020	0.020
	0.5	0.099	0.101
	1.0	0.195	0.205
	2.0	0.380	0.420

*Error depends upon phase relationship between harmonic and fundamental, i. e. error can be any value between maximum positive and maximum negative, including zero.

Figure 2-5. PERCENT ERROR DUE TO HARMONIC DISTORTION

b. ERRORS DUE TO GROUNDING. In the 803D there is a 0.47 uf capacitor connected from the lower input terminal (middle post) to chassis ground. If it is desired to make measurements where the voltage to be connected to the lower input terminal is not at ground potential, a line cord adapter must be used to isolate the 803D chassis from line ground. Otherwise, the 0.47 uf capacitor would place an AC load on the circuit being measured.

c. INTERNAL CONVERTER NOISE. When the instrument is shorted in the AC mode, the converter may produce a residual noise output of approximately 100 uv. This noise voltage will cause an insignificant error as long as AC input signals of 1 mv or larger are applied to the instrument. Figure 2-7 shows a typical half wave of the signal voltage at the output of the converter amplifier. It is easily seen that the noise contributes very little to the average value of the signal and is well within the 2.6% accuracy of the instrument at 1 mv.

d. 0.001 VOLT NULL RANGE ON AC. The 0.001 volt null range should be used with caution when measuring AC voltages. Most AC sources are not stable enough to be used on this range. For example, if 0.5 volt is measured with the range switch set to 0.5 and the null switch set to 0.001, the effective null detector sensitivity is 100 microvolts full scale. Since 100 uv is 0.02% of 0.5 volt, an AC source with a stability worse than ±0.02% will cause the 803D meter pointer to swing from one end of the meter to the other. Also, if the input is shorted with the range switch set to 0.5 and the null switch set to 0.001, the meter needle may deflect more than full scale due to converter noise. However, as pointed out in paragraph 2-12c, converter noise will not impair the accuracy for input signals greater than 1 mv. Thus, any excessive erratic meter needle movement is due to AC source stability.

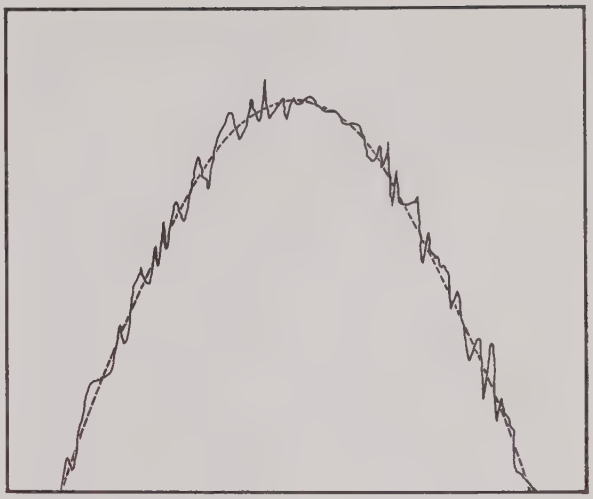

Figure 2-6. SIGNAL VOLTAGE WITH CONVERTER NOISE

SECTION III

THEORY OF OPERATION

3-1. GENERAL

a. Figure 3-1 shows the block diagram for the 803D AC/DC Differential Voltmeter. As seen in this figure, the circuit consists basically of an AC to DC converter, a DC vacuum tube voltmeter (vtvm), and a 0 to 500 volt DC reference supply. Refer to the functional schematic following section VI for more detail. This schematic is designed to aid in the understanding of circuit theory and troubleshooting. The signal flow is from left to right and the components are laid out in a functionally logical manner.

b. The overall operation of the 803D may be summarized as follows. To measure the approximate value of a DC voltage, the unknown voltage is connected directly to the DC vtvm. To accurately measure a DC voltage, the unknown voltage is connected across the series combination of the DC vtvm and the 0 to 500 volt DC reference supply. The reference supply voltage is then adjusted with the five voltage readout dials until it matches the unknown voltage as indicated by the vtvm. All AC measurements are made by first converting the AC input voltage to a DC voltage by means of the AC to DC converter. The 803D then operates essentially the same as for approximate and accurate DC measurements.

c. In order to provide for a more complete understanding of the 803D voltmeter, the following paragraphs describe each section of the circuit in detail.

3-2. DC VACUUM TUBE VOLTMETER

a. GENERAL. The DC vtvm is composed of an attenuator, a null detector, and a meter. The heart of the DC vtvm is the null detector in which the DC signal input is modulated, amplified, rectified, and finally filtered to produce a DC output. The chopper amplifier has a high amount of negative current feedback. This makes the

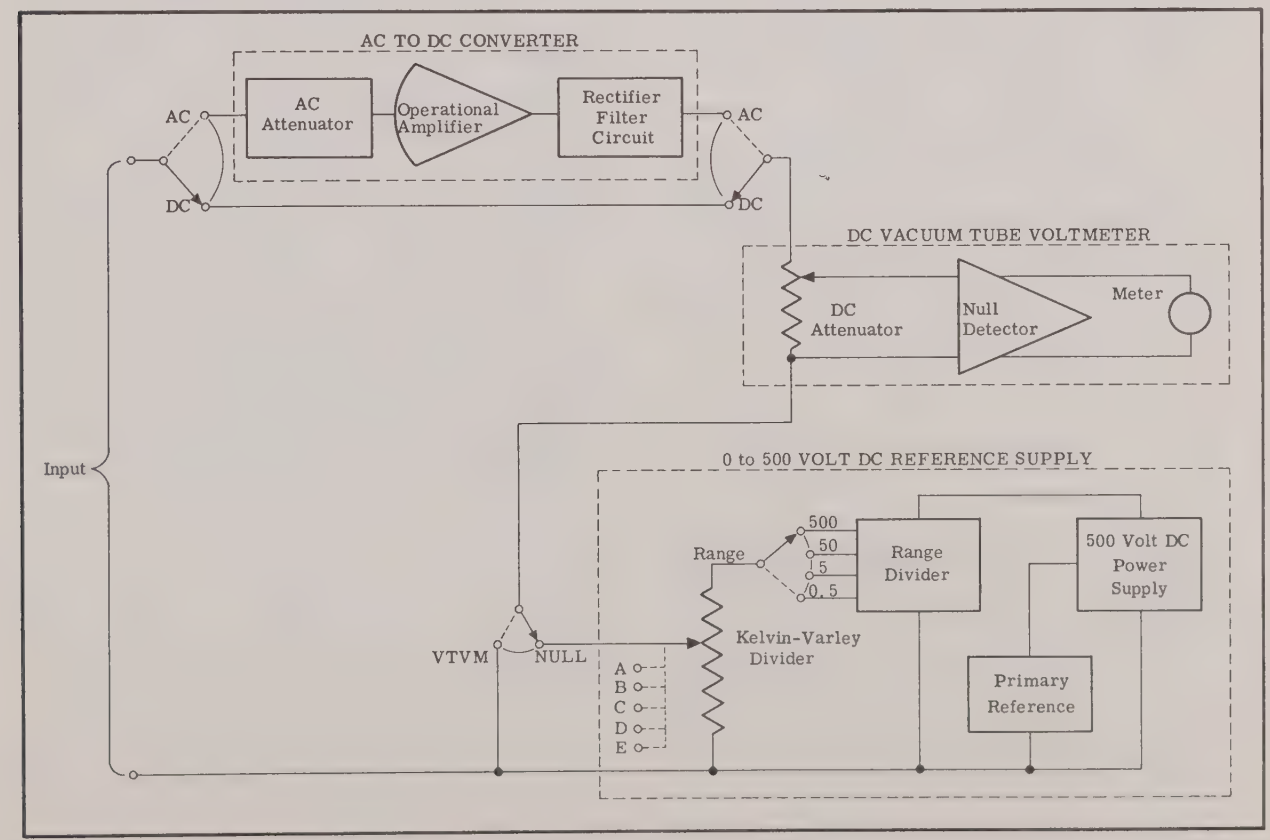

Figure 3-1. 803D AC/DC DIFFERENTIAL VOLTMETER BLOCK DIAGRAM

output current approximately equal to the signal voltage divided by the impedance of the feedback network, regardless of the amplifier characteristics. The high negative feedback also makes the amplifier relatively insensitive to the gain changes in individual stages due to aging and replacement. The output current from the null detector is indicated on a meter that has taut-band suspension. This suspension does away with all friction associated with meter pivot stickiness. Thus, any tendency for the meter pointer to stick at one point of the scale and then jump to another point is completely eliminated. The attenuator is used to reduce the voltage span of each range to a common range usable by the chopper amplifier to produce proper meter deflection.

b. NULL DETECTOR FOR 803D & 803D/AG SERIAL NUMBERS 123 TO 644 AND 803DR & 803DR/AG SERIAL NUMBERS 123 TO 237. At the input to the null detector, R201, C201, R202, and C202 form a double section low pass filter that reduces any AC component present on the DC voltage being measured. The difference between the voltage appearing at the output of the filter and the voltage developed across the feedback network is converted to an alternating voltage by G1, an 83 cycle electro mechanical chopper. This chopped voltage is amplified by V202A, V202B, and V203A before passing through cathode follower V203B. During half the chopper cycle the output of the amplifier is clamped to approximate null detector common potential by G1 while during the other half the output is filtered by C212 to provide a DC current for the meter. The voltage developed across feedback network R220, R221, and R222 is proportional to the meter (output) current. When the chopper provides connection between contacts 5 and 7, this feedback voltage effectively reduces the magnitude of the voltage that is chopped and applied to the input of the amplifier. The impedance of the feedback network (R220, R221, and R222) is adjustable between 8.82 and 9.83 ohms. Since the output current is approximately equal to the signal voltage divided by the impedance of the feedback network, a 1 mv signal voltage indicates an output current of 101.7 to 113.4 ua. However, there is a loss due to finite amplifier gain and filtering that leaves the output current around 100 ua which can be set accurately by means of the feedback network. Thus, current feedback makes the output current essentially proportional to the signal voltage. For full scale deflection, a 1 mv signal voltage will cause 100 ua to flow through the meter.

c. NULL DETECTOR FOR 803D & 803D/AG SERIAL NUMBERS 645 & ON AND 803DR & 803DR/AG SERIAL NUMBERS 238 AND ON. At the input to the null detector, R201, C201, R202, and C202 form a double section low pass filter that reduces any AC component present on the DC voltage being measured. The difference between the voltage appearing at the output of the filter and the voltage developed across the feedback network is converted to an alternating voltage by V201 and V202, a series-shunt photochopper. The photochoppers are driven by an astable multivibrator operating at 84 cycles to prevent interference from line frequency pickup. The chopped voltage is amplified by solid state amplifier Q201 through Q205 before being delivered to demodulator photocell V203. During half the chopper cycle, the output of the amplifier is clamped close to null detector common potential by V203 while during the other half the output is filtered by R221 and C211 to provide a DC output. To prevent loading of the chopper amplifier, especially at high temperatures, the filtered output is fed to unity gain amplifier Q206 and Q207 which supplies the necessary meter current. The voltage developed across feedback network R203, R204, and R205 is proportional to the meter (output) current. When DS202 illuminates V202, its resistance drops from about 50M to 5K and the amplifier input is equal to the feedback voltage. When DS203 illuminates V201, its resistance drops from about 50M to 5K and the amplifier input is equal to the output voltage of the input filter. The impedance of the feedback network (R203, R204, and R205) is adjustable between 9.28 and 10.5 ohms. Since the output current is approximately equal to the signal voltage divided by the impedance of the feedback network, a 1 mv signal voltage indicates an output current of 95.1 to 108 ua. The output current is adjusted to 100 ua during calibration by means of the feedback network. Thus, current feedback makes the output current essentially proportional to the signal voltage. For full scale deflection, a 1 mv signal voltage will cause 100 ua to flow through the meter.

d. INPUT ATTENUATOR. In the DC vtvm mode, four positions on the vtvm attenuator selected by range switch section S2C provide the necessary reduction of the 500, 50, 5, and 0.5 volt ranges for proper chopper-amplifier input. For this mode, the resistance of the attenuator and thus the input resistance of the 803D is 50 megohms (R301 through R310). In the DC differential mode, the voltage difference (unknown voltage minus reference voltage) is reduced by four positions on the vtvm attenuator selected by null switch sections S3C and S3D to give full scale deflections corresponding to inputs of 10, 1, 0.1, and 0.01 volts. For full scale deflection corresponding to 0.001 volt, the voltage across the attenuator is fed directly to the chopper amplifier. Although the resistance of the vtvm attenuator is 10 megohms (R305 through R310) for the 10, 1, 0.1, and 0.01 volt null ranges and 1 megohm (R306 through R310) for the 0.001 volt null range; this is not the input resistance of the 803D. The input resistance is determined by dividing the unknown terminal voltage by the current drawn from the unknown. The current drawn from the unknown is equal to the difference between the unknown terminal voltage and the internally known voltage divided by the resistance of the input attenuator. The equation for input resistance can be hence written as:

$$R_{in} = \frac{E_u}{I_u} = \frac{E_u R_a}{|E_u - E|} = \frac{E_s (R_a + R_s)}{|E_s - E|} - R_s$$ where:

R_{in} = input resistance of voltmeter

E_u = $E_s - I_u R_s$ = terminal voltage of unknown

I_u = current drawn from unknown

E_s = source voltage of unknown

R_s = source resistance of unknown

R_a = resistance of input attenuator

E = voltage indicated by voltage readout dials

$| \; |$ = absolute value (magnitude only)

Since the reference voltage (E) is equal to the unknown voltage (E_u) and the source voltage (E_S) at null, no current is drawn from the unknown and the input resistance is therefore infinite.

e. In the AC vtvm mode, null switch sections S3C and S3D and AC - DC switch section S5H (S2F for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803 DR/AG serial numbers 123 to 237) provide connection to only one position on the vtvm attenuator regardless of where the range switch is set. This is because the output of the AC to DC converter is 5 volts DC for full input on each range. In the AC differential mode, the voltage difference (converter output voltage minus reference voltage) is reduced by the same positions on the vtvm attenuator as for DC differential measurements. Because of this and the fact that the converter puts out 5 volts DC for full input on each range, the null range used must be multiplied by the AC null multiplier indicated by the range switch to find the full scale difference between the unknown voltage and the reference voltage. The input impedance for the AC vtvm and AC differential mode depends on the input impedance of the AC to DC converter and its attenuator. The input impedance is thus dependent on the setting of the range switch and is 1 megohm 35 uuf for the 500 volt AC range, 1.1 megohm 35 uuf for the 50 volt AC range, and 1 megohm 50 uuf for the 5 and 0.5 volt AC ranges.

f. NULL DETECTOR POWER SUPPLY FOR 803D & 803D/AG SERIAL NUMBERS 123 TO 644 AND 803DR AND 803DR/AG SERIAL NUMBERS 123 TO 237. The B+ supply for the null detector is obtained from a half-wave rectifier consisting of diode CR201 and a filter network (C213A, R227, and C213B) that is regulated by an OA2 tube (V204) and series dropping resistor R230. Divider resistors R228, R229, R231, and R232 and diode CR202 provide a compensating voltage for the purpose of adjusting the null detector to zero with R232 when there is no signal input. Diode CR202 keeps one side of R232 at approximately -0.6 volts DC with respect to the null detector common.

g. The filament of V202 and the chopper drive unit require a stable supply. This is obtained by using a filtered half-wave rectifier (CR203 and C214) that drives a Darlington connection of Q201 and Q202. A divider string R234 and R235 uses the B+ supply to obtain approximately 11.8 volts for pin-5 of V202 while pin-4 is maintained approximately 0 volts through the emitter-base junctions of Q201 and Q202. Any change in the half-wave rectifier voltage causes a corresponding change in the voltage across the emitter-collector junction of Q201 so that the filament and chopper voltage remain stable. The filament supply for V203 is obtained from an ordinary 6.3 volt AC winding.

h. NULL DETECTOR POWER SUPPLY FOR 803D & 803D/AG SERIAL NUMBERS 645 AND ON AND 803DR & 803DR/AG SERIAL NUMBERS 238 AND ON. The +18 volt and -18 volt supply for the null detector is obtained from a center tapped voltage doubler consisting of R229, CR202, CR203, C213, and C214.

i. EFFECT OF AC COMPONENTS. The only AC voltage component that will reduce the accuracy of the 803D is one that either saturates the chopper amplifier or one that beats with the chopper frequency. Since the voltage required for saturation is greater than that required for beating, the null detector is most sensitive to an AC component with a frequency that is a submultiple or a low multiple of the chopper frequency. However, this is easy to detect because the meter will beat at the difference frequency. The low pass filter at the input of the chopper amplifier will attenuate any AC component. The magnitude of the AC voltage appearing at the output of the filter depends on both its amplitude and frequency before filtering. For all practical purposes, one should never encounter any trouble above a hundred cycles. Below this, the filter may not attenuate the AC component enough. However, this is not as bad as it appears. A 60 cycle AC voltage that is 10% of the input voltage will cause an error of approximately 0.001% which is well within specifications. If AC components that affect accuracy are ever encountered, additional filtering as set forth in paragraph 2-11 will eliminate the problem.

j. GAIN AND ZERO ADJUSTMENTS. For 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803 DR/AG serial numbers 123 to 237, variable resistor R232 in the null detector power supply provides a means of adjusting the output current of the amplifier to zero when there is no input signal. For later instruments, variable resistor R212 provides a means of adjusting the output current of the amplifier to zero when there is no input signal by utilizing the negative bias voltage on the emitter of Q201 and the positive bias voltage on the emitter of Q205. The gain of the amplifier is adjusted by means of R205 (R222 for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial number 123 to 237) in the feedback circuit.

k. RECORDER OUTPUT. The recorder output is picked off divider string R224, R1, and R225 (R225, R1, and R226 for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237). Output level control R1 provides a means of adjusting the output voltage up to a maximum of at least 18 millivolts at full scale deflection. The voltage at the output terminals is proportional to the meter reading.

3-3. 0 TO 500 VOLT REFERENCE SUPPLY

a. GENERAL. When the 803D is used for differential voltage measurements, an internal voltage is nulled or matched against the unknown voltage. An extremely accurate reference voltage is therefore required. This is obtained from the 0 to 500 volt reference supply. The 0 to 500 volt reference supply is composed of a well regulated 500 volt power supply, a range divider and a Kelvin-Varley five decade attenuator. The output of the 500 volt power supply is applied directly to the Kelvin-Varley attenuator for the 500 volt DC range. In the 50, 5, and 0.5 volt DC ranges, the range divider reduces the voltage to 50, 5, and 0.5 volts before it is applied to the Kelvin-Varley attenuator. For any AC range, the range divider always reduces the voltage to 5 volts. The Kelvin-Varley attenuator divides its input voltage (500, 50, 5, or 0.5 volts) into 50,000 equal increments any number of which may be selected by setting the five decades with the voltage readout dials. The output of the Kelvin-Varley Attenuator, therefore, provides an extremely accurate reference voltage.

b. 500 VOLT POWER SUPPLY. The 500 volt power supply uses three diodes (CR101, CR102, and CR103) and a filter network (R109, R110, C101, and C102) to supply unregulated DC voltage to series passing tube V101. The voltage is regulated by comparing a sample of the output voltage tapped off a divider string (R123, R124, R121, and R2) with the voltage from reference tube V102 in differential amplifier V104. The output of V104 is fed to differential amplifier V105 which drives the grid of series passing tube V101. The control action of the differential amplifiers continuously adjusts the voltage drop across the series passing tube so as to keep the sample voltage equal to the voltage of the reference tube. Any difference in voltage, the error, is amplified by V104 and V105 and thus changes the voltage drop across V101 to maintain the output at 500 volts.

c. For proper operation a highly stable and accurate balance of amplification must be maintained between the two halves of differential amplifier V104. The filament supply for V104 must be regulated to maintain this balance. Regulation is provided by a transistor regulator which supplies constant voltage to the filament of V104. The filaments of the AC to DC converter tubes (V501 and V502) are also supplied by this regulator. A filtered full wave rectifier (CR104, CR105, and C103) which is regulated by a three transistor network (Q1, Q2, and Q3) supplies the regulated DC filament voltage. One side of the filaments are connected to the reference supply common (0 volts) while the other side is maintained at approximately 5.9 volts through the emitter-collector junction of Q3. The output of Q1 drives a Darlington connection of Q2 and Q3. Any variation in the unregulated supply causes a corresponding change in the voltage across the emitter-collector junction of Q3 so that the filament voltage of V104, V501, and V502 remains stable.

d. RANGE DIVIDER. In the 500 volt DC range the output of the 500 volt supply is passed directly to the Kelvin-Varley attenuator by range section S2F. In the 50, 5, and 0.5 volt DC positions, range resistors (R320 through R330) selected by section S2E divide the reference voltage to 50, 5, and 0.5 volts before it is switched to the Kelvin-Varley attenuator by section S2F. With the AC - DC switch set to AC, AC - DC switch section S5G (52E for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237) provides connection to the range resistors that divide the reference to 5 volts. This 5 volts is then passed to the Kelvin-Varley attenuator by section S5F (52D for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803 DR/AG serial numbers 123 to 237). The voltage applied to the Kelvin-Varley attenuator is always 5 volts for AC because the AC to DC converter always supplies up to a maximum of 5 volts to the vtvm attenuator.

e. KELVIN-VARLEY ATTENUATOR. The five Kelvin-Varley decade resistor strings R401 through R449 and associated voltage dials A through E (S6 through S10) provide a means of making the four precision voltages (500, 50, 5, and 0.5) adjustable. Note that each string, with the exception of the first, parallels two resistors of the preceding string. Between the two wipers of S6 (voltage dial A) then, there is a total resistance of 40K (80K paralleled by 80K). With the range switch in the 500 volt position, a total voltage of 100 volts DC will appear across these two wipers. Also, there will be 10, 1, and 0.1 volts DC across the wipers of S7, S8, and S9, respectively. Voltage dial E (S10) picks increments of 0.01 volt DC from the last decade. These voltages are reduced by a factor of 10 for each lower voltage range. All resistors of each decade are matched and the three most critical decades (40K, 8K, and 1.6K) are matched for each instrument, providing an overall accuracy of 0.005% absolute. With the null switch in any null range, the output of the Kelvin-Varley attenuator is connected in series with the vtvm attenuator thus providing the accurate 0 to 500 volts reference supply required.

f. ADJUSTMENTS. Variable resistor R121 is used during calibration to set the 500 volt supply to 500 volts with calibrate control R2 set at its center of rotation. This allows the reference supply to be adjusted to 500 volts by means of the calibrate control at any time deemed necessary. With the operate-calibrate switch held at calibrate, a fixed percentage of the 500 volt supply is compared to the precise potential of an internal standard cell or Zener reference diode (in the /AG models). Any difference in potential is fed to the null detector to give an indication on the meter so that the 500 volt supply can be set with the calibrate control. The fixed percentage of the reference supply is set accurately during calibration by means of R318. The 50, 5, and 0.5 volt range resistor networks are set accurately during calibration by means of R323, R326, and R329.

3-4 AC TO DC CONVERTER

a. GENERAL. The AC to DC converter is composed of an attenuator, an operational amplifier, and a rectifier-filter circuit. A diode in the rectifier-filter circuit is used to convert the unknown AC into pulsating DC, which is then filtered to obtain a DC voltage that is proportional to the average value of the AC input voltage. The output however, is calibrated to indicate the rms value of a pure sine wave. An operational amplifier containing three resistance-capacitance coupled amplifier stages with high negative feedback is used to make the rectification characteristics of the diodes linear and stable. The amplifier achieves a midband loop gain of approximately 70 db with a virtually flat frequency response from 20 cps to 10 kc. The high negative feedback makes the amplifier practically noise free and relatively insensitive to gain changes in individual tubes due to aging and tube replacement. At the output to the amplifier, full wave rectification is used to return negative feedback to the grid of the first amplifier tube. The attenuator is used to reduce the AC input voltage by a factor of 10 or 100, as required to restrict the operational amplifier input to 5 volts maximum for full scale inputs of 50 and 500 volts respectively.

b. OPERATION. All AC measurements are made by first converting the AC input voltage to a DC voltage. The converter provides a DC output of 5 volts when full range voltage is applied to the 803D in each AC range. In the 5 volt AC position, range switch sections S2G and S2H connect the input binding posts directly to the converter input. In this case, the converter feedback is of such a value that the DC output voltage is equal to the rms value of the converter input AC voltage. In the 500

and 50 volt AC positions, an input attenuator reduces the unknown AC by a factor of 100 and 10 respectively. The operation of the converter is then the same as for the 5 volt position. In the 0.5 volt AC position, range switch section S2I and section S2J provide connection to feedback resistors that allow the converter to produce an output that is equal to ten times the AC input. Thus, an output of 5 volts DC is provided for full scale input on any AC range.

c. NULL INDICATIONS. When making AC differential measurements, the null range used times the applicable AC null multiplier must be used to represent full scale on the 803D meter. This is due to the way that the converter is constructed. For the 500 volt AC range, the converter produces a DC output voltage equal to 1/100 of the AC input voltage. Thus, the AC null multiplier for the 500 volt range position is X100. For example, when the range switch is set to 500 and the null switch is set to 0.01, full scale meter deflection represents a one volt (100 x 0.01) difference between the unknown voltage and the amount set on the voltage readout dials. By similar reasoning, the multipliers for the 50, 5, and 0.5 volt AC ranges are X10, X1, and X0.1, respectively.

d. ADJUSTMENTS. For 0.5 volt converter gain, R536 and R545 at the output of the converter are adjusted. The gain of the amplifier for the 5 volt range is adjusted by means of R542 and R541 in the feedback network. The high frequency response of the amplifier input is adjusted by means of C504 while C519 adjusts the high frequency response of the 0.5 volt feedback circuit. The attenuation of the 500 volt attenuator is adjusted with R535 and R544 and the attenuator high frequency response is adjusted with C501. The attenuation of the 50 volt attenuator is adjusted with R503 and R533 and the attenuator high frequency response is adjusted with C523.

3-5. AC - DC POLARITY SWITCH

a. The AC - DC polarity switch is provided for selecting either the AC or DC mode of operation. When the AC - DC polarity switch is set to AC, the AC to DC converter is switched into the circuit by sections S5K, S5L, S5M, and S5N. Also, sections S5F and S5G (S5D and S5E for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237) are used to switch 5 volts DC to the Kelvin-Varley divider. When in the AC vtvm mode, S5H (S5F for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237) is used to provide proper attenuation for the DC attenuator.

b. The AC - DC polarity switch may be set to either of two positions, positive or negative, for the DC mode of operation. As seen in figure 3-2, the AC - DC polarity switch does not reverse the input posts when going from the positive to negative DC position. It reverses the meter and the internal reference supply. If the instrument did not contain positive and negative DC positions, the grounded side of any unknown voltage that is negative with respect to ground would have to be connected to the upper input binding post. This would ground the upper post and effectively place C1 (a 0.47 uf capacitor) across the input terminals. Even if C1 was disconnected, there would still be considerable capacitance across the input due to transformer winding capacitance and stray wiring capacitance. With this capacitance across the circuit being measured several problems could arise. The polarity switch provides equal convenience in measuring positive or negative voltages without the occurrence of these problems.

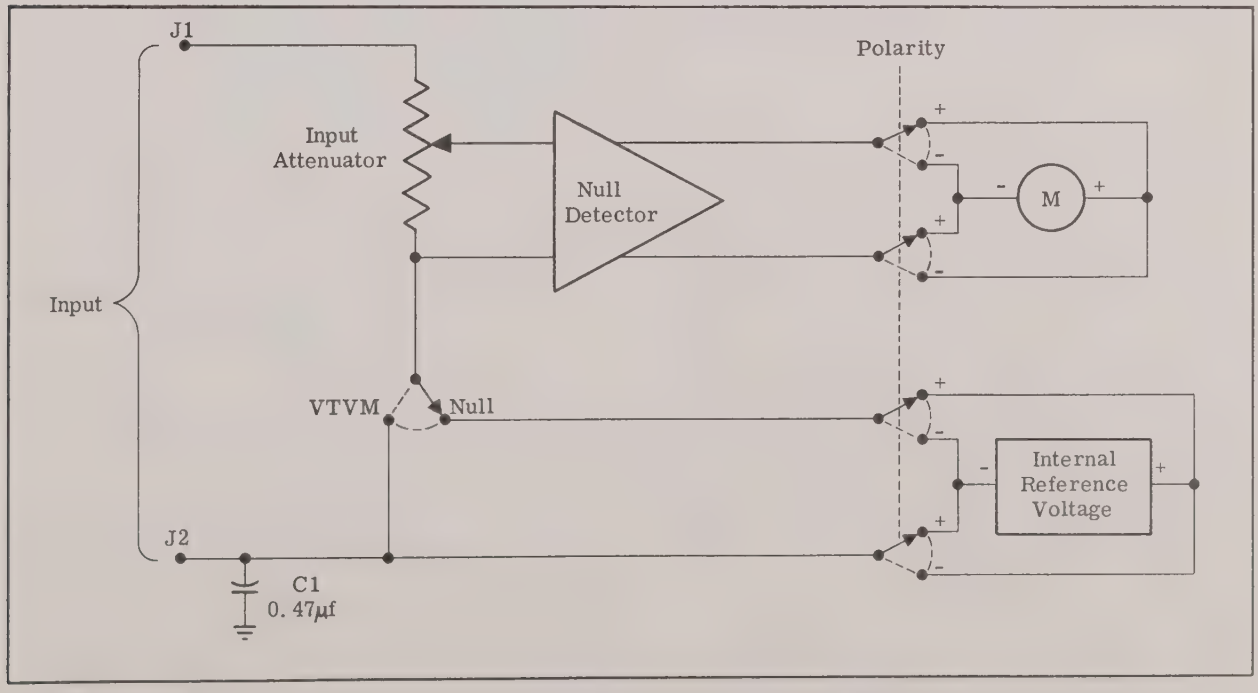

Figure 3-2. FUNCTION OF POLARITY SWITCH

SECTION IV

MAINTENANCE

4-1. GENERAL

The 803D AC/DC Differential Voltmeter seldom requires any maintenance. Without extreme abuse, all that should be required is occasional cleaning, tube replacement and calibration. Periodic maintenance consists only of preventing any leakage as discussed in paragraph 4-2. A discussion of troubleshooting along with a troubleshooting chart, component location diagrams, and a tube voltage chart are provided in paragraph 4-3. Paragraph 4-4 delineates the equipment and procedures necessary to calibrate the instrument.

4-2. PERIODIC MAINTENANCE

a. The accuracy of the 803D is adversely affected by excessive electrical leakage from the input of the null detector to either ground or the 500 volt reference supply. Special care has been taken to prevent leakage across certain critical switch wafers and areas of some printed circuit boards due to moisture from condensation. The printed circuit boards have been coated with Humi-Seal 1B12. The RANGE, NULL, OPERATE-CALIBRATE, and polarity switches have been dipped in Dow Corning silicone oil. Accumulations of dust and foreign matter will cause internal leakage, and should be removed as often as necessary, depending on environmental operating conditions.

b. To check for excessive electrical leakage, proceed as follows:

(1) Perform preliminary operation procedure as stated in paragraph 2-3.

(2) Set switches on 803D as follows:

RANGE	500
NULL	0.1
voltage readout dials	490.00

(3) Remove test leads from input posts.

(4) Excessive leakage is indicated if the meter deflects more than one-tenth of full scale.

c. To prevent excessive electrical leakage, proceed as follows:

(1) Blow the instrument out with low-pressure, clean, dry air to remove most accumulations of dust and foreign matter. Pay particular attention to the binding posts, binding post wiring, critical switches (NULL, RANGE, OPERATE-CALIBRATE, and polarity switches), and on 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237 the two glass epoxy strips which insulate the null detector chassis from the main chassis.

(2) Clean the glass epoxy strips, binding posts, insulators, and front panel with a rag saturated in anhydrous denatured ethyl alcohol.

(3) When necessary, wash all exposed dielectric surfaces of the NULL, RANGE, OPERATE-CALIBRATE, and polarity switches with denatured alcohol using a small, stiff-bristled brush.

CAUTION

Do not use Metriclene, acetone, lacquer thinner, or any other methyl ethyl ketones, since they will react with the Lexan rotor on the CTS plastic switches.

(4) After washing, recoat the exposed switch insulating material with a solution of Dow Corning 200 having a viscosity between 5 and 20 centistokes. This prevents leakage due to moisture on these surfaces.

4-3. CORRECTIVE MAINTENANCE

a. TROUBLESHOOTING. The purpose of troubleshooting is to quickly and accurately determine the cause of any abnormal condition. To assist in localizing most troubles which might occur, the causes and remedies for a number of symptoms are listed in the troubleshooting chart (figure 4-1). Since failure of the 803D is usually due to tube failure, it is recommended that tube substitution be tried before any other tests are made. However, the 803D is conservatively designed and should require very infrequent tube replacement. At certain times, a check of the operating level voltages of the tubes (figure 4-2) and transistors (figure 4-3) is also useful. As an aid to troubleshooting, all components may be located by referring to the figures shown in Section V. An understanding of the theory of operation (Section III) and frequent reference to the schematic diagram will be of great value in troubleshooting.

WARNING

Use extreme care when working inside the instrument while it is on. The null detector assembly and all components thereon will be at a voltage close to that indicated by the voltage readout dials.

SYMPTOM	PROBABLE CAUSE	REMEDY
Drift of the 500 volt DC reference supply evidenced by the continual need for resetting with the CALIBRATE control.	V102, V104, or V105 defective.	Check V102, V104, and V105 by replacement.
	One of the sampling string resistors (R123, R124, R121) is changing value rapidly as the instrument warms up.	Locate faulty resistor by heating slightly with a soldering iron held near the resistor while observing the 500 volt DC calibration.
	Drifting standard cell emf possibly caused by previous shorting or inverting of the cell. (803D and 803DR)	Allow time for the standard cell to stabilize. Several hours should be sufficient.
Cannot calibrate 500 volt DC reference supply.	Excessive aging of V102.	Check V102 by replacement.
Meter cannot be brought to zero with CALIBRATE control.	Out of calibration.	Recalibrate per paragraph 4-4b.
	One or more resistors in 500 volt DC sampling string has shifted in value.	Recalibrate per paragraph 4-4b and observe stability for 48 hours. If 500 volt DC reference supply remains stable, replacement of resistor is unnecessary.
	Standard cell emf has shifted. (803D and 803DR)	Recalibrate instrument and observe stability of reference supply. Replacement of the standard cell may be necessary.
Measurements are out of tolerance on one range other than the 500 volt range.	A reference supply output range resistor on the range resistor printed circuit board is out of tolerance.	If the trouble occurs in the 50 volt range, R324 has shifted; in the 5 volt range, R325 or R327 has shifted; in the 0.5 volt range, R328 or R330 has shifted. It may be possible to correct by recalibration. If not, replace faulty resistor.
Measurements are out of tolerance on all ranges other than the 500 volt range.	R320 or R321 has shifted in value.	It may be possible to correct all range voltages by recalibration. If not, replace faulty resistor.
Measurements are out of tolerance on any range when the Kelvin-Varley divider is dialed to any setting other than 499910.	One of the Kelvin-Varley divider resistors is out of tolerance.	Measure the voltage drop across each Kelvin-Varley resistor with another John Fluke Differential Voltmeter. Begin by setting RANGE switch to 500 volts and the voltage readout dials to 499.910. Reference to the schematic diagram will show that there should be 100, 10, 1, 0.1, and 0.01 volts respectively across each resistor of the A, B, C, D, and E decades, except for the two resistors of each decade that are paralleled by the following decade. Across these two resistors, there should be 50, 5, 0.5, and 0.05 volts, respectively. Voltage measurements should be within 0.01% of each other. Remember that if one resistor in a decade has increased or decreased appreciably, the voltage drop across all other resistors in the decade will be slightly affected also.
Instrument is out of specifications on all range.	Resistors R306, R307, R308, R309, or R310 out of tolerance.	Check and replace faulty resistor.

Figure 4-1. TROUBLESHOOTING (sheet 1 of 2)

SYMPTOM	PROBABLE CAUSE	REMEDY
Meter rattle, drift, or error is observed on all null ranges.	V202, V203, or V204 faulty Chopper G1 faulty (803D, 803D/AG 123 to 644 803DR, 803DR/AG 123 to 237) Moisture or dirt on printed circuit boards or switches.	Check V202, V203, and V204 by replacement. Replace chopper. Clean instrument.
NOTE: Assuming all DC measurements are normal, the following symptoms are common to AC measurements only.		
Measurements are out of tolerance on 500 volt AC range only.	Out of calibration. One or more resistors in 500 volt AC attenuator has shifted in value.	Recalibrate per paragraph 4-4c. Recalibrate per paragraph 4-4c. Recheck calibration after 48 hours and if attenuator has remained stable, replacement of resistor is unnecessary. If attenuator does not remain stable, or calibration is not possible, replace faulty resistor.
Measurements are out of tolerance on 50 volt AC range only.	Out of calibration. One or more resistors in 50 volt AC attenuator has shifted in value.	Recalibrate per paragraph 4-4c. Recalibrate per paragraph 4-4c. Recheck after 48 hours and if attenuator has remained stable, replacement of resistor is unnecessary. If attenuator does not remain stable or if calibration is not possible, replace faulty resistor.
Measurements out of tolerance on all AC ranges.	Out of calibration. V501 or V502 faulty.	Recalibrate per paragraph 4-4c. Check V501 and V502 by replacement.
Measurements out of tolerance at a specific frequency.	Out of calibration. Faulty frequency compensation capacitor.	Recalibrate per paragraph 4-4c. Locate faulty capacitor and replace. If trouble occurs on all ranges, check C504. If trouble occurs on 500 volt range only, check C501, C502, and C521. If trouble occurs on 50 volt range only, check C523 and C524. If trouble occurs on 500, 50, and 5 volt range, check C520. If trouble occurs on 0.5 volt range check C519.

Figure 4-1. TROUBLESHOOTING (sheet 2 of 2)

b. TUBE REPLACEMENT. Many differential amplifier circuits are critical with respect to the balance between halves of differential amplifier tubes. This is especially true of the first stage of amplification. However, the 803D is designed with the ability to use any 12AX7 for V104 and V105 that meets standard EIA (Electronics Industries Association) characteristics. Some output voltage drift of the 500 volt reference supply may be noted for the first few hours of operation. This drift will, in most cases, decrease to a small value after the tube has aged a bit. Occasionally a tube with a contaminated grid or extremely poor balance between halves will be found. This tube should be discarded. When replacing reference tube V102, the new tube should be aged at least 150 hours to realize the high order of stability inherent in the 803D. A tube that has been aged may be obtained by ordering an 0G3-2 from Fluke.

c. Replacement of tubes will not normally necessitate complete recalibration of the 803D. If V202 or V203 is replaced, 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237, calibrate the null detector as set forth in paragraphs 4-4b (1) and 4-4b (2). Replacement of V101, V102, V104, or V105 will necessitate calibration of the reference supply per paragraphs 4-4b (1) and 4-4b (3). If V501 or V502 is replaced, calibrate the AC to DC converter as in paragraph 4-4c.

d. COMPONENT REPLACEMENT. Should it ever become necessary to replace a component on a printed circuit board (or on the null detector chassis 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803 DR/AG serial numbers 123 to 237), proceed as follows:

(1) Clean soldered area around component with methyl ethyl ketone.

(2) Remove part and install new component.
(3) Remove flux with du Pont Freon PC.
(4) Allow to dry for 10 minutes. When it is cool or humid, it may be necessary to place area under a lamp to ensure thorough drying.
(5) Coat any uncoated areas around R301 through R310 on the range resistor board and 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237 around the input to the null detector chassis (tube V202, 5751, and chopper) with Humi-Seal 1B12 (manufactured by Columbia Technical Corp. of Woodside, N. Y.).
(6) If a component at the input to the transistorized null detector (803D & 803D/AG serial numbers 645 and on and 803DR & 803DR/AG serial numbers 238 and on) is replaced, make sure that all leads at the input wire - R201 junction, the R201 - R202 - DS201 - C201 junction, and the R202 - C202 - V201 junction are in physical contact with each other. Otherwise, thermal voltages may result that will degrade the performance of the instrument.

e. KELVIN-VARLEY RESISTOR REPLACEMENT. All the resistors of the first three decades (R401 to R406, R407 to R417, and R418 to R428) are matched and these three decades are matched for each instrument. If it becomes necessary to replace a Kelvin-Varley resistor, the instrument model and serial number as marked on the name plate and all information stamped on the resistor must be sent to Fluke along with the purchase order for the particular resistor needed. This ensures that a resistor compatible with the matched resistor group within the instrument is used. The Kelvin-Varley resistors are very stable and precise; resistance is clearly defined; therefore, they must be handled with care. This is especially true of the varnished-dipped-card resistors.

CAUTION

Pick up card resistors between ends of card. Never touch the wire on the cards as damage to the resistor could possibly result.

f. STANDARD CELL PROBLEMS. The standard cell of the 803D and 803DR deserves special consideration if it is suspected of being faulty:
(1) The standard cell used is a miniature unsaturated cell which has excellent long term stability and negligible temperature-voltage hysteresis. (Temperature-voltage hysteresis is the erratic behavior of the voltage while the cell is coming to equilibrium following a change in temperature). Under normal conditions this cell should last from 8 to 15 years. In rare instances, failure has

Symbol & Type	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V101, 6BQ5	No Conn.	495	500 (±3%)	Heater voltage 6.3 volts ac		No Conn.	680 to 730	No Conn.	680 to 730
V102, OG3	85 (±3%)	0	Int. Conn.	0	85 (±3%)	Int. Conn.	0	No Pin	No Pin
V104, 12AX7	217	84	86	Heater voltage 5.9 volts dc		217	84	86	See Pin 4 & 5
V105, 12AX7	495	217	220	Heater voltage 6.3 volts ac		500	217	220	
V202, 5751 (803D, 803D/AG 123 to 644 803DR, 803DR/AG 123 to 237)	60	-	0	Heater voltage 12 volts dc		100	-	1.5	No Conn.
V203, 6AW8 (803D, 803D/AG 123 to 644 803DR, 803DR/AG 123 to 237)	47	45	140	Heater voltage 6.3 volts ac		0.7	-	25	50
V204, OA2 (803D, 803D/AG 123 to 644 803DR, 803DR/AG 123 to 237)	150	0	Int Conn.	0	150	Int. Conn.	0	No Pin	No Pin
V501, 6EJ7	1.3	-	1.3	Heater voltage 5.9 volts dc		0	150	93	1.3
V502, 6AW8	28	-	200			1.8	-	100	150 (±50%)

This chart is to be used under the following conditions: (a) RANGE switch set to 500; (b) NULL switch set to VTVM: (c) all voltage readout dials set to zero; (d) polarity switch set to +; (e) line voltage at 115/230 volts, 50 - 440 cycles; (f) all measurements made with vtvm from negative binding post to specified terminal; and (g) all voltages may vary by 20% unless otherwise indicated.

Figure 4-2. TUBE VOLTAGE CHART

TRANSISTOR	Q1	Q2	Q3	Q201	Q202	Q203	Q204	Q205	Q206	Q207
E	3.0	9.3	9.7	-0.45	-0.45	-0.45	0	0.58	-0.54	17.2
B	3.5	9.2	9.3	0	0	0	0.51	0.98	0	16.5
C	9.2	5.8	5.8	0	0	9.2	0.98	7.5	16.5	0

This chart is to be used under the following conditions: (a) voltages for transistors Q201 to Q207 apply to 803D & 803D/AG serial numbers 645 and on and 803DR & 803DR/AG serial numbers 238 and on only; (b) RANGE switch set to 500; (c) NULL switch set to VTVM; (d) all voltage readout dials set to zero; (e) polarity switch set to +; (f) line voltage at 115/230 volts, 50-440 cycles; (g) all measurements made with vtvm from negative binding post to specified terminal; and (h) all voltages may vary by 20% unless otherwise indicated.

Figure 4-3. TRANSISTOR VOLTAGE CHART

occurred in less than 2 years. End of life is usually marked by an increase in temperature-voltage hysteresis effect. That is, reading errors in excess of 0.01% will result when the same voltage is read with the 803D hot and cold. The emf of different cells may vary as much as 0.05% and each instrument is calibrated to its own particular standard cell. Thus, when the standard cell is replaced, the 803D reference supply must be recalibrated as in paragraph 4-4c.

(2) Failure of the standard cell may occur if subjected to below freezing temperature. The electrolyte will start to freeze at about 5°F and operation below 32°F is definitely not recommended. The life of the cell will also be greater if the 803D is not operated at elevated temperature. The 8 to 15 year figure holds for operation of the instrument at normal room temperature, 72(±3)°F.

(3) The emf of the standard cell will change if the cell has been inverted, or if the cell has been inadvertently short-circuited. If the emf has changed, the 803D will naturally be out of calibration on all ranges. In either case, the cell will return to its original emf. If the cell were inverted or shorted for only a few seconds, the 803D should be able to measure voltages within specifications after several hours recovery time.

g. DECIMAL LAMP REPLACEMENT. The decimal lamps are normal 6.3 volt lamps. To prolong their life these lamps are operated from a 5 volt transformer winding. However, these lamps do occasionally fail. To replace, proceed as follows:

(1) On cabinet models, remove screws at back of cabinet and slide instrument out of case. If only the upper most decimal lamp needs to be replaced, proceed to step (6).

(2) Remove four screws that hold front panel assembly to chassis.

(3) Being careful to avoid wiring damage, gently lift front panel assembly from instrument and set face down in front of instrument.

(4) Remove screws holding range resistor board to front panel assembly.

(5) Push printed circuit board aside enough to allow access to light holders.

(6) Remove light holder from bracket by applying pressure to each side of holder.

(7) Remove cardboard light shield and replace lamp.

(8) On rack models, remove screws holding cover to instrument and set cover aside.

(9) Remove light holder from bracket by applying pressure to each side of holder.

(10) Remove cardboard light shield and replace lamp.

h. CHOPPER DRIVE TRANSISTOR REPLACEMENT FOR 803D & 803D/AG SERIAL NUMBERS 123 TO 644 AND 803DR & 803DR/AG SERIAL NUMBERS 123 TO 237. If it ever becomes necessary to replace one or more of the chopper drive unit transistors (Q701 through Q704), the frequency and symmetry of the output must be reset. Proceed as follows:

(1) After replacing transistors, connect an oscilloscope between the emitter of Q703 and lower input post (middle post) to observe the output waveform

(2) Adjust R704 until output is within ±3% of symmetry.

(3) Adjust R705 for a frequency of 83 cycles ±2%.

i. CHOPPER DRIVE FREQUENCY ADJUSTMENT FOR 803D & 803D/AG SERIAL NUMBERS 645 & ON AND 803DR & 803DR/AG SERIAL NUMBERS 238 & ON. The chopper drive frequency needs to be adjusted only a few times during the life of the instrument. As neon lamps DS202 and DS203 age, their voltage will change slightly and cause the frequency to shift. This is especially true during the early life of the instrument. However, the chopper drive frequency needs to be adjusted only if a beating effect appears on the meter due to line frequency interference. Proceed as follows:

(1) Set controls on voltmeter as follows:

POLARITY	+ (positive)
NULL	.001
all voltage readout dials	0 (zero)

(2) Connect an oscillator to input of voltmeter through a capacitor of about 0.1 microfarads.

(3) Set oscillator for an output of 84 cycles.
(4) Adjust R226 until meter begins to beat and then adjust for zero beat.

4-4. CALIBRATION

a. GENERAL. The calibration procedure is divided into two main parts: DC Differential Voltmeter Calibration (paragraph 4-4b) and AC to DC Converter Calibration (paragraph 4-4c). The 803D may be calibrated as often as deemed necessary. However, it is recommended that DC differential voltmeter calibration be done every 3 months. The AC to DC converter calibration should be done every month. For special applications where extreme accuracy is required, it may be desired to calibrate the instrument more often. Calibration should be accomplished in a draft-free area with an ambient temperature of 72(±3)°F for maximum accuracy under laboratory conditions. The recommended equipment and the specifications required for calibration are shown in figure 4-4. All controls on the cabinet model may be located with the aid of figure 4-5. The instrument must be calibrated in its cabinet. The ventilation holes on the cabinet model provide an easy means of reaching R121, R205 (or R222), and R212 (or R232). An insulated screwdriver must be used when adjusting these controls to prevent shorting the control to chassis ground. To reach the calibration controls at the front of cabinet models, the instrument must be slid partly out of its cabinet. On rack models, all controls may be easily reached through labelled access holes.

b. DC DIFFERENTIAL VOLTMETER CALIBRATION. For convenience, the DC differential voltmeter calibration is divided into four parts: Preliminary Calibration, Null Detector Calibration, Reference Supply Calibration, and Range Divider Calibration. Normally, all four parts are performed in the sequence given here. However, the calibration procedure is written so that any part may be calibrated by performing the procedure for just that part.

(1) Preliminary Calibration Procedure.
(a) Set 803D meter to zero with mechanical adjustment screw on front of meter case.
(b) Set switches on 803D as follows:

RANGE	500
NULL	VTVM
AC - DC polarity	+ (positive)
all voltage readout dials	0 (zero)

(c) Set power switch to ON and allow 803D to warm to equilibrium temperature (about 1 hour) inside its case. Meanwhile, proceed with step (d).
(d) Set up necessary equipment to provide DC voltages of 500, 50, 5, and 0.5 volts DC with an accuracy of 0.005%. Proceed as follows: turn on all test equipment and allow it to warm to equilibrium temperature (about 1/2 hour); set proper standard cell voltage on divider; apply 500 volts DC into divider from power supply; set divider to 500 and zero galvanometer by varying output of power supply; voltages of 500, 50, 5, and 0.5 volts DC are made available at output posts by merely changing position of voltage selector switch on voltage divider.

RECOMMENDED EQUIPMENT	SPECIFICATIONS REQUIRED
DC CALIBRATION: Fluke 301C or 301E Power Supply Saturated standard cell bank with an accuracy of ±0.0025% Voltage reference divider having division ratios of 1, 10, 100, and 1000 with an accuracy of ±0.0025% Galvanometer suitable for use with above voltage reference divider	The equipment used must provide 500, 50, 5, and 0.5 volts with accuracy of 0.005%.
AC CALIBRATION: Fluke Model 821A Differential Voltmeter Fluke 301C or 301E Power Supply Krohm-Hite LDS-1500 Oscillator Fluke 540A Transfer Standard	The equipment used must provide 500, 50, 5, and 0.5 volts AC at 400 cycles, 10 kilocycles, and 20 kilocycles with an accuracy of at least 0.03% and with less than 0.1% total harmonic distortion.

Figure 4-4. CALIBRATION EQUIPMENT

(e) Connect chassis ground binding post to line ground.
(2) Null Detector Calibration.
(a) Perform preliminary calibration procedure as stated in paragraph 4-4b (1).
(b) Adjust null detector ZERO ADJ control R212 (R232 for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237) until meter indicates zero.
(c) Apply 500 volts DC (±0.005%) to voltmeter.
(d) Adjust VTVM GAIN ADJ control R205 (R222 for 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237) for full scale deflection.
(3) 500 VDC Reference Supply Calibration.
(a) Perform preliminary calibration procedure as stated in paragraph 4-4b (1).
(b) Center CALIBRATE control at its center of rotation.
(c) Set NULL switch to 10 and voltage readout dials to 499.910.
(d) Apply 500 volts DC (±0.005%) to voltmeter.
(e) Adjust 500V ADJ control R121 for a null.
(f) Set NULL switch to 0.1 volt.
(g) Null meter by adjusting CALIBRATE control.
(h) Advance OPERATE-CALIBRATE switch against spring tension to CALIBRATE and null meter by adjusting REF CAL ADJ control R318.

(4) Range Divider Calibration.

(a) Perform preliminary calibration procedure as stated in paragraph 4-4b (1).

(b) Set switches on 803D as follows:

RANGE	50
NULL	0.01
voltage readout dials	49.9910

(c) Apply 50 volts DC (±0.005%) to voltmeter.

(d) Null 803D meter by adjusting 50V DC ADJ control R323.

(e) Set RANGE switch to 5 volts.

(f) Apply 5 volts DC (±0.005%) to voltmeter.

(g) Null 803D meter by adjusting 5V DC ADJ control R326.

(h) Set RANGE switch to 0.5 volts.

(i) Apply 0.5 volts DC (±0.005%) to voltmeter.

(j) Null 803D meter by adjusting 0.5V DC ADJ control R329.

This completes the DC differential voltmeter calibration.

c. AC TO DC CONVERTER CALIBRATION. The DC Differential Voltmeter section of the 803D must be within specifications before the AC to DC Converter can be accurately calibrated. The AC to DC Converter must be calibrated in the following order.

(1) Preliminary Calibration Procedure.

(a) Zero instrument as stated in paragraph 2-2.

(b) Check for excessive converter output noise as follows: set RANGE switch to 0.5, NULL switch to 0.01, AC - DC polarity switch to AC, all voltage readout dials to 0 (zero) and power switch to ON; short input terminals of 803D; if the meter needle is not within 150 microvolts (7-1/2 small divisions) of null, converter noise is excessive and the trouble must be corrected before proceeding with calibration; if trouble occurs it is usually the result of the input tube (V501), the filament supply, or the 500 volt supply being noisy; remove short from input terminals.

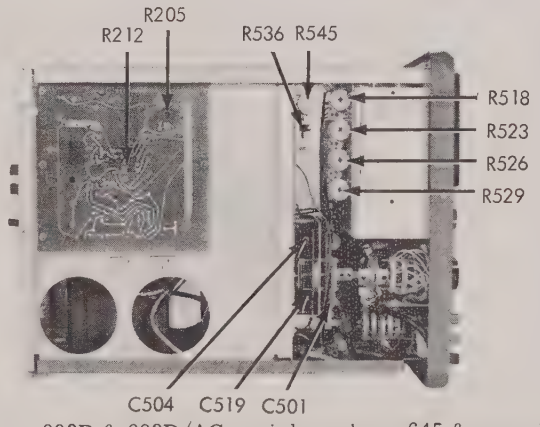

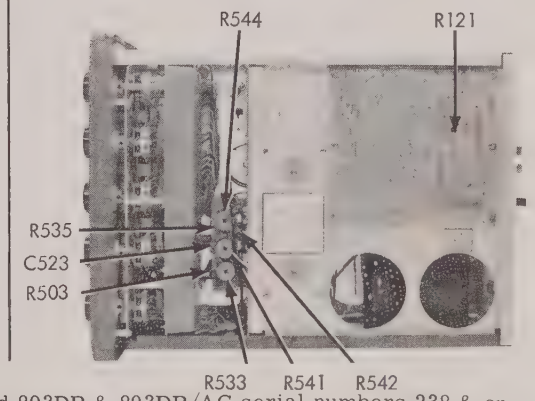

803D & 803D/AG serial numbers 645 & on and 803DR & 803DR/AG serial numbers 238 & on

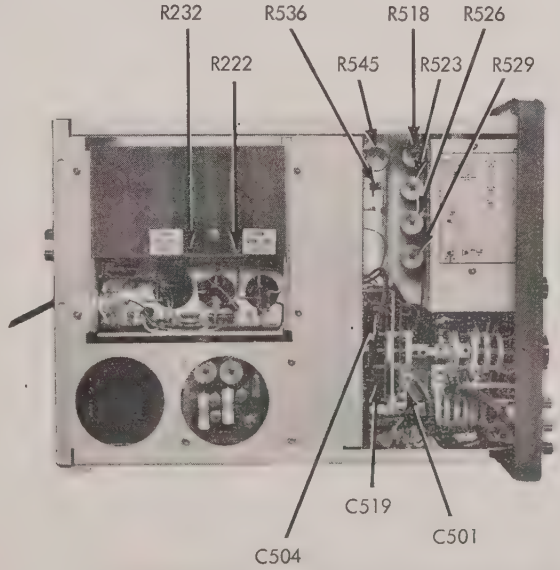

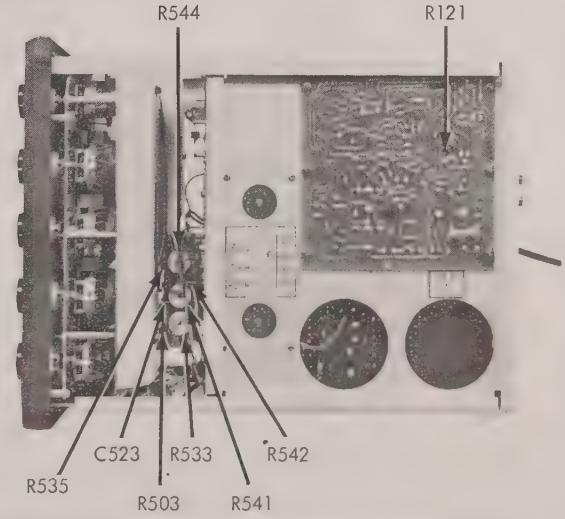

803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237

Figure 4-5. ADJUSTMENT LOCATIONS

(c) Set switches on 803D as follows:

RANGE	500
NULL	0.01
AC - DC polarity	AC
voltage readout dials	499.910

(d) Allow 803D to warm to equilibrium temperature inside its case (about 1 hour). Meanwhile, proceed with step (e).

(e) Set up the necessary equipment to provide 500, 50, 5, and 0.5 volts AC with an accuracy of at least ±0.03% at frequencies of 400 cycles, 10 kilocycles, and 20 kilocycles with less than 0.1% total harmonic distortion. Proceed as follows: connect equipment as shown in figure 4-6; turn on all test equipment and allow it to warmup to equilibrium temperature (about 1/2 hour); adjust DC power supply voltage until differential voltmeter indicates rms value of AC voltage required; apply output of DC supply to 540A and null galvanometer by adjusting internal reference supply voltage; apply output of AC oscillator to 540A and null galvanometer by adjusting AC oscillator voltage; the output of the oscillator now equals the required voltage.

(2) 0.5 VAC Converter Gain Adjustment.
(a) Set RANGE switch to 0.5 volt position.
(b) Apply 0.5 volt AC at 400 cycles to voltmeter.
(c) Adjust 0.5 VAC GAIN COARSE ADJ control R536 and 0.5 VAC GAIN FINE ADJ control R545 until meter needle is within ±30 microvolts (1-1/2 small divisions) of null. Use R545 for final touch up trying to keep control in center third of its mechanical range. Note position of meter needle.

(3) 5 VAC Converter Gain Adjustment.
(a) Set RANGE switch to 5 volt position.
(b) Apply 5 volts AC at 400 cycles to voltmeter.
(c) Adjust 5 VAC GAIN COARSE ADJ control R542 and 5 VAC GAIN FINE ADJ control R541 until meter needle is within ±300 microvolts (1-1/2 small divisions) of null. Use R541 for final touch up trying to keep control in center third of its mechanical range. Note position of meter needle.

(4) 5 VAC High Frequency Adjustment.
(a) Apply 5 volts AC at 10 kilocycles to voltmeter.
(b) Adjust 5 VAC HF TRIM control C504 until meter needle is within ±300 microvolts (1-1/2 small divisions) of needle position noted in (3).

(5) 0.5 VAC High Frequency Adjustment.
(a) Set Range switch to 0.5 volt position.
(b) Apply 0.5 volt AC at 20 kilocycles to voltmeter.
(c) Adjust 0.5 VAC HF TRIM control C519 until meter needle is within ±30 microvolts (1-1/2 small divisions) of needle position noted in (2).

(6) 0.5 VAC Converter Gain Check.
(a) Apply 0.5 volt AC at 400 cycles to voltmeter.
(b) If meter needle is not within ±50 microvolts

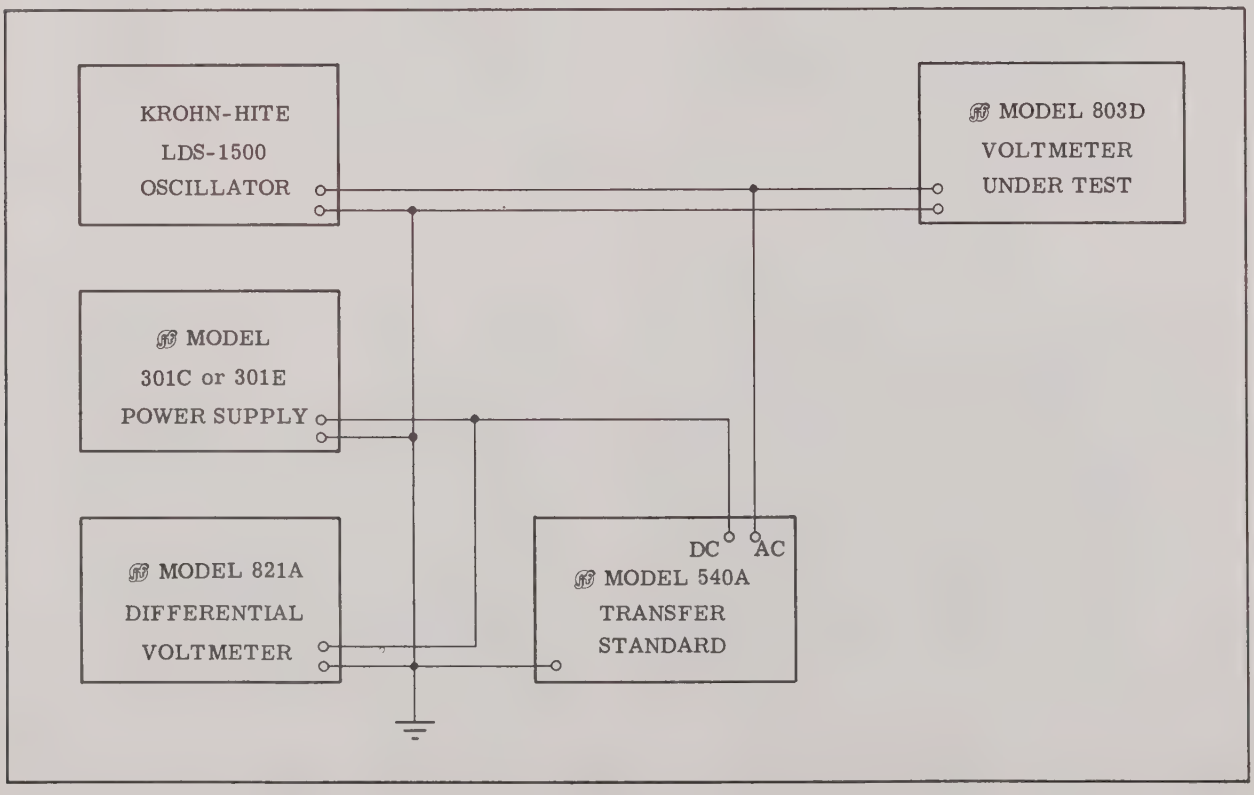

Figure 4-6. AC TO DC CONVERTER CALIBRATION SET-UP

(2-1/2 small divisions) of null, adjust 0. 5 VAC GAIN FINE ADJ control R545 and then repeat (3), (4), and (5) before continuing with (7).

(7) 5 VAC Converter Gain Check.
(a) Set RANGE switch to 5 volt position.
(b) Apply 5 volts AC at 400 cycles to voltmeter.
(c) If meter needle is not within ±500 microvolts (2-1/2 small divisions) of null, adjust 5 VAC GAIN FINE ADJ control R541 and repeat (4) and (5) before continuing with (8).

(8) 500 VAC Attenuator Adjustment.
(a) Set RANGE switch to 500 volt position.
(b) Apply 500 volts AC at 400 cycles to voltmeter.
(c) Adjust 500 VAC ATTEN COARSE ADJ control R535 and 500 VAC ATTEN FINE ADJ control R544 until meter needle is within ±30 millivolts (1-1/2 small divisions) of null. Use R544 for final touch up trying to keep control in center third of its mechanical range. Note position of meter needle.

(9) 500 VAC High Frequency Adjustment.
(a) Apply 500 volts AC at 10 kilocycles to voltmeter.
(b) Adjust 500 VAC HF TRIM control C501 until meter needle is within ±30 millivolts (1-1/2 small divisions) of needle position noted in (8).

(10) 500 VAC Attenuator Check.
(a) Apply 500 volts AC at 400 cycles to voltmeter.
(b) If meter needle is not within ±50 millivolts (2-1/2 small divisions) of null, adjust 500 VAC ATTEN FINE ADJ control R544 and repeat (9) before continuing with (11).

(11) 50 VAC Attenuator Adjustment.
(a) Set RANGE switch to 50 volt position.
(b) Apply 50 volts AC at 400 cycles to voltmeter.
(c) Adjust 50 VAC ATTEN COARSE ADJ control R503 and 50 VAC ATTEN FINE ADJ control R533 until meter needle is within ±3 millivolts (1-1/2 small divisions) of null. Use R533 for final touch up trying to keep control in center third of its mechanical range. Note position of meter needle.

(12) 50 VAC High Frequency Adjustment.
(a) Apply 50 volts AC at 10 kilocycles to voltmeter.
(b) Adjust 50 VAC HF TRIM control C523 until meter needle is within ±3 millivolts (1-1/2 small divisions) of needle position noted in (11).

(13) 50 VAC Attenuator Check.
(a) Apply 50 volts AC at 400 cycles to voltmeter.
(b) If meter needle is not within ±5 millivolts (2-1/2 small divisions) of null, adjust 50 VAC ATTEN FINE ADJ control R533 and repeat (12).
This completes AC to DC converter calibration.

SECTION V

LIST OF REPLACEABLE PARTS

5-1. GENERAL

a. The following eight assembly lists describe all normally replaceable parts of the Model 803D, 803DR, 803D/AG, and 803DR/AG Differential AC/DC Voltmeters. Each list has a corresponding illustration on which the parts for that list are pointed out. Parts are called out on both lists and illustrations by reference designations from the schematic diagram. Those parts (mechanical) which have no reference designation are shown on the illustrations by Fluke stock number.

b. A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the 803D. Each part for which a use code has been assigned may be identified with a particular instrument serial number by consulting the Use Code Effectivity List at the end of this section.

5-2. HOW TO OBTAIN PARTS

a. Standard components have been used whenever possible. Thus, most parts may be obtained locally. However, special components are used in some instances. All parts manufactured or altered by Fluke and all parts for which Fluke controls the design are designated by an asterisk preceding the Fluke stock number. All structural parts and special parts should be purchased from your local Fluke representative or from the factory.

b. When ordering parts always include:

(1) Reference designation, description, and Fluke stock number.

(2) Instrument model and serial number.

(3) Most structural parts are not listed. In this case, give complete description, function, and location for the part.

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Final Assembly		
	(Cabinet Model, standard cell option)	*803D	
	(Rack model, standard cell option)	*803DR	
	(Cabinet model, Zener diode option)	*803D/AG	
	(Rack model, Zener diode option)	*803DR/AG	
	Front Panel Assembly (See figure 5-2)		
	803D	*138651	
	803DR	*139014	
	803D/AG	*149807	
	803DR/AG	*154625	
	Reference Supply Board Assembly (See figure 5-3)	*125088	
	Null Dectector Chassis Assembly (See figure 5-4)	*125229 *168807	AA AB
	Range Resistor Board Assembly (See figure 5-5)		
	803D	*125013	
	803DR	*126110	
	803D/AG	*149799	
	803DR/AG	*154617	
	Kelvin-Varley Resistor Board Assembly (See figure 5-6)	*134775	
	Converter/AC Range Switch Assembly (See figure 5-7)	*125021	
	Chopper Drive Board Assembly (See figure 5-8)	*125211	AA

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
F1	Fuse, 1.5 ampere, slow blowing (for 115 volt operation)	109231	
	Fuse, 0.75 ampere, slow blowing (for 230 volt operation)	109256	
	Fuse holder	100107	
J4, J5	Binding post, red	104158	
	Binding post insulator, dual, black	*135053	
Q3	Transistor, germanium, PNP	116707	
R1	Resistor, variable wirewound, 10K ±10%, 2W	111617	
R3	Resistor, precision power (803D/AG and 803DR/AG. Optimum value is selected at factory to match Zener diode. When ordering, include model, serial number and all information printed on the Range Resister Printed Circuit Board decal.)		
R6, R7	Resistor, wirewound, 6K ±5%, 5W	113449	
T1	Transformer, power	*125237	I
	Transformer, power	*149088	J
	Transformer, power	*135012	V
		*161216	AB
	Line cord, 3 wire	102822	
	Rubber foot	101253	
	Case Assembly (Cabinet model)	*120386	
	Handle, flexible black vinyl, 5-1/2" (Cabinet model)	192997	

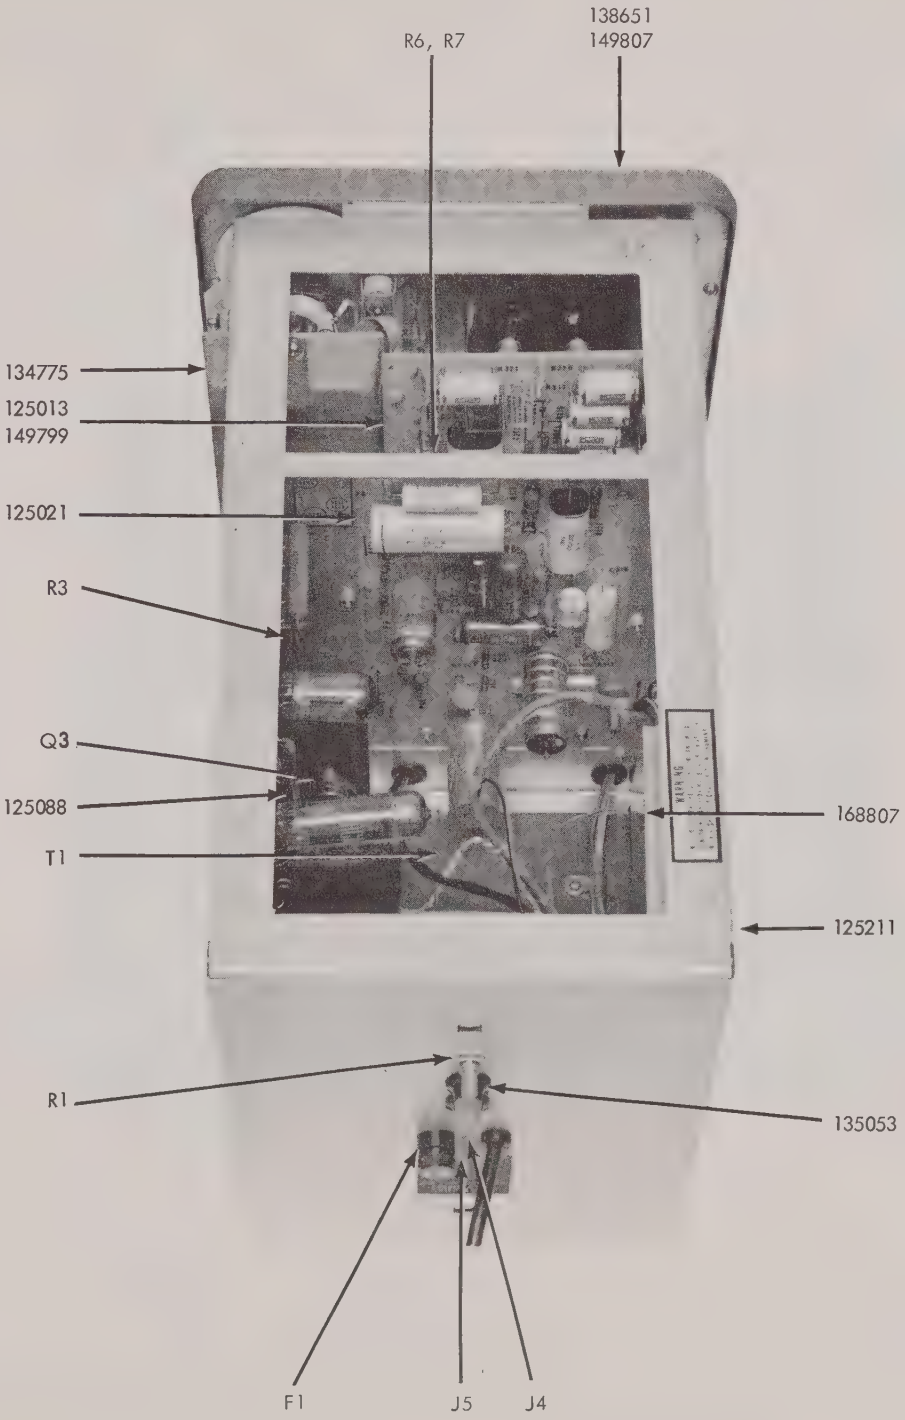

CABINET MODEL

Figure 5-1. FINAL ASSEMBLY (sheet 1 of 2)

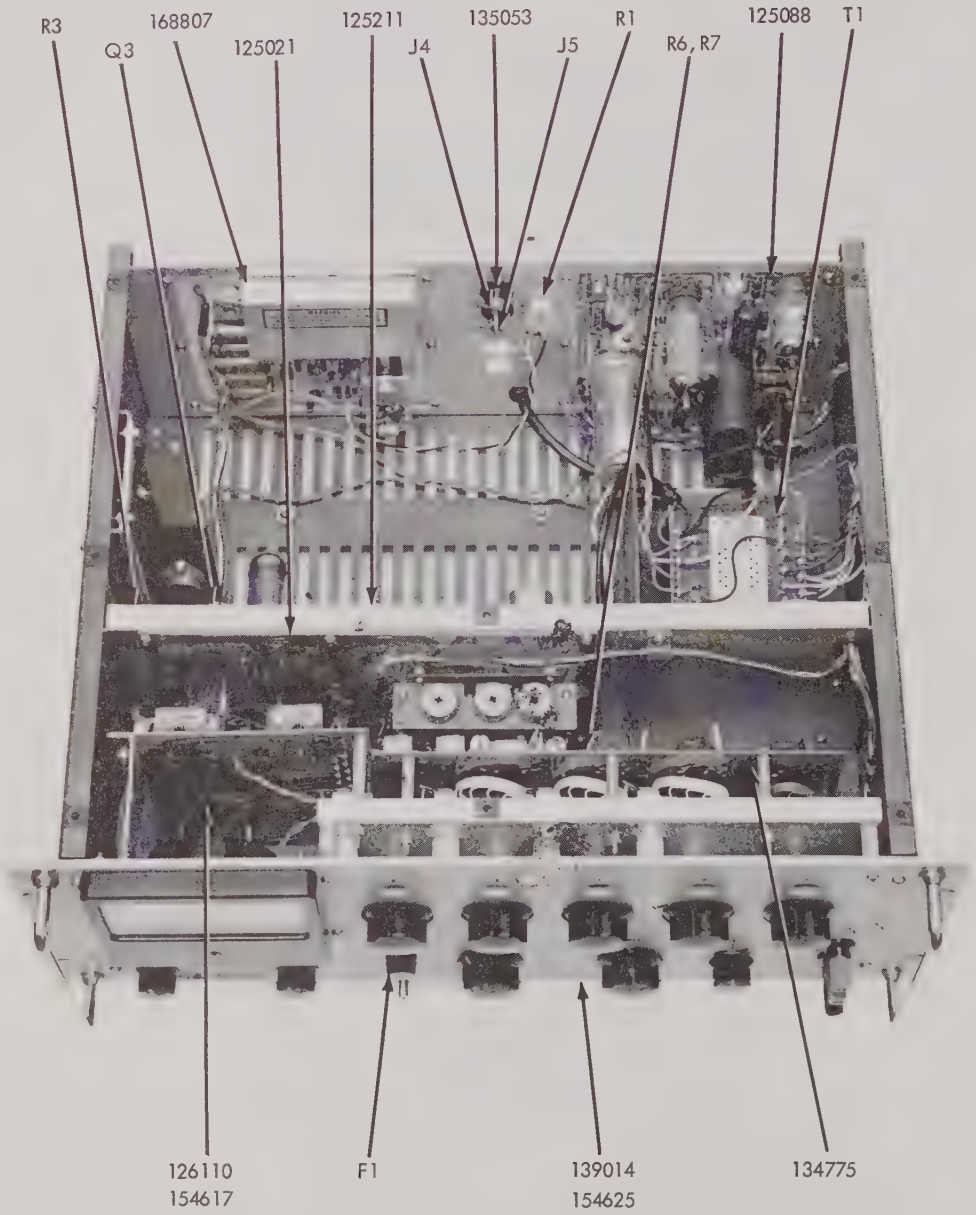

RACK MODEL

Figure 5-1. FINAL ASSEMBLY (sheet 2 of 2)

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Front Panel Assembly		
	803D	*138651	
	803DR	*139014	
	803D/AG	*149807	
	803DR/AG	*154625	
B1	Standard cell (803D and 803DR only)	135160	
C1	Capacitor, plastic, 0.47 uf ±10%, 600V	105494	
DS1, DS2, DS3, DS4	Lamp, decimal	102855	
	Light holder	100131	
	Light shield	101428	
	Light lens	103440	
J1, J2	Binding post, red	104158	
	Binding post, insulator, dual, black	*135053	
	Binding post, insulator, black (Cabinet model)	*135061	
	Shorting link	101220	
J3	Binding post, black	101204	
	Binding post, spacer	101212	
M1	Meter, 100-0-100 microamp	*111211	
R2	Resistor, variable wirewound, dual section, 1K and 100Ω ±10%, 2W	112714	
R4	Resistor, composition, 4.7K ±10%, 1/2W (803D/AG and 803DR/AG)	108381	
R5	Resistor, composition, 47K ±10%, 1/2W	108480	N
	Resistor, composition (803D/AG and 803DR/AG. Optimum value selected at factory to match Zener diode. If replacement is required, replace with a resistor of same value as determined by color code. If color code is unreadable, include information listed on Range Resistor Board decal when ordering)		O
S1	Switch, power	114850	
S2	Switch, range, DC section	*125138	
S3	Switch, null	*121293	
S4	Switch, operate-calibrate	*134973	
S5	Switch, AC - DC polarity	*126193	
S6	Switch, voltage dial A	*134817	
S7, S8, S9	Switch, voltage dials B, C, and D	*134841	
S10	Switch, voltage dial E	*134825	
	Knob	101287	AC
		188524	AD
		170068	AD
	Knob	101121	AC
		171660	AD
	Knob	101311	AC
		188524	AD
		170050	AD
	Knob	103614	AC
		188532	AD
		170050	AD
	Voltage dial plates (Cabinet model)	107029	
	(Rack model)	107011	
	Handle, 6" chrome plated (rack model)	101717	

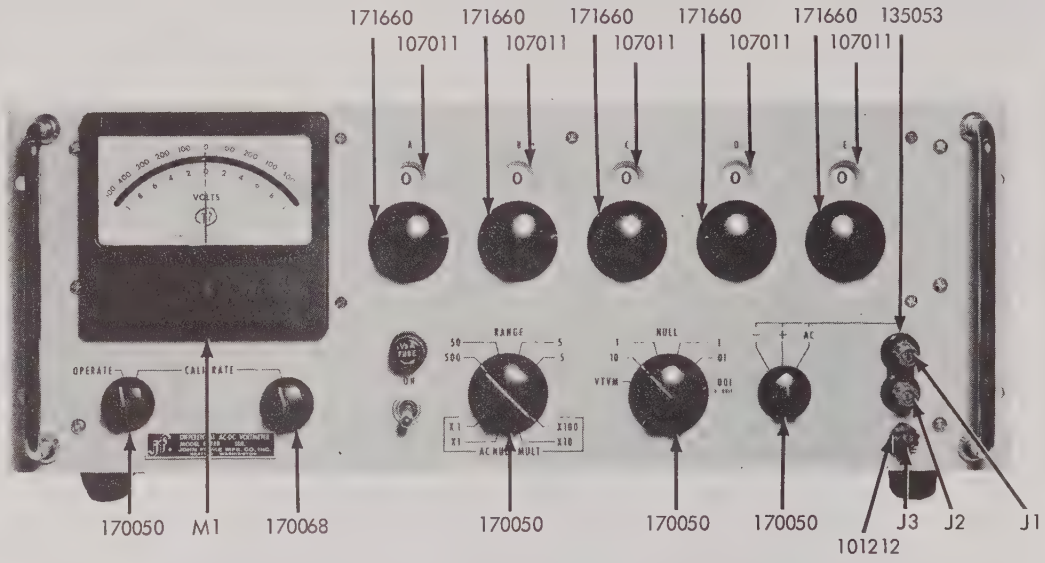

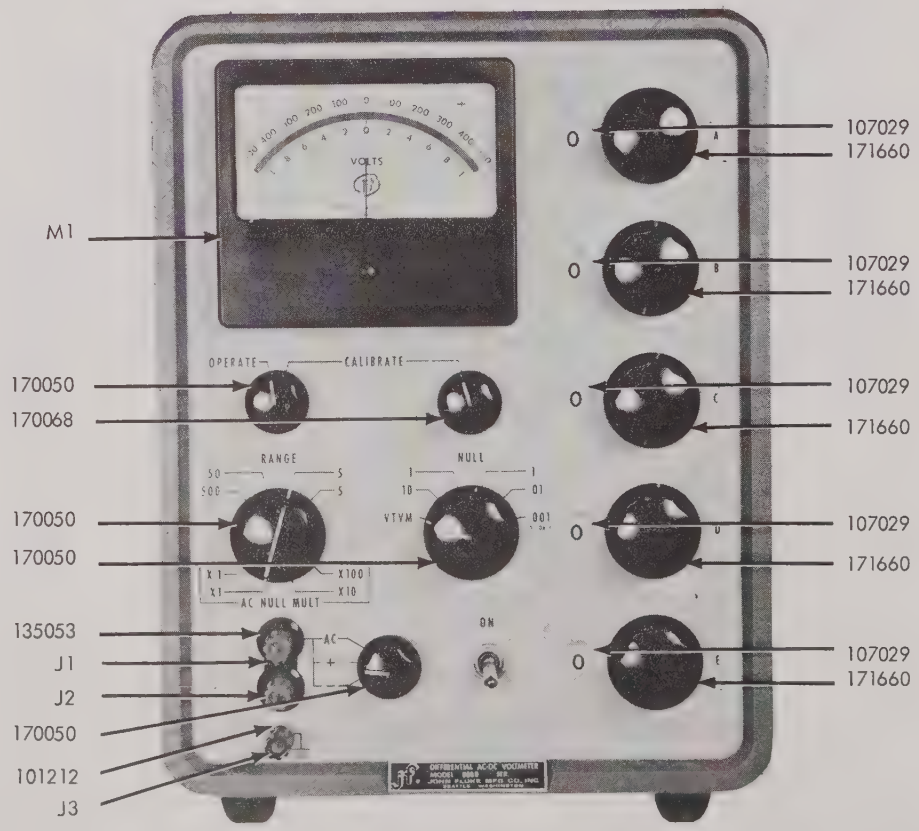

Figure 5-2. FRONT PANEL ASSEMBLY (sheet 1 of 2)

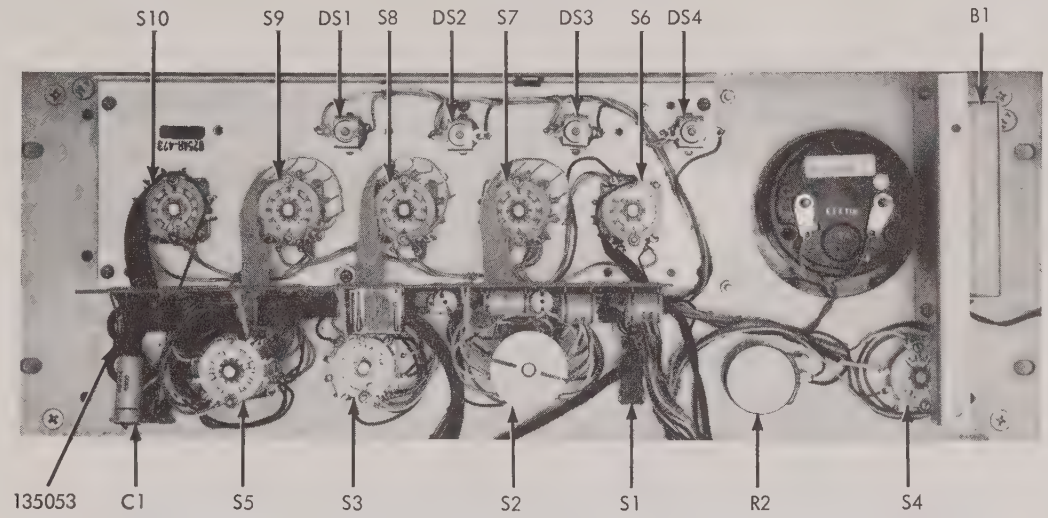

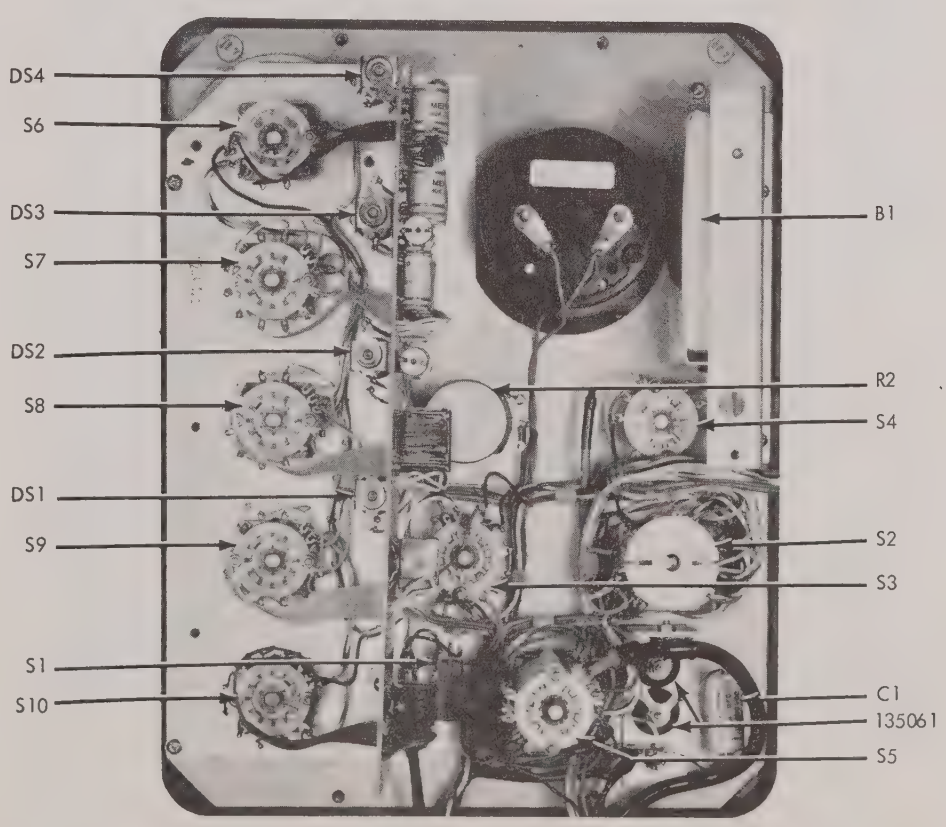

Figure 5-2. FRONT PANEL ASSEMBLY (sheet 2 of 2)

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Reference Supply Board Assembly without tubes	*125088	
C101, C102	Capacitor, electrolytic, 20 uf -10/+100%, 500V	105932	
C103	Capacitor, electrolytic, 4000 uf - 10/+100%, 15V	105163	
C104	Capacitor, paper, 0.1 uf ±20%, 400V	105312	
C105	Capacitor, plastic, 0.033 uf ±20%, 600V	105916	
C106	Capacitor, plastic, 0.1 uf ±20%, 600V	105833	
C107	Capacitor, ceramic, 0.01 uf -20/+80%, 500V	105668	
CR101 thru CR103	Diode, silicon, 0.750 Amp, 600 PIV Diode, silicon, 0.750 Amp, 600 PIV	112680 112383	G H
CR104, CR105	Diode, silicon, 1 Amp, 50 PIV Diode, silicon, 1 Amp, 100 PIV	112409 116111	W X
Q1	Transistor, germanium, NPN, 2N214 Transistor, silicon, NPN, 2N3721	116137 117267	A B
Q2	Transistor, germanium, PNP, 2N1372	116129	
R101	Resistor, composition, 1 Meg ±10%, 1/2W	108134	
R102	Resistor, composition, 220K ±10%, 1/2W	108217	
R104	Resistor, carbon film 5K ±1%, 1/2W Resistor, carbon film, 5.44K ±1%, 1/2W	107110 107235	A B
R105	Resistor, carbon film, 135K ±1%, 1/2W Resistor, carbon film, 125K ±1%, 1/2W	107201 107433	A B
R106	Resistor, composition, 8.2K ±10%, 1/2W	109017	
R107, R108	Resistor, carbon film, 50Ω ±1%, 1/2W	107037	
R109, R110	Resistor, composition, 270K ±10%, 1W	109512	
R111	Resistor, composition, 22 Meg ±10%, 1/2W	108233	
R112	Resistor, composition, 15 Meg ±10%, 1/2W	108647	
R113	Resistor, composition, 10 Meg ±10%, 1/2W	108142	
R114	Resistor, composition, 100K ±10%, 1W	109397	
R115	Resistor, wirewound, 140K ±3%, 10W	112417	
R116	Resistor, composition, 100K ±10%, 1/2W	108126	
R117	Resistor, composition, 560K ±10%, 1W	109678	
R118	Resistor, composition, 220K ±10%, 1/2W	108217	
R119	Resistor, composition, 330Ω ±10%, 1/2W	108589	
R120	Resistor, composition, 220K ±10%, 1W	109652	
R121	Resistor, variable wirewound, 5K ±20%, 1-1/4W Resistor, variable wirewound, 5K ±10%, 1/2W	111609 241653	AO AP
R122	Resistor, composition, 560K ±10%, 1W	109678	
R123	Resistor, wirewound, 386K ±0.5%, 1W	112482	
R124	Resistor, wirewound, 76K ±0.5%, 1/2W	111948	

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R125	Resistor, composition, 82K ±10%, 1/2W	108498	
V101	Vacuum tube, pentode, EL84/6BQ5	116616	
V102	Vacuum tube, voltage reference, aged OG3	116749	
V103	Lamp, neon glow, NE2E Lamp, neon glow, NE83	100347 170167	Y Z
V104, V105	Vacuum tube, duo triode, 12AX7	115956	

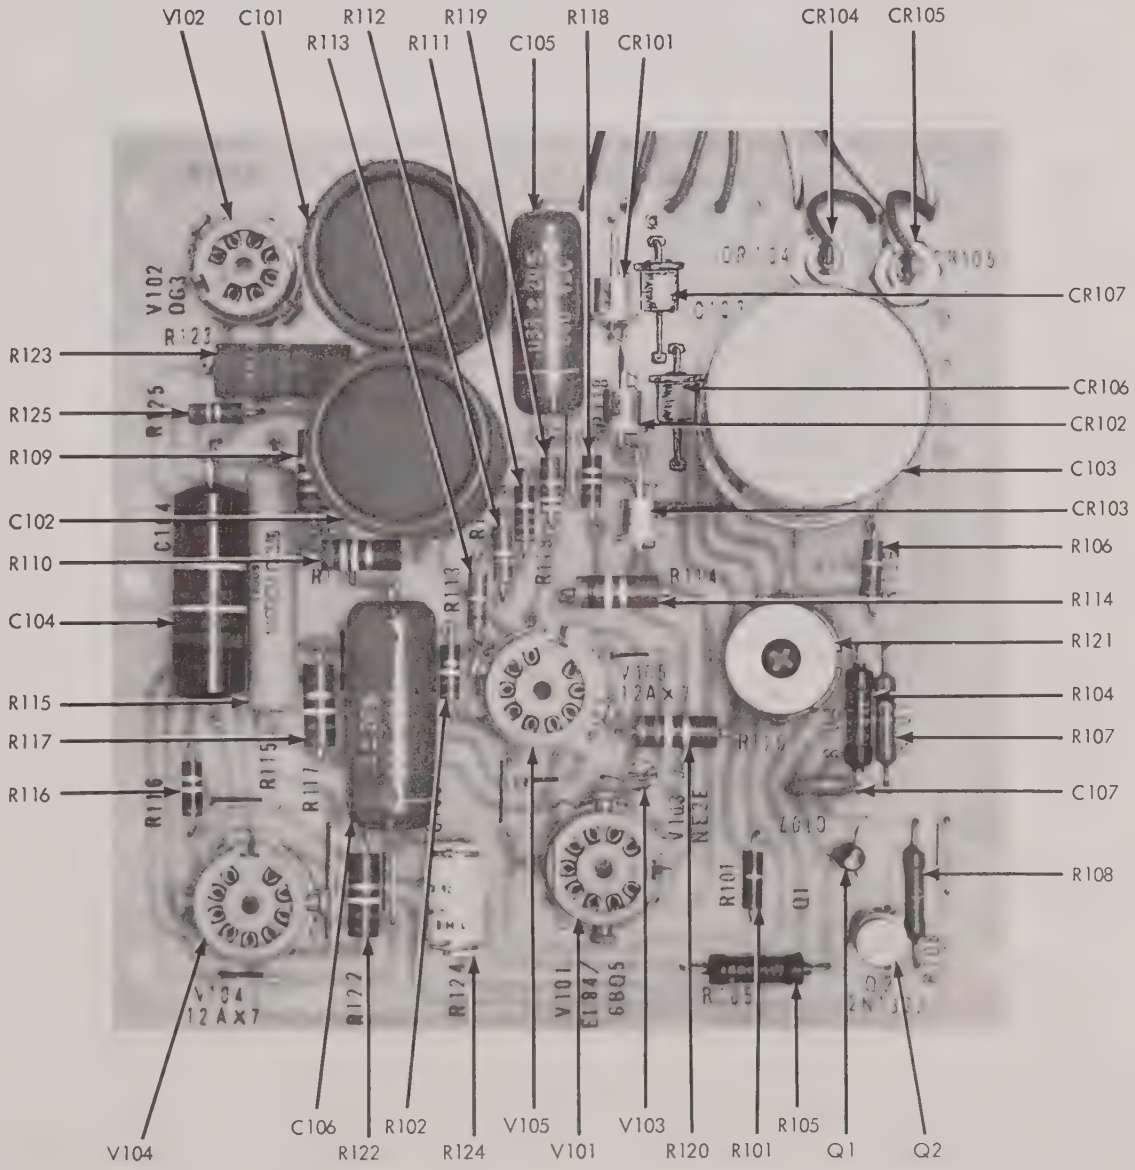

Figure 5-3. REFERENCE SUPPLY BOARD ASSEMBLY

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	NOTE: This assembly applies to 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237 only.		
	Null Detector Chassis Assembly without tubes	*125229	
C201, C202	Capacitor, plastic, 0.1 uf ±20%, 100V	106526	
C203	Capacitor, paper, 0.047 uf ±20%, 400V	105718	
C204 ABC	Capacitor, electrolytic, 40-20-20 uf -10/+100%, 250V	106542	
C205	Capacitor, plastic, 0.1 uf ±20%, 200V	106310	E
	Capacitor, plastic, 0.1 uf ±20%, 200V	106435	F
C206	Capacitor, electrolytic, 100 uf -10/+100%, 3V	106534	
C207	Capacitor, ceramic, 0.005 uf ±20%, 500V	105650	
C208	Capacitor, plastic, 0.1 uf ±20%, 200V	106310	E
	Capacitor, plastic, 0.1 uf ±20%, 200V	106435	F
C209	Capacitor, plastic, 0.47 uf ±20%, 200V	106419	
C210	Capacitor, plastic, 0.1 uf ±20%, 200V	106310	E
	Capacitor, plastic, 0.1 uf ±20%, 200V	106435	F
C211	Capacitor, electrolytic, 5 uf -10/+100%, 50V	106500	
C212	Capacitor, electrolytic, 500 uf -10/+100%, 3V	106328	
C213 AB	Capacitor, electrolytic, 20-20 uf -10/+50%, 450V	105064	
C214	Capacitor, electrolytic, 2000 uf -10/+100%, 25V	105171	
C215	Capacitor, electrolytic, 30 uf -10/+100%, 15V	106492	
C216	Capacitor, electrolytic, 15 uf -10/+150%, 6V	105700	
CR201	Diode, silicon, 0.75 Amp, 600 PIV	112680	G
	Diode, silicon, 0.75 Amp, 600 PIV	112383	H
CR202	Diode, silicon, 1 Amp, 100 PIV	116111	
CR203	Diode, silicon, 0.75 Amp, 600 PIV	112680	G
	Diode, silicon, 0.75 Amp, 600 PIV	112383	H
CR204, CR205	Diode, silicon, 1 Amp, 100 PIV	116111	
G1	Chopper, electromechanical, SPDT	104455	
Q201	Transistor, germanium PNP	116707	
Q202	Transistor, germanium PNP, 2N1372	116129	
R201 thru R203	Resistor, composition, 820K ±10%, 1/2W	108357	
R204	Resistor, composition, 2.2 Meg ±10%, 1/2W	108225	
R205	Resistor, composition, 22K ±10%, 1/2W	108209	
R206	Resistor, composition, 150K ±10%, 1/2W	108167	
R207	Resistor, composition, 4.7K ±10%, 1/2W	108381	
R208	Resistor, composition, 10 Meg ±10%, 1/2W	108142	
R209	Resistor, composition, 10K ±10%, 1/2W	108118	

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R210	Resistor, composition, 220K ±10%, 1/2W	108217	
R211, R212	Resistor, composition, 1 Meg ±10%, 1/2W	108134	
R213	Resistor, composition, 180K ±10%, 1/2W	108431	
R214	Resistor, composition, 1K ±10%, 1/2W	108563	
R215	Resistor, composition, 3.3 Meg ±10%, 1/2W	108282	
R216	Resistor, composition, 1.5 Meg ±10%, 1/2W	108175	
R217	Resistor, composition, 4.7K ±10%, 1/2W	108381	
R218	Resistor, composition, 22K ±10%, 1/2W	108209	
R219	Resistor, composition, 220Ω ±10%, 1/2W	108191	
R220	Resistor, carbon film, 10Ω ±1%, 1/2W	107789	
R221	Resistor, carbon film, 75Ω ±1%, 1/2W	107045	
R222	Resistor, variable wirewound, 500Ω ±10%, 2W	111773	
R223, R224	Resistor, composition, 1.8K ±10%, 1/2W	108860	
R225, R226	Resistor, composition, 47K ±10%, 2W	110015	
R227	Resistor, composition, 2.2K ±10%, 2W	109967	
R228	Resistor, composition, 560K ±10%, 1/2W	108795	
R229	Resistor, composition, 560Ω ±10%, 1/2W	108316	
R230	Resistor, composition, 2.2K ±10%, 2W	109967	
R231	Resistor, composition, 180K ±10%, 1/2W	108431	
R232	Resistor, variable wirewound, 10K ±20%, 2W	111617	
R233	Resistor, composition, 100K ±10%, 1/2W	108126	
R234	Resistor, carbon film, 2.7K ±1%, 1/2W	107276	
R235	Resistor, carbon film, 31.6K ±1%, 1W	107797	
R236	Resistor, composition, 22K ±10%, 1/2W (may be omitted)	108209	
V201	Lamp, neon glow, type NE2E, 1/10W	100347	
V202	Vacuum tube, duo triode, 5751	116657	
V203	Vacuum tube, triode-pentode, 6AW8A	116434	
V204	Vacuum tube, voltage reference, OA2	115873	
	Vacuum tube shield	101808	
	Vacuum tube clamp, 2 inches high	102178	

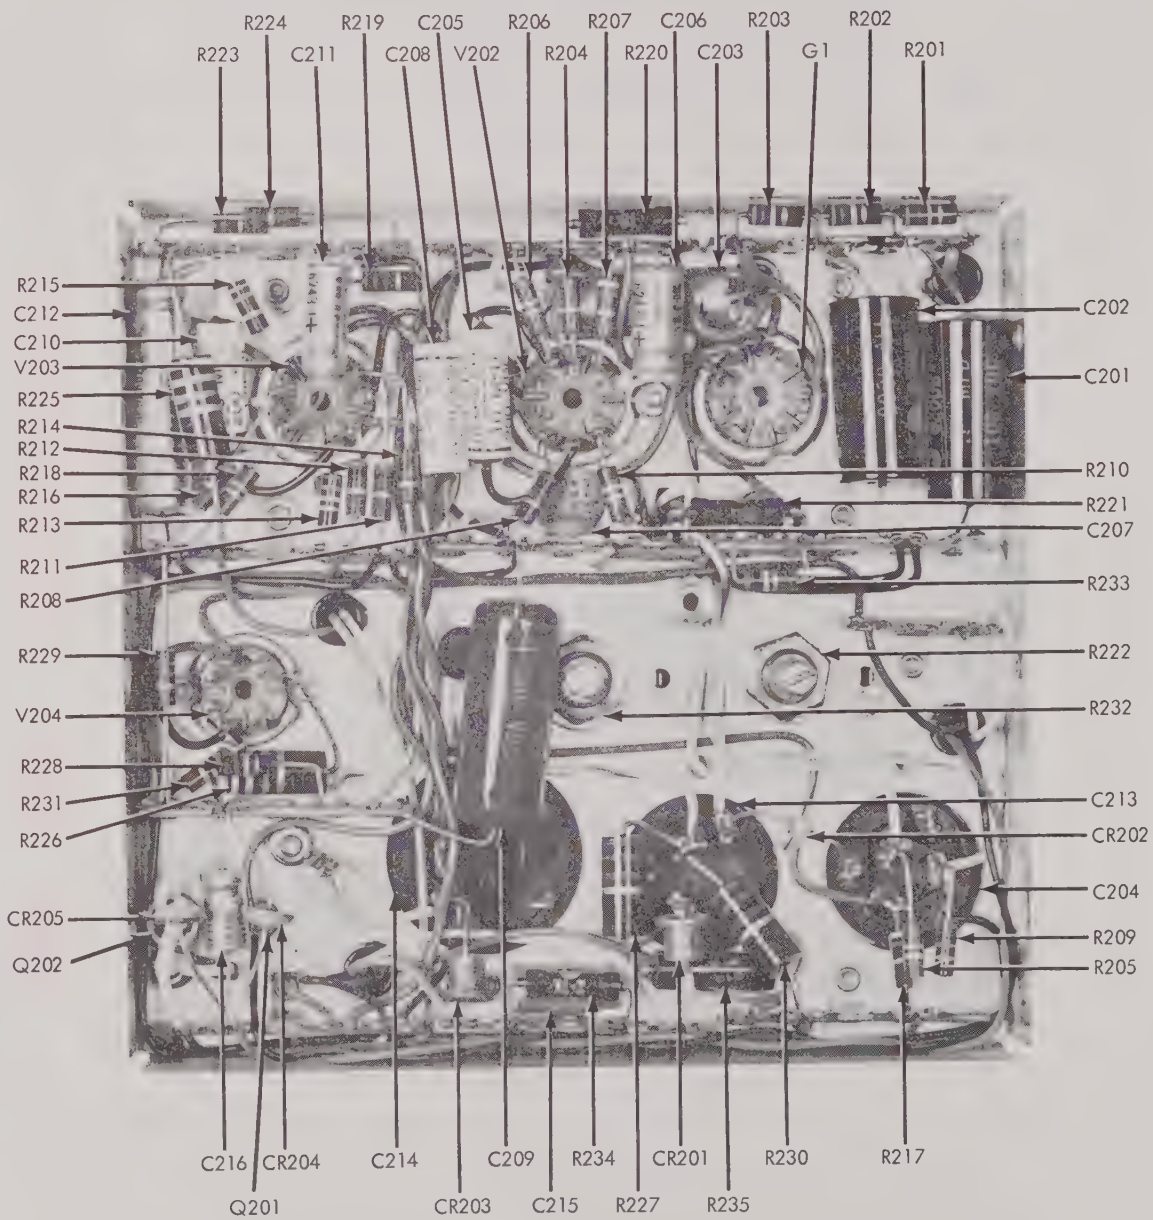

Figure 5-4. NULL DETECTOR ASSEMBLY (sheet 1 of 2)

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	NOTE: This assembly applies to 803D & 803D/AG serial numbers 645 & on and 803DR & 803DR/AG serial numbers 238 & on only.		
	Null Detector Board Assembly	168807	
	Chopper Drive Assembly	168815	
C212	Capacitor, plastic, 0.047 uf ±20%, 100V	106096	AM
	Capacitor, plastic, 0.04 uf ±10%, 200V	207555	AN
C215	Capacitor, plastic, 0.015 uf ±10%, 200V	182154	AN
DS202, DS203	Lamp, neon glow, type NE2U	162602	
R226	Resistor, variable composition, 100K ±30%, 3/10W	163402	AI
	Resistor, variable composition, 150K ±30%, 3/10W	193516	AJ
R227, R228	Resistor, composition, 390K ±10%, 1/2W	108993	
C201, C202	Capacitor, plastic, 0.22 uf ±20%, 120V coated with epoxy resin	167452	
C203	Capacitor, plastic, 0.047 uf ±20%, 100V (Use 162008)	106096	AE
	Capacitor, plastic, 0.047 uf ±20%, 250V	162008	AF
C204	Capacitor, ceramic, 180 pf ±10%, 500V	105890	
C205	Capacitor, electrolytic, 1250 uf -10/+50%, 4V	166330	
C206	Capacitor, electrolytic, 400 uf -10/+50%, 25V	168153	
C207	Capacitor, plastic, 0.1 uf ±10%, 200V	106013	
C208	Capacitor, plastic, 0.0047 uf ±20%, 200V	106054	
C209	Capacitor, electrolytic, 5 uf -10/+75%, 25V	152009	
C210	Capacitor, electrolytic, 1250 uf -10/+50%, 4V	166330	
C211	Capacitor, electrolytic, 10 uf -10/+50%, 25V	170266	
C213, C214	Capacitor, electrolytic, 400 uf -10/+50%, 25V	168153	
CR201 thru CR203	Diode, silicon, 1 Amp, 100 PIV	116111	
DS201	Lamp, neon glow, type NE2A coated with epoxy resin	*162776	
Q201	Transistor, silicon, NPN, Type S19254 (Use 177105)	168716	AE
	Transistor, silicon, NPN, Type 2N 3565	177105	AK
	Transistor, Type S19254 tested	*198812	AL
Q202 to Q206	Transistor, silicon, NPN, Type 2N3391	168708	
Q207	Transistor, silicon, PNP, Type MPS3638	169375	
R201	Resistor, composition, 270K ±10%, 1W (Use 110023)	109512	AE
	Resistor, composition, 270K ±10%, 2W	110023	AF
R202	Resistor, composition 470K ±10%, 1/2W	108290	
R203	Resistor, metal film, 10.7Ω ±1%, 1/2W	168740	
R204	Resistor, composition, 68Ω ±10%, 1/2W	108464	

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R205	Resistor, variable wirewound, 500Ω ±10%, 1-1/4W	112433	
R206	Resistor, composition, 10K ±10%, 1/2W	108118	
R207	Resistor, composition, 1M ±10%, 1/2W	108134	
R208	Resistor, composition, 10M ±10%, 1/2W	108142	
R209	Resistor, composition, 100K ±10%, 1/2W	108126	
R210	Resistor, composition, 2.2M ±10%, 1/2W	108225	
R211	Resistor, composition, 270K ±10%, 1/2W	108258	
R212	Resistor, variable composition, 100K ±20%, 1/4W	163873	
R213	Resistor, composition, 10Ω ±10%, 1/2W	108092	
R214	Resistor, composition, 180K ±10%, 1/2W	108431	
R215	Resistor, composition, 10K ±10%, 1/2W	108118	
R216	Resistor, composition, 180K ±10%, 1/2W	108431	
R217	Resistor, composition, 100K ±10%, 1/2W	108126	
R218	Resistor, composition, 27K ±10%, 1/2W	108878	
R219	Resistor, composition, 47K ±10%, 1/2W	108480	
R220	Resistor, composition, 100Ω ±10%, 1/2W	108100	AG
	Resistor, composition, 220Ω ±10%, 1/2W	108191	AH
R221	Resistor, composition, 270K ±10%, 1/2W	108258	
R222	Resistor, composition, 18K ±10%, 1/2W	108183	
R223	Resistor, composition, 2.2K ±10%, 1/2W	108605	
R224, R225	Resistor, composition, 47K ±10%, 1/2W	108480	
R229	Resistor, composition, 100Ω ±10%, 1/2W	108100	
R230	Resistor, composition, 47K ±10%, 1/2W	108480	
V201, V202	Photoelectric cell	167940	AE
	Photoelectric cell	200287	AF
V203			
	Photoelectric cell	167940	AG
	Photoelectric cell	200261	AH

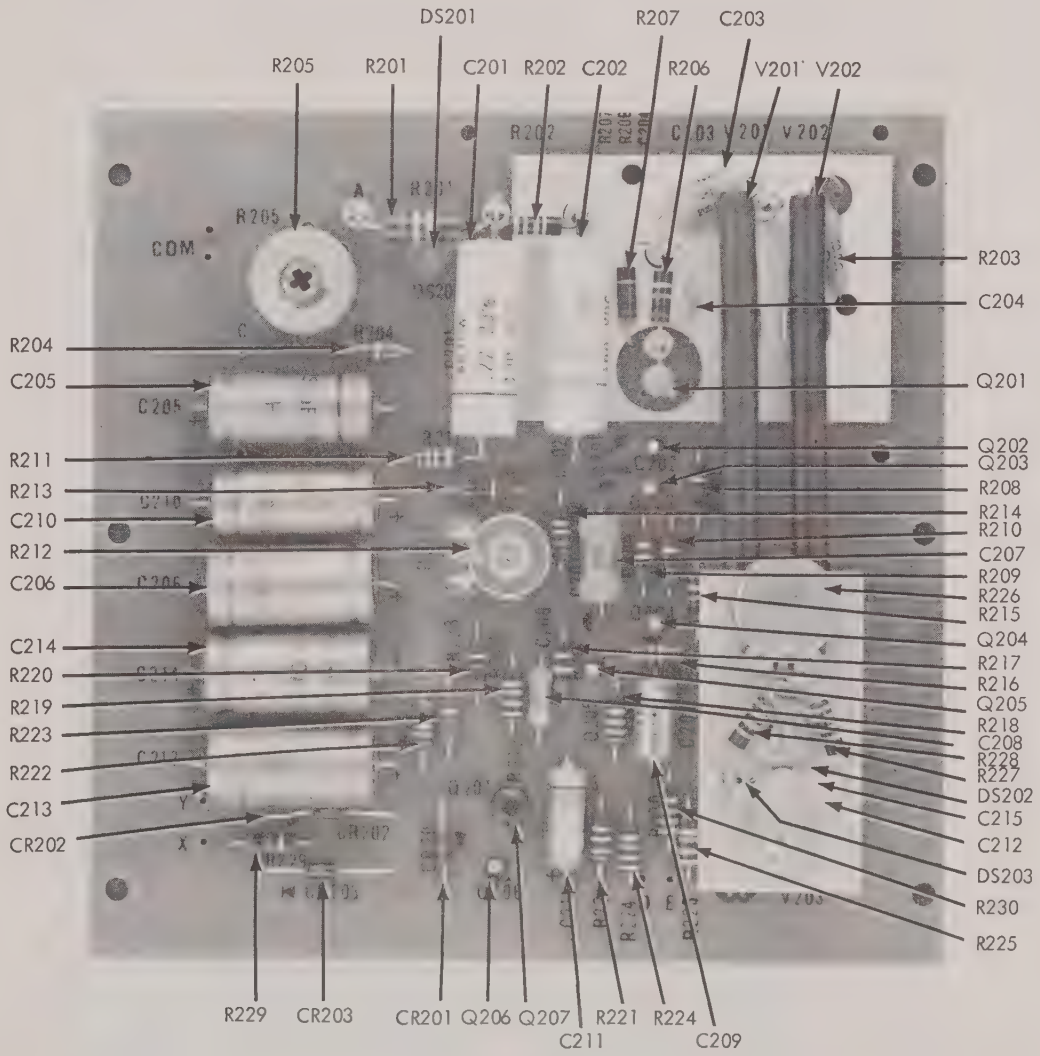

Figure 5-4. NULL DETECTOR ASSEMBLY (sheet 2 of 2)

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Range Resistor Board Assembly		
	803D	*125013	
	803DR	*126110	
	803D/AG	*149799	
	803DR/AG	*154617	
C301	Capacitor, plastic, 1 uf ±20%, 600V	105924	
C302	Capacitor, plastic, 2 uf ±20%, 200V	106443	
CR301	If replacement is required, CR301, R3, and R319 must be replaced with one of the Zener-resistor sets listed below. An adhesive label included must be attached to Range Resistor Board to give future ordering data for R3 and R319.		
	Zener-resistor set 825A/G-426 (Replace with 158824)		K
	Zener-resistor set 825A/G-404 or 825A/G-408 (These two sets are completely interchangeable)	158824	L
R301 thru R304	Resistors, carbon film, 10 Meg matched set of four	200626	
R305	Resistor, carbon film, 9 Meg ±1%, 1W	107557	
R306	Resistor, carbon film, 900K ±1%, 1/2W	107391	
R307	Resistor, carbon film, 90K ±1%, 1/2W	107292	
R308	Resistor, carbon film, 9K ±1%, 1/2W	107250	
R309	Resistor, carbon film, 900Ω ±1%, 1/2W	107771	
R310	Resistor, carbon film, 100Ω ±1%, 1/2W	107730	
R311 thru R315	Resistor, composition, 22 Meg ±10%, 1/2W	108233	
R316, R317	Resistor, wirewound, 125K ±0.1%, 1W	112102	R
	Resistor, wirewound, 112.375K ±0.05%, 1W	112110	S
R318	Resistor, variable wirewound, 3K ±20%, 1-1/4W	149781	K
	Resistor, variable wirewound, 1K ±20%, 1-1/4W	113266	M
R319	Resistor, wirewound, 511.7Ω ±0.1%, 1/2W (803D and 803DR)	*112706	T
	Resistor, wirewound, 459.8Ω ±0.025%, 1/8W (803D and 803DR)	*132001	U
	Resistor, wirewound (803D/AG and 803DR/AG. Optimum value is selected at factory to match Zener diode. When ordering, include model, serial number and all information on the Range Resistor Printed Circuit Board decal.)		
R320, R321	Resistor, wirewound, 112.375K ±0.05%, 1W	112110	
R322	Resistor, composition, 27K ±10%, 1W	109504	
R323	Resistor, variable wirewound, 500Ω ±10%, 1-1/4W	113258	
R324	Resistor, wirewound, 28.571K ±0.05%, 1/2W	112060	
R325	Resistor, wirewound, 22.5K ±0.1%, 1/2W	112045	
R326	Resistor, variable wirewound, 500Ω ±10%, 1-1/4W	113258	
R327	Resistor, wirewound, 2531.7Ω ±0.05%, 1/2W	111906	

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R328	Resistor, wirewound, 24.75K ±0.1%, 1/2W	112052	
R329	Resistor, variable wirewound, 500Ω ±10%, 1-1/4W	113258	
R330	Resistor, wirewound, 250.31Ω ±0.05%, 1/2W	112011	
R331	Resistor, composition, 270Ω ±10%, 1/2W	108241	

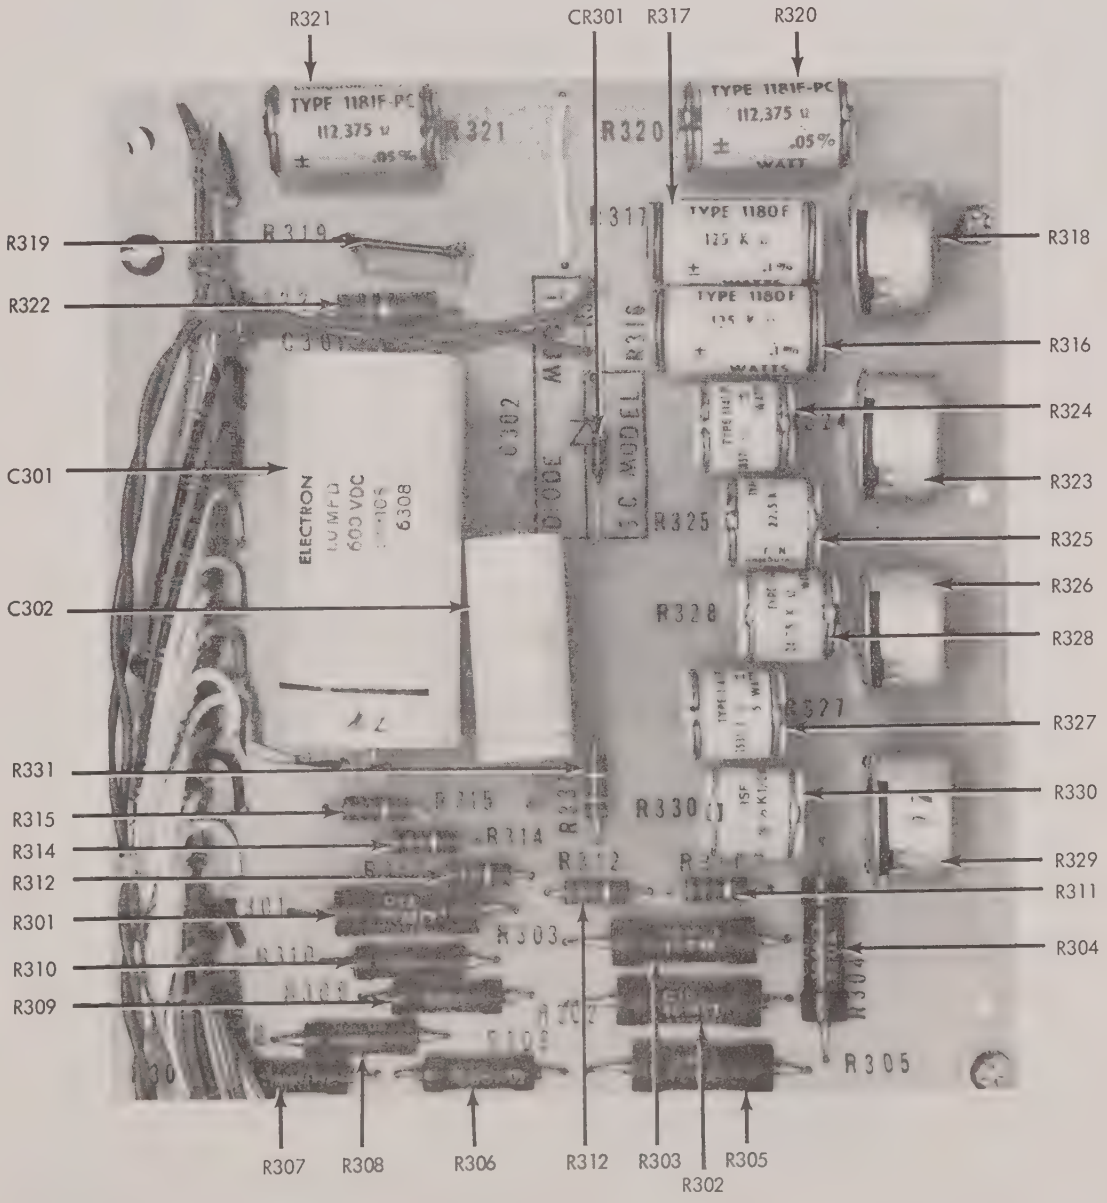

Figure 5-5. RANGE RESISTOR BOARD ASSEMBLY

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Kelvin-Varley Resistor Board Assembly	*134775	
R401 thru R406**	Resistor, wirewound, 40K ±0.02%, 1/2W	*146530	
R407 thru R417**	Resistor, wirewound, 8K ±0.005%, 1/2W	*131946	
R418 thru R428**	Resistor, wirewound, 1.6K ±0.01%, 1/8W	*131953	
R429 thru R439	Resistor, wirewound, 320Ω ±0.02%, 1/8W	*146159	
R440 thru R449	Resistor, wirewound, 64Ω ±0.1%, 1/8W	*146167	

**These resistors are factory matched for each instrument. When ordering, specify instrument model and serial number and all information stamped on resistor and decal.

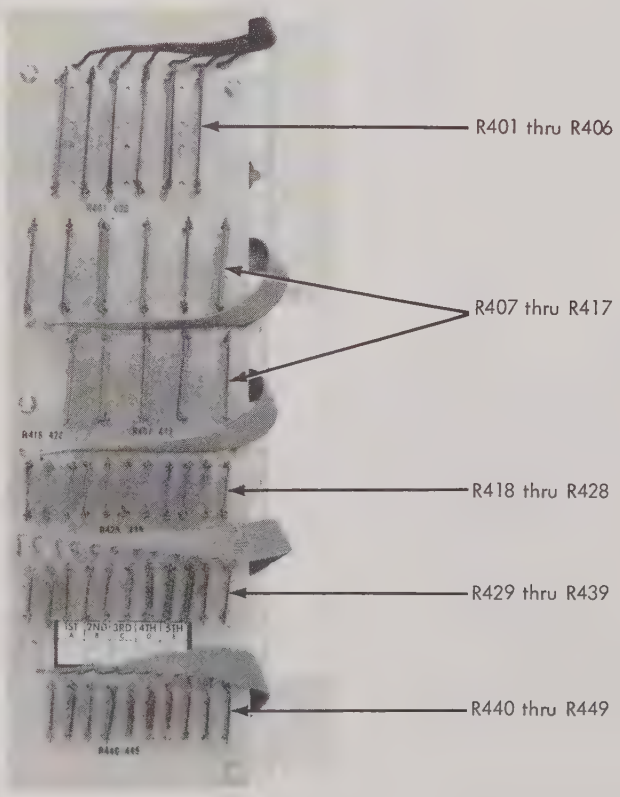

Figure 5-6. KELVIN-VARLEY RESISTOR BOARD ASSEMBLY

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Converter/AC Range Switch Assembly	*125021	
CR501, CR502	Diode, silicon, 60 ma (matched pair)	182428	
	Converter Assembly	*125039	
C505AB	Capacitor, electrolytic, 10-10 uf-10/+50%, 500V	105130	
C506	Capacitor, ceramic, 0.005 uf ±20%, 500V	105650	
C507	Capacitor, ceramic, 300 uf ±10%, 500V	105734	
C508	Capacitor, plastic, 0.47 uf ±20%, 200V	106419	
C509	Capacitor, plastic, 0.0068 uf ±20%, 400V	106591	
C510	Capacitor, ceramic, 500 uuf -0%, 500V	105692	
C511	Capacitor, plastic, 0.47 uf ±10%, 400V	105759	
C512	Capacitor, paper, 0.1 uf ±20%, 400V	105312	
C513	Capacitor, electrolytic, 20 uf -10/+100%, 50V	106229	
C514	Capacitor, ceramic, 2.2 uf-0%, 3V	106393	
C515	Capacitor, plastic, 2 uf ±20%, 200V	106443	
C516	Capacitor, paper, 1 uf ±20%, 600V	105924	
C517	Capacitor, plastic, 5 uf ±20%, 200V (If replacement is required, it will be necessary to replace 106468 with 106997 and C503, 106740 with 107003)	106468	C
	Capacitor, plastic, 5 uf ±5%, 200V	106997	D
C518	Capacitor, plastic, 2 uf ±20%, 200V	106443	
C522	Capacitor, electrolytic, 500 uf-10/+100%, 3V	106328	
CR503	Diode, silicon, 1 Amp, 100 PIV	116111	
R506, R507	Resistor, metal film, 68K ±5%, 2W	111112	
R508	Resistor, metal film, 56K ±5%, 2W	111104	
R509	Resistor, metal film, 100K ±5%, 5W	111195	
R510, R511	Resistor, composition, 3.3K ±10%, 1/2W	108373	
R512	Resistor, composition, 220Ω±10%, 1/2W	108191	
R513	Resistor, composition, 270Ω±10%, 1/2W	108241	
R514	Resistor, composition, 1.8 Meg±10%, 1/2W	108720	
R515	Resistor, composition, 2.2 Meg±10%, 1/2W	108225	
R516	Resistor, composition, 15 Meg ±10%, 1/2W	108647	
R517	Resistor, composition, 18 Meg±10%, 1/2W	108985	
R518	Resistor, composition, 1.8 Meg±10%, 1/2W	108720	
R519	Resistor, composition, 47Ω±10%, 1/2W	108688	
R520	Resistor, metal film, 120K ±5%, 2W	111120	
R521	Resistor, composition, 180Ω±10%, 1/2W	108571	
R522	Resistor, composition, 10K±10%, 1/2W	108118	
R523	Resistor, composition, 390Ω±10%, 1/2W	108365	
R524	Resistor, composition, 330K±10%, 1/2W	108274	
R525	Resistor, composition, 470K±10%, 1/2W	108290	

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R526	Resistor, composition, 220K±10%, 1/2W	108217	
R527	Resistor, composition, 47Ω±10%, 1/2W	108688	
R528	Resistor, metal film, 150K±5%, 2W	111138	
R529	Resistor, composition, 100K±10%, 1W	109397	
R530	Resistor, metal film, 47K±5%, 5W	111187	
R531	Resistor, composition, 220Ω±10%, 1/2W	108191	
R532	Resistor, composition, 470K±10%, 1/2W	108290	
R536	Resistor, variable wirewound, 500Ω±10%, 1/4W	111781	
R537	Resistor, carbon film, 100K±1%, 1/2W	107185	
R538	Resistor, wirewound, 21.28K±0.1%, 1/2W	113217	
R539	Resistor, wirewound, 490Ω±0.1%, 1/2W	112805	
R545	Resistor, variable wirewound, 25Ω±10%, 1-1/4W	113431	
V501	Vacuum tube, pentode, 6EJ7	116699	
V502	Vacuum tube, triode-pentode, 6AW8A	116434	
	AC Range Switch Assembly	*125047	
	AC-Range-Switch Gain Adjust Assembly	*125047-1	
R533	Resistor, variable wirewound 100Ω±20%, 1-1/4W	112797	
R541	Resistor, variable wirewound 50Ω±20%, 1-1/4W	112490	
R544	Resistor, variable wirewound 10Ω±20%, 1-1/4W	112672	
	AC-Range-Switch Attenuator Assembly	*125047-2	
C501	Capacitor, variable glass 0.8 to 8.5 uuf, 1250V	106872	
C502	Capacitor, ceramic, 39 uuf ±2%, 600V	105627	
C503	Capacitor, plastic, 0.18 uf ±10%, 600V (If replacement is required, it will be necessary to replace 106740 with 107003 and C517, 106468 with 106997)	106740	C
	Capacitor, plastic, 0.12 uf ±5%, 600V	107003	D
C521	Capacitor, ceramic, 300 uuf ±5%, 600V	105601	
C523	Capacitor, variable glass 0.8 to 8.5 uuf, 1250V	106872	
C524	Capacitor, ceramic, 5 uuf ±10%, 500V	106955	P
C524	Capacitor, ceramic, 7.5 uuf ±10%, 500V	242032	Q
R503	Resistor, variable wirewound, 5K±10%, 1/4W	111765	
R535	Resistor, variable wirewound, 500Ω±10%, 1/4W	111781	
	Matched Resistor Set	*107987	
R501	Resistor, metal film, 1 Meg ±1/2%, 1W		
R502	Resistor, metal film, 122.6K ±1%, 1/2W		
R534	Resistor, metal film, 10K ±1%, 1/2W		

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	AC-Range-Switch Gain Network Assembly	*125047-3	
C504, C519	Capacitor, variable glass 0.8 to 8.5 uuf, 1250V	106872	
C520	Capacitor, ceramic, 82 uuf ±2%, 600V	105940	
R505	Resistor, composition, 47Ω ±10%, 1/2W	108688	
R542	Resistor, variable wirewound, 2K ±10%, 1/4W	113191	
	Matched Resistor Set	*107995	
R504	Resistor, metal film, 1 Meg±1/2%, 1/2W		
R540	Resistor, metal film, 48.75K±1%, 1/2W		
R543	Resistor, metal film, 500K±1/2%, 1/2W		
	AC-Range-Switch Switch Assembly	*125047-4	
S2	Switch, range, AC section	*125120	

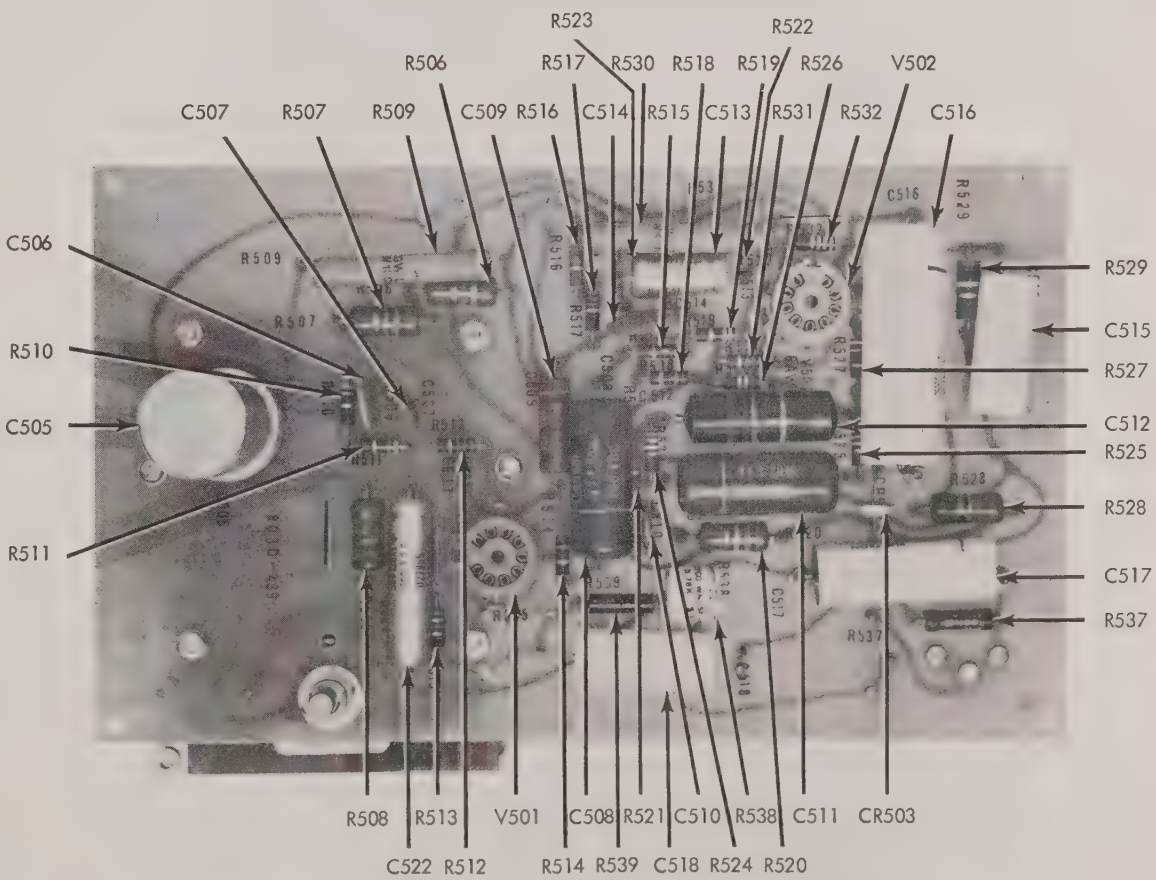

Figure 5-7. CONVERTER/AC RANGE SWITCH ASSEMBLY (Sheet 1 of 2)

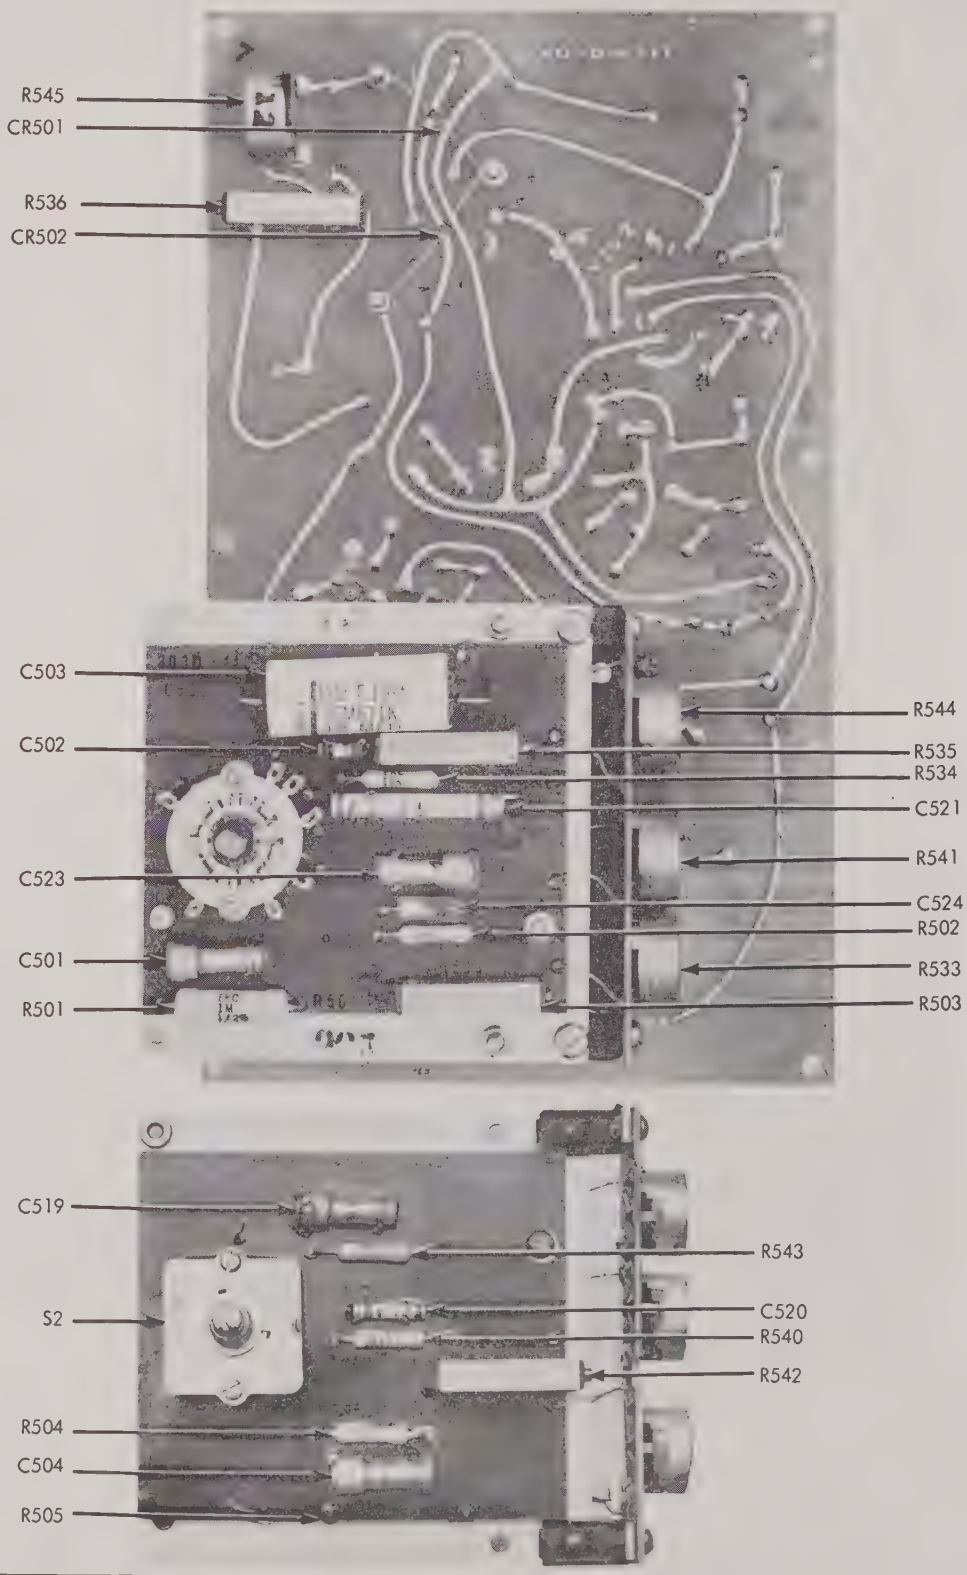

Figure 5-7. CONVERTER/AC RANGE SWITCH ASSEMBLY (Sheet 2 of 2)

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	NOTE: This assembly applies to 803D & 803D/AG serial numbers 123 to 644 and 803DR & 803DR/AG serial numbers 123 to 237 only.		
	Chopper Drive Assembly	*125211	
C701	Capacitor, plastic, 0.18 uf ±10%, 200V	105874	
C702, C703	Capacitor, electrolytic, 20 uf -10/+100%, 50V	106229	
C704	Capacitor, plastic, 0.18 uf ±10%, 200V	105874	
Q701, Q702	Transistor, germanium, PNP, 2N1379	117143	
Q703, Q704	Transistor, germanium, PNP, 2N1372	116129	
R701	Resistor, deposted carbon, 44.2K ±1%, 1/2W	107912	
R702	Resistor, composition, 120Ω ±10%, 1/2W	108696	
R703	Resistor, deposted carbon, 44.2K ±1%, 1/2W	107912	
R704, R705	Resistor, variable wirewound, 10K ±20%, 1-1/4W	112862	
R706, R707	Resistor, composition, 820Ω ±10%, 1/2W	108423	
R708, R709	Resistor, composition, 120Ω ±10%, 1W	109827	

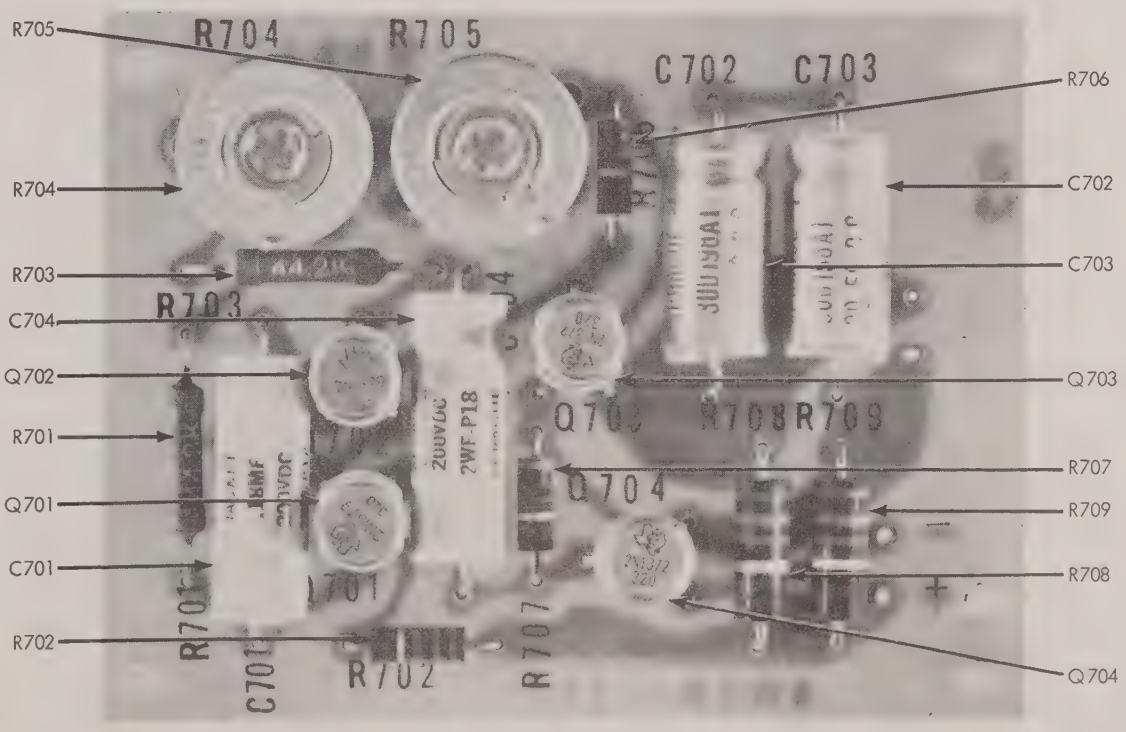

Figure 5-8. CHOPPER DRIVE ASSEMBLY

USE CODE EFFECTIVITY

The following list of use codes is intended to allow the customer to determine the effectivity of all replaceable parts. All parts with no code are used on all instruments with serial numbers above 123. New codes will be added as necessary on forthcoming instruments.

USE CODE	EFFECTIVITY
No Code	Model 803D serial number 123 and on Model 803DR serial number 123 and on Model 803D/AG serial number 123 and on Model 803DR/AG serial number 123 and on
A	Model 803D serial number 123 thru 187 Model 803DR serial number 123 thru 172 Model 803D/AG serial number 123 thru 187 Model 803DR/AG serial number 123 thru 172
B	Model 803D serial number 188 and on Model 803DR serial number 173 and on Model 803D/AG serial number 188 and on Model 803DR/AG serial number 173 and on
C	Model 803D serial number 123 thru 163 Model 803D/AG serial number 123 thru 163
D	Model 803D serial number 164 and on Model 803DR serial number 123 and on Model 803D/AG serial number 164 and on Model 803DR/AG serial number 123 and on
E	Model 803D serial number 123 thru 202 Model 803DR serial number 123 thru 172 Model 803D/AG serial number 123 thru 202 Model 803DR/AG serial number 123 thru 172
F	Model 803D serial number 203 and on Model 803DR serial number 173 and on Model 803D/AG serial number 203 and on Model 803DR/AG serial number 173 and on
G	Model 803D serial number 123 thru 323 Model 803DR serial number 123 thru 172 Model 803D/AG serial number 123 thru 323 Model 803DR/AG serial number 123 thru 172
H	Model 803D serial number 324 and on Model 803DR serial number 173 and on Model 803D/AG serial number 324 and on Model 803DR/AG serial number 173
I	Model 803D serial number 123 thru 348 Model 803DR serial number 123 thru 172 Model 803D/AG serial number 123 thru 348 Model 803DR/AG serial number 123 thru 172
J	Model 803D serial number 349 thru 474 Model 803DR serial number 173 thru 192 Model 803D/AG serial number 349 thru 499 Model 803DR/AG serial number 173 thru 192
K	Model 803D/AG serial number 123 thru 348 Model 803DR/AG serial number 123 thru 192
L	Model 803D/AG serial number 349 and on Model 803DR/AG serial number 193 and on
M	Model 803D serial number 123 and on Model 803DR serial number 123 and on Model 803D/AG serial number 349 and on Model 803DR/AG serial number 193 and on
N	Model 803D/AG serial number 123 thru 373 Model 803DR/AG serial number 123 thru 202
O	Model 803D/AG serial number 374 and on' Model 803DR/AG serial number 203 and on
P	Model 803D serial number 123 thru 374 Model 803DR serial number 123 thru 191 Model 803D/AG serial number 123 thru 374 Model 803DR/AG serial number 123 thru 191
Q	Model 803D serial number 375 and on Model 803DR serial number 192 and on Model 803D/AG serial number 375 and on Model 803DR/AG serial number 192 and on
R	Model 803D serial number 123 thru 443 Model 803DR serial number 123 thru 192 Model 803D/AG serial number 123 thru 348 Model 803DR/AG serial number 123 thru 192
S	Model 803D serial number 444 and on Model 803DR serial number 193 and on Model 803D/AG serial number 349 and on Model 803DR/AG serial number 193 and on
T	Model 803D serial number 123 thru 443 Model 803DR serial number 123 thru 192
U	Model 803D serial number 444 and on Model 803DR serial number 193 and on
V	Model 803D serial number 475 thru 644 Model 803DR serial number 193 thru 237 Model 803D/AG serial number 500 thru 644 Model 803DR/AG serial number 193 thru 237
W	Model 803D serial number 123 thru 539 Model 803DR serial number 123 thru 217 Model 803D/AG serial number 123 thru 539 Model 803DR/AG serial number 123 thru 217
X	Model 803D serial number 540 and on Model 803DR serial number 218 and on Model 803D/AG serial number 540 and on Model 803DR/AG serial number 218 and on
Y	Model 803D serial number 123 thru 607 Model 803DR serial number 123 thru 253 Model 803D/AG serial number 123 thru 607 Model 803DR/AG serial number 123 thru 253
Z	Model 803D serial number 608 and on Model 803DR serial number 254 and on Model 803D/AG serial number 608 and on Model 803DR/AG serial number 254 and on
AA	Model 803D serial number 123 thru 644 Model 803DR serial number 123 thru 237 Model 803D/AG serial number 123 thru 644 Model 803DR/AG serial number 123 thru 237
AB	Model 803D serial number 645 and on Model 803DR serial number 238 and on Model 803D/AG serial number 645 and on Model 803DR/AG serial number 238 and on

USE CODE	EFFECTIVITY
AC	Model 803D serial number 123 thru 771 Model 803DR serial number 123 thru 239 Model 803D/AG serial number 123 thru 771 Model 803DR/AG serial number 123 thru 239
AD	Model 803D serial number 772 and on Model 803DR serial number 240 and on Model 803D/AG serial number 772 and on Model 803DR/AG serial number 240 and on
AE	Model 803D serial number 123 thru 826 Model 803DR serial number 123 thru 254 Model 803D/AG serial number 123 thru 826 Model 803DR/AG serial number 123 thru 254
AF	Model 803D serial number 827 and on Model 803DR serial number 255 and on Model 803D/AG serial number 827 and on Model 803DR/AG serial number 255 and on
AG	Model 803D serial number 645 thru 995 Model 803DR serial number 238 thru 284 Model 803D/AG serial number 645 thru 995 Model 803DR/AG serial number 238 thru 284
AH	Model 803D serial number 996 and on Model 803DR serial number 285 and on Model 803D/AG serial number 996 and on Model 803DR/AG serial number 285 and on
AI	Model 803D serial number 123 thru 826 Model 803DR serial number 123 thru 269 Model 803D/AG serial number 123 thru 826 Model 803DR/AG serial number 123 thru 269
AJ	Model 803D serial number 827 and on Model 803DR serial number 270 and on Model 803D/AG serial number 827 and on Model 803DR/AG serial number 270 and on
AK	Model 803D serial number 827 thru 995 Model 803DR serial number 255 thru 269 Model 803D/AG serial number 827 thru 995 Model 803DR/AG serial number 255 thru 269
AL	Model 803D serial number 996 and on Model 803DR serial number 270 and on Model 803D/AG serial number 996 and on Model 803DR/AG serial number 270 and on
AM	Model 803D serial number 123 thru 1238 Model 803DR serial number 123 thru 318 Model 803D/AG serial number 123 thru 1238 Model 803DR/AG serial number 123 thru 318
AN	Model 803D serial number 1239 and on Model 803DR serial number 319 and on Model 803D/AG serial number 1239 and on Model 803DR/AG serial number 319 and on
AO	Model 803D serial number 123 thru 1551 Model 803DR serial number 123 thru 368 Model 803D/AG serial number 123 thru 1551 Model 803DR/AG serial number 123 thru 368
AP	Model 803D serial number 1552 and on Model 803DR serial number 369 and on Model 803D/AG serial number 1552 and on Model 803DR/AG serial number 369 and on

SECTION VI

ACCESSORIES

6-1. PRECISION VOLTAGE DIVIDERS

6-2. The FLUKE 80A, 80D, and 80E Voltage Dividers provide the FLUKE 800 Series Differential Voltmeters with the ability to make high accuracy measurements up to 30,000 volts DC. All models contain a zero center panel meter which allows the polarity and approximate magnitude of the unknown high voltage to be easily observed. At maximum input, all units draw but 1 ma of current from the unknown. The extreme accuracy and excellent long term stability of these dividers are obtained by using properly aged precision wirewound resistors which have a very low temperature coefficient. To further ensure high accuracy and long term stability at very high voltages, the 80D dividers have all resistance components immersed in oil within a hermetically sealed container. As an additional feature, all 80D and 80E models are provided with a 1 volt tap which allows measurements of high voltages with a laboratory potentiometer. Specifications for the standard models are shown on next page. Other intermediate models are available upon special request.

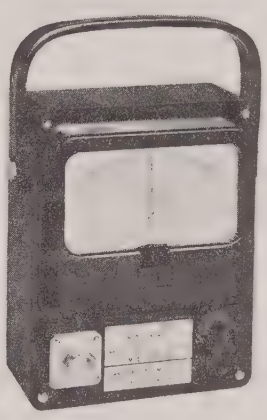

MODEL 80A

MODEL 80D

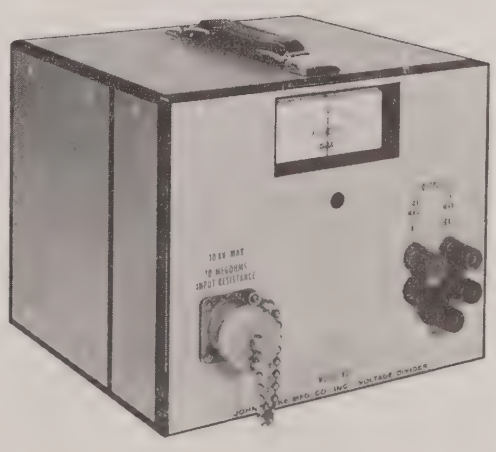

MODEL 80E

Model No.	Maximum Input Voltage	Total Resistance	Current Drawn At Max. Input	Division Ratio			Division Ratio Accuracy	Stability of Division Accuracy Per Year
				500V Out	10V Out	1V Out		
80A-1	1 KV	1 M	1 ma	2:1	——	——	±0.015%	——
80A-2	2 KV	2 M	1 ma	4:1	——	——	±0.015%	——
80E-5	5 KV	5 M	1 ma	—	500:1	5,000:1	±0.01%	±0.01%
80E-10	10 KV	10 M	1 ma	—	1000:1	10,000:1	±0.01%	±0.01%
80D-30	30 KV	30 M	1 ma	60:1	3000:1	30,000:1	±0.01%	±0.01%

MODELS	SIZE	INPUT CONNECTOR	OUTPUT CONNECTOR
80A	6-3/4" high 5-1/4" wide 2-1/4" deep	UG-560U with mating connector supplied	Insulated binding posts on 3/4" centers
80E	7" high 8-1/2" wide 8" deep	MS3102A-18-165 with mating connector supplied	Insulated binding posts on 3/4" centers for both outputs
80D	13" high 9-3/4" wide 16" deep	Special 5" ceramic standoff with mating 6" guard supplied	Insulated binding post on 3/4" centers for both outputs

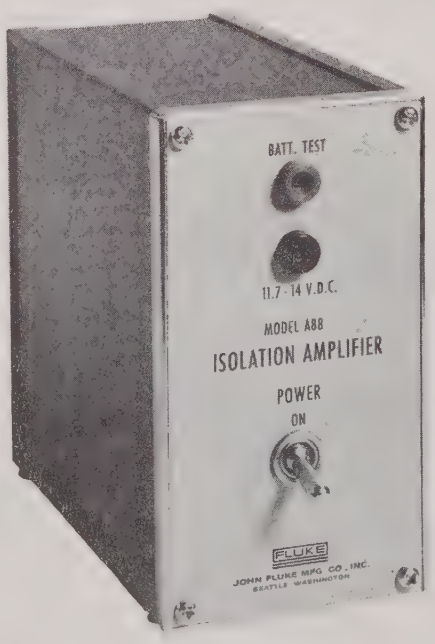

MODEL A88 ISOLATION AMPLIFIER

6-3. ISOLATION AMPLIFIER

6-4. The FLUKE Model A88 all solid-state isolation amplifier is designed to provide isolation between the output of a differential voltmeter and the input of a recorder. Thus, the A88 will allow the use of a wide range of strip chart recorders for recording the voltmeter reading without regard to the input isolation characteristics of the recorder. The A88 is also excellent for making accurate dc microvolt and nanoampere measurements in the presents of common mode voltages up to 1100 vdc and 3 vac, 50 to 500 cycles.

GAIN: 1 volt output per microampere input.

GAIN ACCURACY: ±2%.

INPUT CURRENT RANGE: 0 to 2 microamperes.

INPUT VOLTAGE RANGE: 0 to 2 millivolts nominal.

INPUT RESISTANCE: 950 ohms (±5%).

OUTPUT VOLTAGE RANGE: 0 to 2 volts open circuit.

OUTPUT RESISTANCE: 1000 ohms (±5%).

INPUT ISOLATION FROM CHASSES: Greater than 5×10^{11} ohms at 25°C (77°F), 60% RH and 1×10^{10} ohms at 50°C (122°F), 80% RH.

APPENDIX A

FEDERAL SUPPLY CODE FOR MANUFACTURERS

A-1. CODE TO NAME

A-2. The following five-digit code numbers are listed in numerical sequence along with the manufacturer's name and address to which the code has been assigned. The Federal Supply Code has been taken from Cataloging Handbook H 4-2, Code to Name.

00213	Sage Electronics Corp. Rochester, New York
00327	Welwyn International, Inc. Westlake, Ohio
00656	Aerovox Corp. New Bedford, Massachusetts
00779	AMP Inc. Harrisberg, Pennsylvania
01121	Allen-Bradley Co. Milwaukee, Wisconsin
01281	TRW Semiconductors Lawndale, California
01295	Texas Instruments, Inc. Semiconductor Components Div. Dallas, Texas
01686	RCL Electronics Inc. Manchester, New Hampshire
01730	Deleted
01884	Dearborn Electronics Inc. Orlando, Florida
02114	Ferroxcube Corp. Saugerties, New York
02606	Replaced by 15801
02660	Amphenol-Borg Elect. Corp. Broadview, Illinois
02799	Arco Capacitors, Inc. Los Angeles, California
03614	Replaced by 71400
03651	Replaced by 44655
03797	Eldema Corp. Compton, California
03877	Transitron Electronic Corp. Wakefield, Massachusetts
03888	Pyrofilm Resistor Co., Inc. Cedar Knolls, New Jersey
03911	Clairex Corp. New York, New York
03980	Muirhead Instruments, Inc. Mountainside, New Jersey
04009	Arrow Hart and Hegemen Electronic Company Hartford, Connecticut
04062	Replaced by 72136
04202	Replaced by 81312
04217	Essex Wire Corp Wire & Cable Div. Anaheim, California
04221	Aemco Div. of Midtex Inc. Mankato, Minnesota
04645	Replaced by 75376
04713	Motorola Semiconductor Products Inc. Phoenix, Arizona
05082	Replaced by 94154
05236	Jonathan Mfg. Co. Fullerton, California
05277	Westinghouse Electric Corp. Semiconductor Dept. Youngwood, Pennsylvania
05278	Replaced by 43543
05397	Union Carbide Corp. Electronics Div. Cleveland, Ohio
05571	Sprague Electric Co Pacific Div. Los Angeles, California
05704	Alac, Inc. Glendale, California
05820	Wakefield Engineering Ind. Wakefield, Massachusetts
06001	General Electric Company Capacitor Department Irmo, South Carolina
06136	Replaced by 63743
06473	Amphenol Space & Missile Sys. Chatsworth, California
06555	Beede Electrical Instrument Co. Penacook, New Hampshire
06739	Electron Corp. Littletown, Colorado
06743	Clevite Corp. Cleveland, Ohio
06751	Semcor Div. Components Phoenix, Arizona
06860	Gould National Batteries Inc. City of Industry, California
06980	Eitel-McCullough, Inc. San Carlos, California
07115	Replaced by 14674
07138	Westinghouse Electric Corp Electronic Tube Div. Elmira, New York
07263	Fairchild Semiconductor Div. of Fairchild Camera & Instrument Corp. Mountain View, California
07344	Bircher Co., Inc. Rochester, New York
07792	Lerma Engineering Corp Northampton, Massachusetts
07910	Continental Device Corp. Hawthorne, California
08530	Reliance Mica Corp. Brooklyn, New York
08792	CBS Electronics Semiconductor Operations-Div. of CBS Inc. Lowell, Massachusetts
08806	General Electric Co. Miniature Lamp Dept. Cleveland, Ohio
08863	Nylomatic Corp. Norrisville, Pennsylvania
08988	Skottie Electronics Inc. Archbald, Pennsylvania
09922	Burndy Corp. Norwalk, Connecticut
11237	Chicago Telephone of Calif. Inc. South Pasadena, California
11358	CBS Electronics Div. of CBS Inc. Newburyport, Massachusetts
11403	Best Products Co. Chicago, Illinois
11503	Keystone Mfg Div. of Avis Industrial Corp. Warren, Michigan
12014	Chicago Rivet & Machine Co. Bellwood, Illinois
12040	National Semiconductor Corp. Danburry, Connecticut
12060	Diodes, Inc. Chatsworth, California
12136	Philadelphia Handle Co. Camden, New Jersey
12323	Presin Co., Inc. Shelton, Connecticut
12327	Freeway Washer & Stamping Co. Cleveland, Ohio
12400	Replaced by 75042
12617	Hamlin Inc. Lake Mills, Wisconsin
12697	Clarostat Mfg. Co. Dover, New Hampshire
12749	James Electronics Chicago, Illinois

12856	Micrometals Sierra Madre, California
12954	Dickson Electronics Corp. Scottsdale, Arizona
13606	Sprague Electric Co. Transistor Div. Concord, New Hampshire
13839	Replaced by 23732
14099	Semtech Corp. Newbury Park, California
14193	California Resistor Corp. Santa Monica, California
14298	American Components, Inc. Conshohocken, Pennsylvania
14655	Cornell-Dubilier Electronics Newark, New Jersey
14674	Corning Glass Works Corning, New York
14752	Electro Cube Inc. San Gabriel, California
14869	Replaced by 96853
15636	Elec-Trol Inc. Northridge, California
15801	Fenwal Electronics Inc. Framingham, Massachusetts
15818	Amelco Semiconductor Div. of Teledyne Inc. Mountain View, California
15849	Useco, Inc. Mt. Vernon, New York
15909	Replaced by 17870
16332	Replaced by 28478
16473	Cambridge Scientific Ind. Inc. Cambridge, Maryland
16742	Paramount Plastics Downey, California
16758	Delco Radio Div. of General Motors Kokomo, Indiana
17069	Circuit Structures Lab. Upland, California
17856	Siliconix, Inc. Sunnyvale, California
17870	Daven-Div. of Thomas A. Edison Ind. --McGraw-Edison Co. Manchester, New Hampshire
18083	Deleted
18178	Vactec Inc. Maryland Heights, Missouri
18736	Voltronics Corp. Hanover, New Jersey
19429	Montronics, Inc. Seattle, Washington
19451	Perine Machinery & Supply Co. Seattle, Washington
19701	Electra Mfg. Co. Independence, Kansas
20584	Enochs Mfg. Co. Indianapolis, Indiana
22767	ITT Semiconductors Div. of ITT Palo Alto, California
23732	Tracor Rockville, Maryland
24248	Southco Div. of South Chester Corp. Lester, Pennsylvania
24655	General Radio Co. West Concord, Massachusetts
25403	Amperex Electronic Corp Semiconductor & Receiving Tube Division Slatersville, Rhode Island
28478	Deltrol Controls Corp. Milwaukee, Wisconsin
28520	Heyman Mfg. Co. Kenilworth, New Jersey
30323	Illinois Tool Works Inc. Chicago, Illinois
33173	General Electric Co. Tube Dept. Owensboro, Kentucky
37942	Mallory, P. R., & Co., Inc. Indianapolis, Indiana
38315	Honeywell Inc. Precision Meter Div. Manchester, New Hampshire
42498	National Company Melrose, Massachusetts
43543	Nytronics Inc. Transformer Co. Div. Alpha, New Jersey
44655	Ohmite Mfg. Co. Skokie, Illinois
49671	Radio Corp. of America New York, New York
49956	Raytheon Company Lexington, Maine
53021	Sangamo Electric Co. Springfield, Illinois
55026	Simpson Electric Company Chicago, Illinois
56289	Sprague Electric Co. North Adams, Massachusetts
58474	Superior Electric Co. Bristol, Connecticut
60399	Torrington Mfg. Co. Torrington, Connecticut
62460	Deleted
63743	Ward Leonard Electric Co. Mount Vernon, New York
64834	West Mfg. Co. San Francisco, California
65092	Weston Instruments Inc. Newark, New Jersey
66150	Winslow Tele-Tronics Inc. Asbury Park, New Jersey
70563	Amperite Company Union City, New Jersey
70903	Belden Mfg. Co. Chicago, Illinois
71002	Birnbach Radio Co., Inc. New York, New York
71400	Bussmann Mfg. Div. of McGraw-Edison Co. St. Louis, Missouri
71450	CTS Corp. Elkhart, Indiana
71468	ITT Cannon Electric Inc. Los Angeles, California
71482	Clare, C P. & Co. Chicago, Illinois
71590	Centralab Div. of Globe Union Inc. Milwaukee, Wisconsin
71707	Coto Coil Co., Inc. Providence, Rhode Island
71744	Chicago Miniature Lamp Works Chicago, Illinois
71785	Cinch Mfg. Co. & Howard B. Jones Div. Chicago, Illinois
72005	Driver, Wilber B., Co. Newark, New Jersey
72092	Replaced by 06980
72136	Electro Motive Mfg. Co. Willimantic, Connecticut
72259	Nytronics Inc. Berkeley Heights, New Jersey
72354	Deleted
72619	Dialight Corp Brooklyn, New York
72653	G. C. Electronics Rockford, Illinois
72665	Replaced by 90303
72794	Dzus Fastener Co., Inc. West Islip, New York
72928	Gudeman Co. Chicago, Illinois
72982	Erie Tech. Products Inc. Erie, Pennsylvania
73138	Beckman Instruments Inc. Helipot Division Fullerton, California
73293	Hughes Aircraft Co. Electron Dynamics Div. Newport Beach, California
73445	Amperex Electronic Corp. Hicksville, New York
73559	Carling Electric Inc. Hartford, Connecticut
73586	Circle F Industries Trenton, New Jersey
73734	Federal Screw Products, Inc. Chicago, Illinois
73743	Fischer Special Mfg. Co. Cincinnati, Ohio
73899	JFD Electronics Co. Brooklyn, New York
73949	Guardian Electric Mfg. Co. Chicago, Illinois
74199	Quam Nichols Co. Chicago, Illinois
74217	Radio Switch Corp. Marlboro, New Jersey
74276	Signalite Inc. Neptune, New Jersey
74306	Piezo Crystal Co. Carlisle, Pennsylvania
74542	Hoyt Elect. Instr. Works Penacook, New Hampshire
74970	Johnson, E. F., Co. Waseca, Minnesota
75042	IRC Inc. Philadelphia, Pennsylvania
75376	Kurz-Kasch, Inc. Dayton, Ohio
75382	Kulka Electric Corp. Mt. Vernon, New York
75915	Littlefuse Inc. Des Plaines, Illinois
76854	Oak Mfg. Co. Crystal Lake, Illinois
77342	Potter & Brumfield Div. of Amer. Machine & Foundry Princeton, Indiana
77969	Rubbercraft Corp. of Calif. LTD. Torrance, California

78189	Shakeproof Div. of Illinois Tool Works Elgin, Illinois
78277	Sigma Instruments, Inc. South Braintree, Massachusetts
78488	Stackpole Carbon Co. St. Marys, Pennsylvania
78553	Tinnerman Products Cleveland, Ohio
79136	Waldes Kohinoor Inc. Long Island City, New York
79497	Western Rubber Company Goshen, Indiana
79963	Zierick Mfg. Corp. New Rochelle, New York
80031	Mepco Div. of Sessions Clock Co. Morristown, New Jersey
80145	API Instruments Co. Chesterland, Ohio
80183	Sprague Products North Adams, Massachusetts
80294	Bourns Inc. Riverside, California
80583	Hammarlund Co., Inc. Mars Hill, North Carolina
80640	Stevens, Arnold Inc. Boston, Massachusetts
81073	Grayhill Inc. La Grange, Illinois
81312	Winchester Electronics Div. of Litton Industries Oakville, Connecticut
81439	Therm-O-Disc Inc. Mansfield, Ohio
81483	International Rectifier Corp. El Segundo, California
81590	Korry Mfg. Co. Seattle, Washington
82376	Deleted
82389	Switchcraft Inc. Chicago, Illinois
82415	Price Electric Corp. Frederick, Maryland
82872	Roanwell Corp. New York, New York
82877	Rotron Mfg. Co., Inc. Woodstock, New York
82879	ITT Wire & Cable Div. Pawtucket, Rhode Island
83003	Varo Inc. Garland, Texas
83298	Bendix Corp. Electric Power Division Eatontown, New Jersey
83330	Smith, Herman H., Inc. Brooklyn, New York
83478	Rubbercraft Corp. of America New Haven, Connecticut
83594	Burroughs Corp. Electronic Components Div. Plainfield, New Jersey
83740	Union Carbide Corp. Consumer Products Div. New York, New York
84171	Arco Electronics, Inc. Great Neck, New York
84411	TRW Ogallala, Nebraska
86577	Precision Metal Products Stoneham, Massachusetts
86684	Radio Corp. of America Electronic Components & Devices Harrison, New Jersey
86689	Deleted
87034	Marco-Oak Inc. Anaheim, California
88419	Use 14655
88690	Replaced by 04217
89536	Fluke, John Mfg. Co., Inc. Seattle, Washington
89730	Replaced by 08806
90201	Mallory Capacitor Co. Indianapolis, Indiana
90215	Best Stamp & Mfg. Co. Kansas City, Missouri
90211	Square D Co. Chicago, Illinois
90303	Mallory Battery Co. Tarrytown, New York
91293	Johanson Mfg. Co. Boonton, New Jersey
91407	Replaced by 58474
91637	Dale Electronics Inc. Columbus, Nebraska
91662	Elco Corp. Willow Grove, Pennsylvania
91737	Gremar Mfg. Co., Inc. Wakefield, Massachusetts
91802	Industrial Devices, Inc. Edgewater, New Jersey
91836	King's Electronics Tuckahoe, New York
91929	Honeywell Inc. Micro Switch Div. Freeport, Illinois
91934	Miller Electric Co., Inc. Pawtucket, Rhode Island
93332	Sylvania Electric Products Semiconductor Products Div. Woburn, Massachusetts
94145	Replaced by 49956
94154	Tung-Sol Div. of Wagner Electric Corp. Newark, New Jersey
95146	Alco Electronics Products Inc. Lawrence, Massachusetts
95263	Leecraft Mfg. Co. Long Island City, New York
95264	Replaced by 98278
95275	Vitramon Inc. Bridgeport, Connecticut
95303	Radio Corp. of America Solid State & Receiving Tube Div. Cincinnati, Ohio
95354	Methode Mfg. Corp. Rolling Meadows, Illinois
95712	Dage Electric Co., Inc. Franklin, Indiana
95987	Weckesser Co., Inc. Chicago, Illinois
96733	San Fernando Electric Mfg. Co. San Fernando, California
96853	Rustrak Instrument Co. Manchester, New Hampshire
96881	Thomson Industries, Inc. Manhasset, New York
97540	Master Mobile Mounts Div. of Whitehall Electronics Corp. Los Angeles, California
97913	Industrial Electronic Hdware Corp. New York, New York
97945	White, S. S. Co. Plastics Div. New York, New York
97966	Replaced by 11358
98094	Replaced by 49956
98278	Microdot Inc. Pasadena, California
98291	Sealectro Corp. Conhex Div Mamaroneck New York
98388	Accurate Rubber & Plastics Culver City, California
98743	Replaced by 12749
98925	Deleted
99120	Plastic Capacitors, Inc. Chicago, Illinois
99217	Southern Electronics Corp. Burbank, California
99515	Marshall Industries Capacitor Div. Monrovia, California

Revised August 1, 1968
Using H4-1 and H4-2
Dated June , 1968

WARRANTY

The JOHN FLUKE MFG. CO., INC. warrants each instrument manufactured by them to be free from defects in material and workmanship. Their obligation under this Warranty is limited to servicing or adjusting an instrument returned to the factory for that purpose, and to making good at the factory any part or parts thereof; except tubes, fuses, choppers and batteries, which shall, within one year after making delivery to the original purchaser, be returned by the original purchaser with transportation charges prepaid, and which upon their examination shall disclose to their satisfaction to have been thus defective. If the fault has been caused by misuse or abnormal conditions of operation, repairs will be billed at a nominal cost. In this case, an estimate will be submitted before work is started, if requested.

If any fault develops, the following steps should be taken.

1. Notify the John Fluke Mfg. Co., Inc., giving full details of the difficulty, and include the Model number, type number, and serial number. On receipt of this information, service data or shipping instructions will be forwarded to you.

2. On receipt of the shipping instructions, forward the instrument prepaid, and repairs will be made at the factory. If requested, an estimate of the charges will be made before the work begins, provided the instrument is not covered by the Warranty.

SHIPPING

All shipments of John Fluke Mfg. Co., Inc. instruments should be made via Railway Express prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT

The instrument should be thoroughly inspected immediately upon receipt. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument fails to operate properly, or is damaged in any way, a claim should be filed with the carrier. A full report of the damage should be obtained by the claim agent, and this report should be forwarded to John Fluke Mfg. Co., Inc. Upon receipt of this report you will be advised of the disposition of the equipment for repair or replacement. Include the model number, type number, and serial number when referring to this instrument for any reason.

The John Fluke Mfg. Co., Inc. will be happy to answer all application questions which will enhance your use of this instrument. Please address your requests to:

JOHN FLUKE MFG. CO., INC., P. O. BOX 7428, SEATTLE 33, WASHINGTON

Sales and Service Representatives

ALABAMA

HUNTSVILLE
BCS Associates, Inc.
2317 Bob Wallace Ave. S.W.
Tel. (205) 534-1648

ALASKA

SEATTLE
Instrument Specialists, Inc.
5950 Sixth Ave. South
Suite 106
Seattle, Washington
Tel. (206) 767-4260

ARIZONA

PHOENIX
Barnhill Associates
4900 E. Indian School Road
Tel. (602) 959-2115

CALIFORNIA

LOS ANGELES
Instrument Specialists, Inc.
2870 Los Feliz Place
Tel. (213) 665-5181

SAN FRANCISCO
Instrument Specialists, Inc.
2359 De La Cruz
Santa Clara, California
Tel. (408) 244-1505

COLORADO

DENVER
Barnhill Associates
1170 S. Sheridan Blvd.
Tel (303) 934-5505

CONNECTICUT

HARTFORD
Instrument Representatives, Inc.
P.O. Box 165
Glastonbury, Connecticut
Tel. (203) 633-0777

FLORIDA

ORLANDO
BCS Associates, Inc.
940 N. Fern Creek Ave.
Tel. (305) 425-2764

HAWAII

HONOLULU
Industrial Electronics, Inc.
646 Queen Street
Tel. (808) 506-095

ILLINOIS

CHICAGO
Cozzens & Cudahy, Inc.
9501 W. Devon Ave.
Rosemont, Illinois
Tel. (312) 825-1144

INDIANA

INDIANAPOLIS
Cozzens & Cudahy, Inc.
44 Kirk Drive
Tel. (317) 244-2456

LOUISIANA

NEW ORLEANS
BCS Associates, Inc.
P.O. Box 7371
Metairie, Louisiana
Tel. (504) 888-2266

MARYLAND

BALTIMORE
Electronic Marketing Assoc.
11501 Huff Court
Kensington, Maryland
Tel. (301) 744-7700

MASSACHUSETTS

BOSTON
Instrument Representatives, Inc.
1046 Massachusetts Avenue
Arlington, Massachusetts
Tel. (617) 646-1034

MICHIGAN

DETROIT
Technitron, Inc.
13657 Grand River Ave.
Tel. (313) 838-7324

MINNESOTA

MINNEAPOLIS
Cozzens & Cudahy, Inc.
7710 Computer Ave.
Tel. (612) 920-1022

MISSOURI

ST. LOUIS
Cozzens & Cudahy, Inc.
10534 Natural Bridge Road
Edmundson, Missouri
Tel. (314) 423-1234

NEW JERSEY

NEWARK
SBM Associates, Inc.
1519 Stuyvesant Avenue
Union, New Jersey
Tel. (201) 687-8737

NEW MEXICO

ALBUQUERQUE
Barnhill Associates
827 Pennsylvania Ave.
Tel. (505) 265-7766

NEW YORK

NEW YORK
SBM Associates, Inc.
28 Hobby Street
Pleasantville, New York
Tel. (914) 769-1811

LONG ISLAND
SBM Associates, Inc.
528 Old Country Road
Plainview, Long Island
Tel. (516) 433-1421

ROCHESTER
SBM Associates, Inc.
800 Linden Avenue
Tel. (716) 381-8330

SYRACUSE
SBM Associates, Inc.
138 Pickard Bldg.
5858 E. Molloy Road
Tel. (315) 454-9377

NORTH CAROLINA

GREENSBORO
BCS Associates, Inc.
1039 E. Wendover Avenue
Tel. (919) 273-1918

OHIO

CLEVELAND
Technitron, Inc.
23203 Lorain Road
North Olmsted, Ohio
Tel. (216) 734-0960

DAYTON
Technitron, Inc.
1250 W. Dorothy Lane
Tel. (513) 298-9964

OREGON

PORTLAND
Instrument Specialists, Inc.
5950 Sixth Ave. South
Suite 106
Seattle, Washington
Tel. (206) 767-4260

PENNSYLVANIA

PHILADELPHIA
Acromatix Associates, Inc.
3118 Germantown Pike
Fairview Village, Pennsylvania
Tel. (215) 279-0377

PITTSBURGH
Technitron, Inc.
114 Spring Grove Road
Tel. (412) 371-1231

TEXAS

DALLAS
Barnhill Associates
507B Bishop Street
Richardson, Texas
Tel. (214) AD 1-2573

HOUSTON
Barnhill Associates
Suite 203
3810 Westheimer
Tel. (713) NA 1-0040

WASHINGTON

SEATTLE
Instrument Specialists, Inc.
5950 Sixth Ave. South
Suite 106
Seattle, Washington
Tel. (206) 767-4260

WASHINGTON, D.C.

Electronic Marketing Associates
11501 Huff Court
Kensington, Maryland
Tel. (301) 946-0300

CANADA

BRITISH COLUMBIA

VANCOUVER
Allan Crawford Associates, Ltd.
5901 East Broadway
North Burnaby 2, B.C.
Tel. (604) 291-7161

ONTARIO

OTTAWA
Allan Crawford Associates, Ltd.
376 Churchill Avenue — Suite 106
Tel. (613) 725-1288

TORONTO
Allan Crawford Associates, Ltd.
65 Martin Ross Avenue
Downsview, Ontario
Tel. (416) 636-4910

QUEBEC

MONTREAL
Allan Crawford Associates, Ltd.
6999 Cote de Neiges Road
Tel. (514) 739-6776

International Representatives

AUSTRALIA

Elmesco Instruments
41 Carter Road
Brookvale, N.S.W., Australia

AUSTRIA

Omni Ray AG
Techn. Beratung
Mollardgasse 54
Vienna VI, Austria

BELGIUM

C. N. Rood S/A
30 Rue Leon Frederic
Brussels 4, Belgium

DENMARK

Tage Olsen A/S
Ronnegade 1-0
Copenhagen, Denmark

FINLAND

Oy Findip AB Ltd.
Mannerheimintie 29C
Helsinki 25, Finland

FRANCE

S. E. R. I. E. L., s. a.
48 Avenue Victor Hugo
Clamart (Seine) France

HONG KONG and MACAO

Intronics Ltd.
4 Hankow Road, Suite 4A
Kowloon, Hong Kong

ISRAEL

R. D. T. Electronics
Engineering Ltd.
P.O. Box 21082
13 Dov-Hos Street
Tel-Aviv, Israel

ITALY

Elettronucleonica s. p. a.
7 Pizza DeAngli
20146 Milano, Italy

JAPAN

Toyo Trading Co., Ltd.
Central P.O. Box 999
Tokyo, Japan

Toyo Trading Co., Ltd.
4-37, Minamihonmachi
Higashika, Osaka, Japan

KOREA

M. - C International
Room 516, Bando Building
Seoul, Korea

THE NETHERLANDS

C. N. Rood N. V.
Post Office Box 4542
Rijswijk (Z. H.) The Netherlands

Fluke Nederland N. V.
Post Office Box 5053
Tilburg, The Netherlands

NEW ZEALAND

Sample Electronics (N. Z.) Ltd.
8 Matipo Street
Onehunga
Auckland, New Zealand

NORWAY

Morgenstierne & Co. A/S
Wesselsgt. 6
Oslo, Norway

OKINAWA

RYUKYU ISLANDS

Baxter Trading Co.
P.O. Box 26
Koza, Okinawa
Ryukyu Islands

PHILIPPINES

T. J. Wolff
2246 Pasong Tamo
Makati, Rizal
Manila, Philippines

SOUTH AFRICA

A. C. Gowlett (Pty.) Ltd.
P.O. Box 1257
Johannesburg, So. Africa

A. C. Gowlett (Pty.) Ltd.
P.O. Box 3641
Cape Town, So. Africa

A. C. Gowlett (Pty.) Ltd.
P.O. Box 2143
Durban, Natal, So. Africa

SOUTH VIETNAM

R. B. Landis & Co., Inc.
216 Hien-Vuong
P.O. Box H-3
Saigon, Vietnam

SPAIN

REMA
Calle General Sanjurjo, 18
Madrid, Spain

SWEDEN

Robert E. O. Olsson
Box 165
Tradgardsgatan 7
Motala, Sweden

SWITZERLAND

Omni Ray AG
Dufourstrasse 56
8008 Zurich, Switzerland

TAIWAN

Heighten Scientific Co., Ltd.
P.O. 1408
Taipei, Taiwan

THAILAND

G. Simon Radio Ltd.
30 Patpong Avenue
Suriwong
Bangkok, Thailand

THE UNITED KINGDOM

Fluke International Corp.
P.O. Box 102
Watford-Herts, England

WEST GERMANY

Rohde & Schwarz Vertriebs - Gmbh
5000 Koeln
Hohe Strasse 160-168
West Germany

Rohde & Schwarz Handels - Gmbh
1000 Berlin 10
Ernst - Reuter - Platz 10
West Germany

Rohde & Schwarz Vertriebs - Gmbh
2000 Hamburg 50
Grosse Bergstrasse 213-217
West Germany

Rohde & Schwarz Vertriebs - Gmbh
7500 Karlsruhe
Kriegsstrasse 39
West Germany

Rohde & Schwarz Vertriebs - Gmbh
8000 Muenchen
Dachauer Strasse 109
West Germany

In Europe contact FLUKE NEDERLAND, N. V., Post Office Box 5053, Tilburg, The Netherlands

FLUKE

List of Factory Authorized Service Centers

ARIZONA

PHOENIX

Arizona Standards Laboratory
4430 N. 19th Ave
Tel. (602) 264-9351

CALIFORNIA

LOS ANGELES

Instrument Specialists, Inc.
P. O. Box 39908
2870 Los Feliz Place
Tel. (213) 665-5181
TWX: 910-321-3914

COLORADO

BOULDER

Ball Brothers Research Corp.
Standardization Laboratory
Tel. (303) 444-5300
TWX: 910-940-3241

FLORIDA

ORLANDO

BCS Associates, Inc.
P. O. Box 6578
940 N. Fern Creek Ave.
Tel. (305) 425-2764
TWX. 810-850-0185

HAWAII

HONOLULU

Industrial Electronics
P. O. Box 135
646 Queen Street
Tel. (808) 506-095
TWX. 63238

MARYLAND

KENSINGTON

Electronic Marketing Associates
11501 Huff Court
Tel. (301) 946-0300
TWX. 710-825-9645

MASSACHUSETTS

ARLINGTON

Instrument Representatives, Inc.
1046 Massachusetts Ave.
Tel. (617) 646-1034

MICHIGAN

CLAWSON

Electro Instrument Repair
1024 W. 14 Mile Road
Tel. (313) 588-6688

NEW MEXICO

ALBUQUERQUE

EG & G Standards & Calibration
Laboratory
P. O. Box 8346
608 East Sunset Road
Tel. (505) 265-8481

NEW YORK

PLEASANTVILLE

SBM Associates
28 Hobby Street
Tel. (914) 769-1811
TWX. 710-572-2193

ROCHESTER

SBM Associates
800 Linden Ave.
Tel. (716) 381-8330
TWX. 510-253-6145

PENNSYLVANIA

PHILADELPHIA

Acromatix Associates, Inc.
3118 Germantown Pike
Fairview Village, Penn.
Tel. (215) 279-0377

TEXAS

GARLAND

Tucker Electronics Company
326 Kirby Street
Tel. (214) 272-3404

HUSTON

Linear Standards Laboratory
8207 Millet
Tel. (713) 923-2796

UTAH

SALT LAKE CITY

Stabro Laboratory
23 Kensington Ave.
Tel. (801) 467-8011

CANADA

TORONTO

Allen Crawford Associates Ltd.
65 Martin Ross Ave.
Downsview, Ontario
Tel. (416) 636-4910
TWX. 610-492-2119

INTERNATIONAL

THE NETHERLANDS

Fluke Netherland N.V.
P.O. Box 5053
Tilburg, The Netherlands

UNITED KINGDOM

Fluke International Corp.
P.O. Box 102
Watford-Herts, England

For information regarding service centers in other foreign locations, contact the nearest Sales and Service Representative in your area.

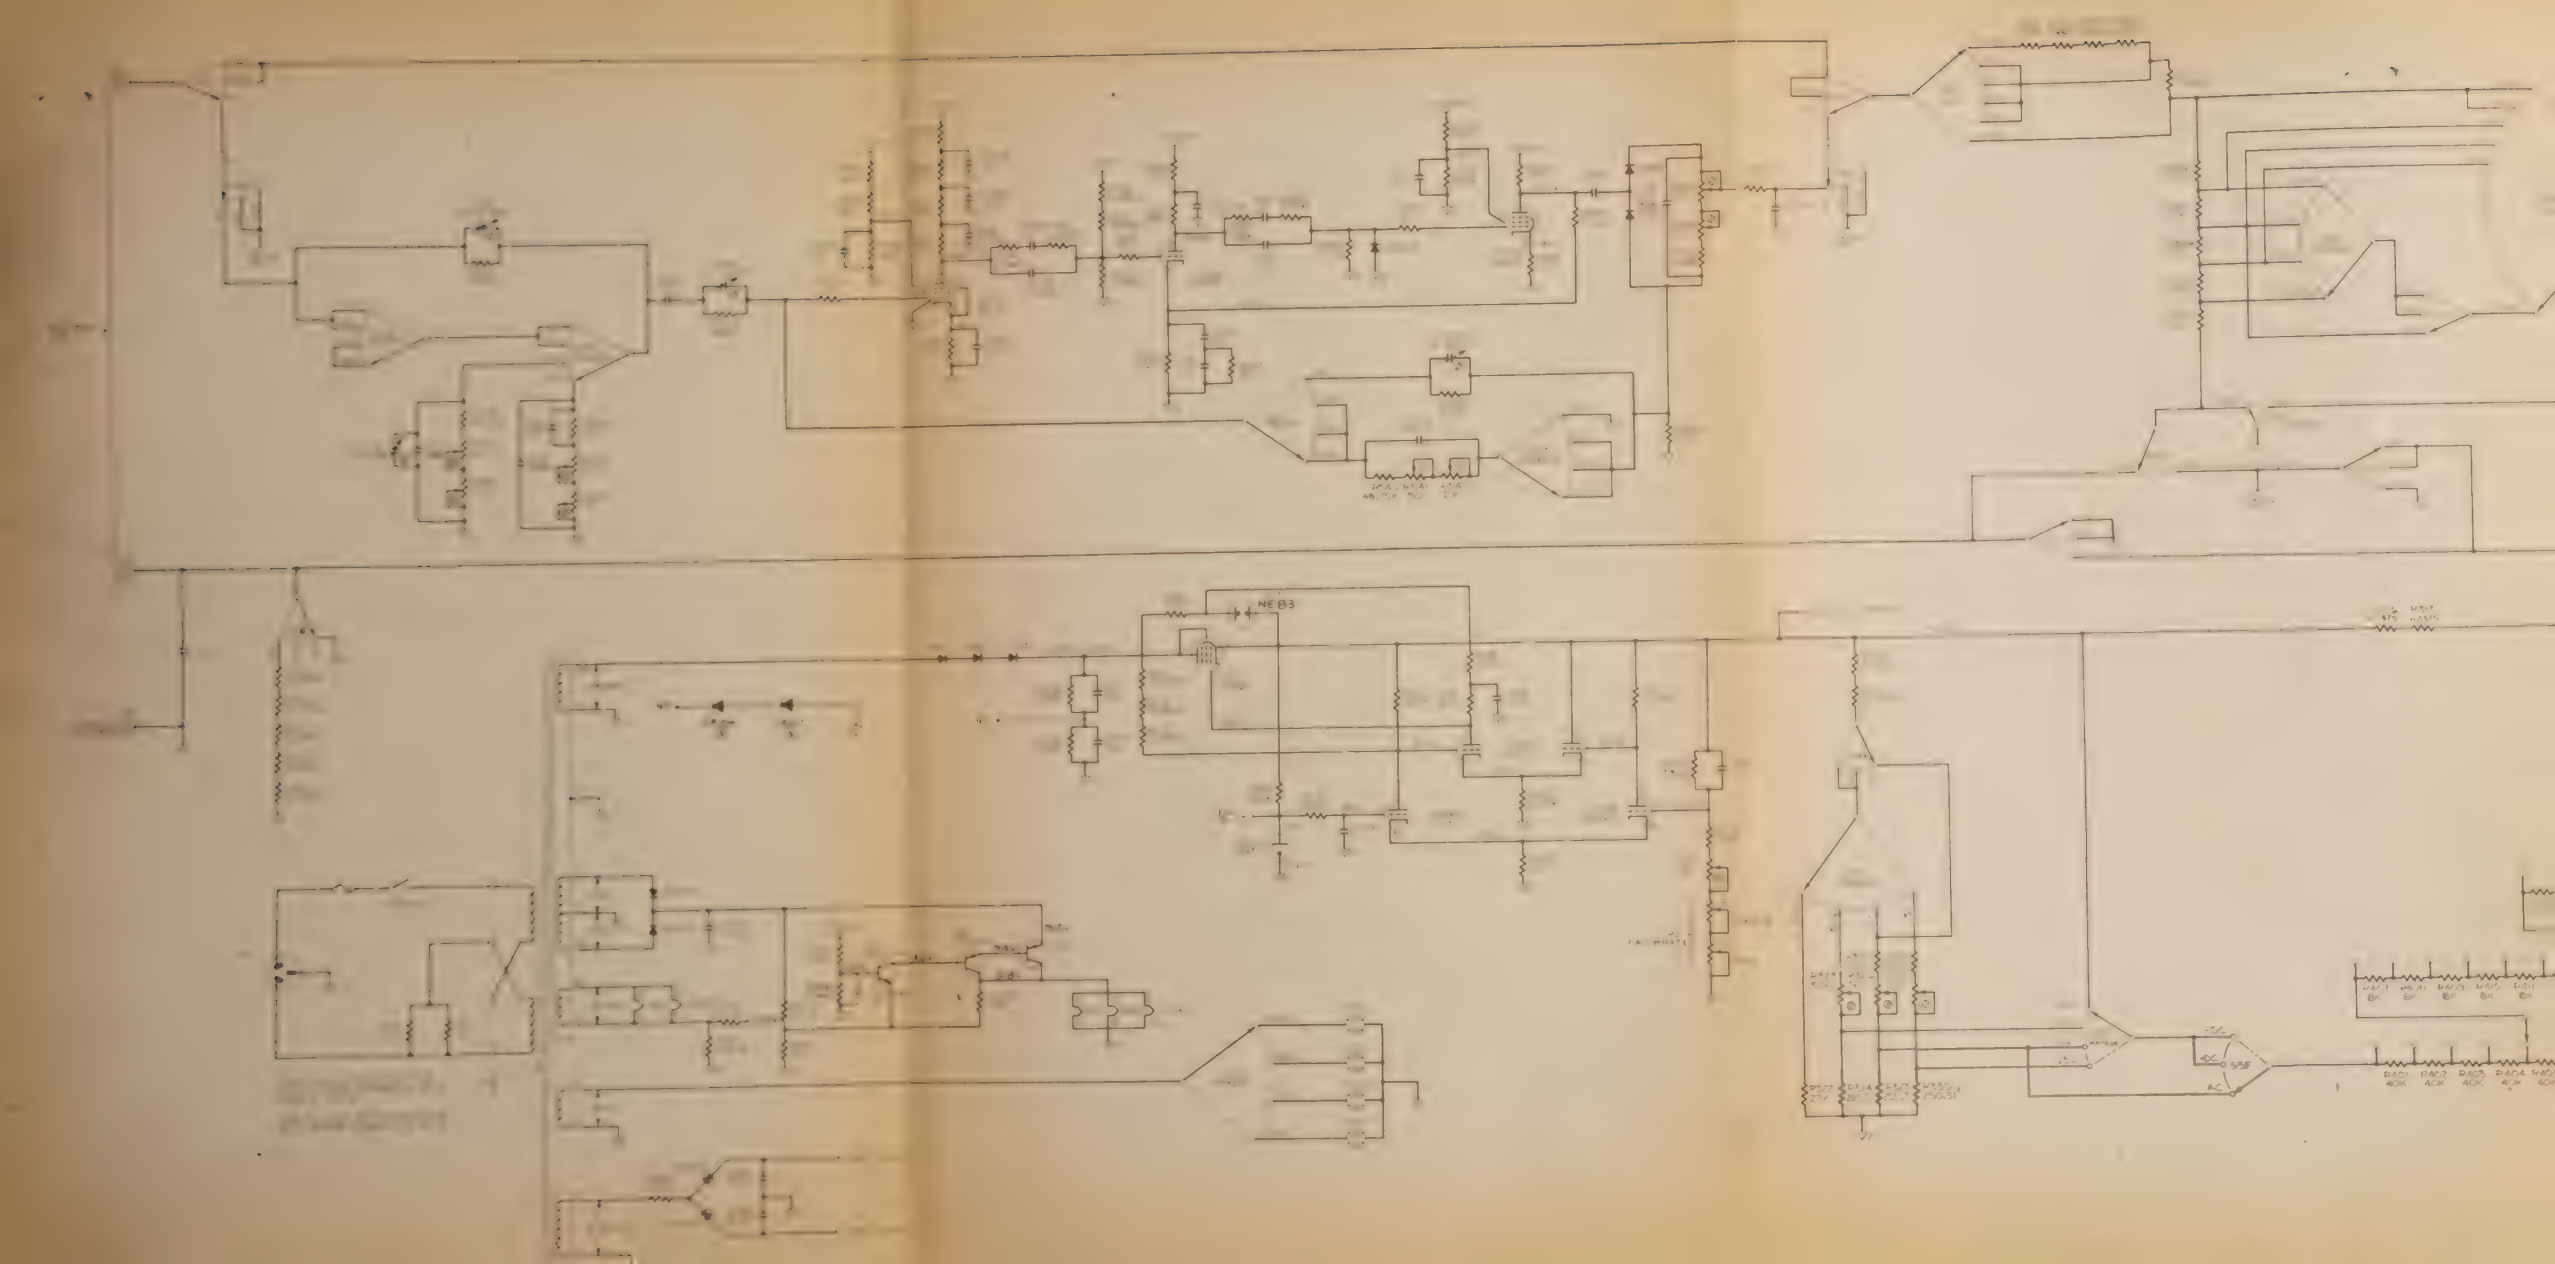

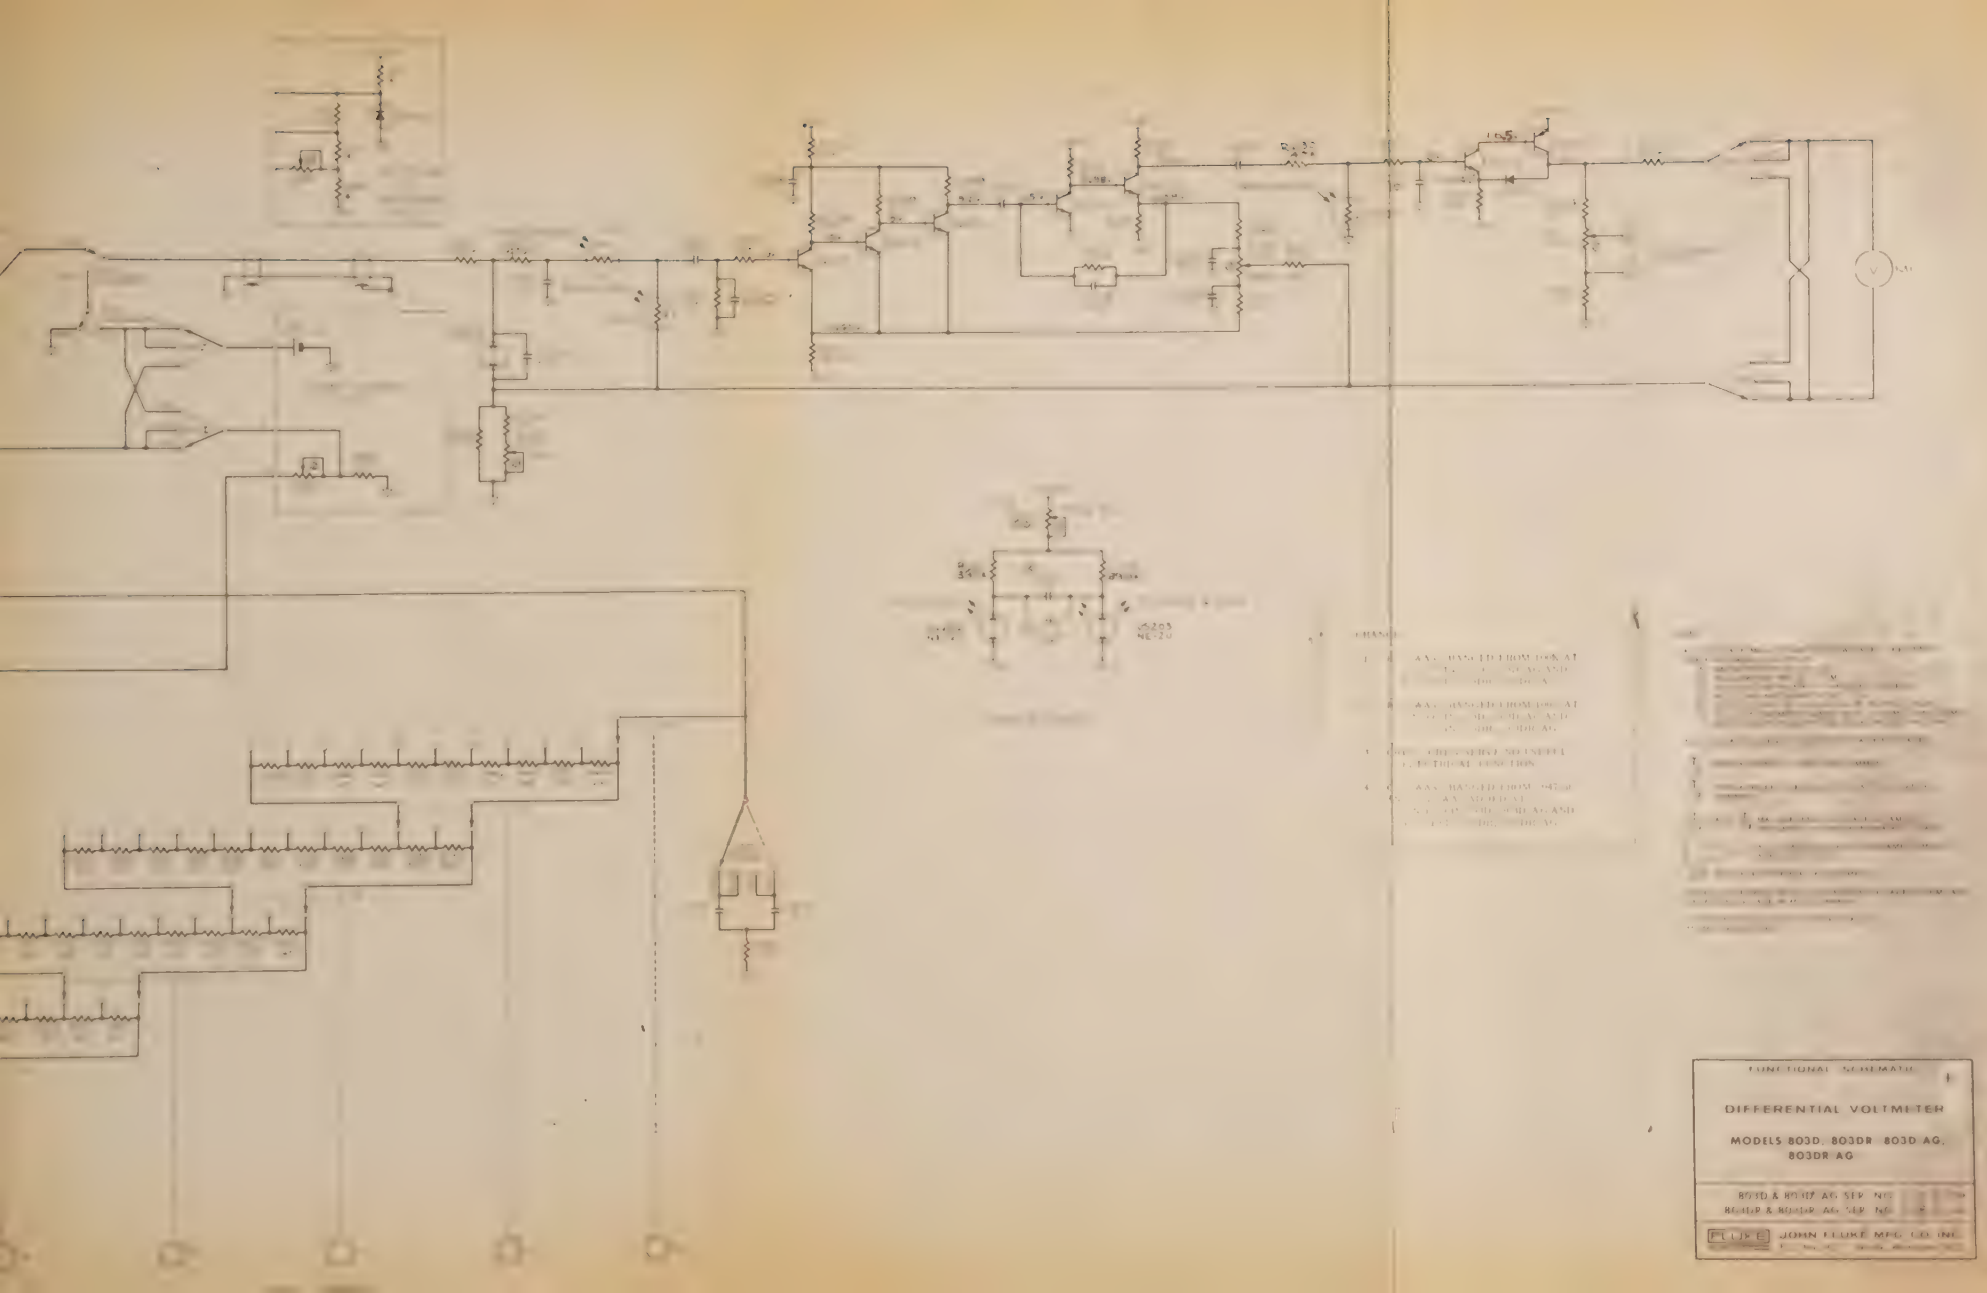

FUNCTIONAL SCHEMATIC

DIFFERENTIAL VOLTMETER

MODELS 803D, 803DR 803D AG, 803DR AG

803D & 803D AG SER. NO.
803DR & 803DR AG SER. NO.

FLUKE JOHN FLUKE MFG. CO. INC.

GENERAL ELECTRIC

GENERAL ELECTRIC COMPANY.....3960 MYSTIC VALLEY PKWY.
MEDFORD, MASS. 02155, Phone (617) 396-9600

BOSTON INSTRUMENTATION
AND COMMUNICATION
EQUIPMENT SERVICE

CERTIFICATE OF CALIBRATION

INSTRUMENT:_____ MFG._____

MODEL NUMBER:_____ SERIAL NUMBER_____

CUSTOMER:_____ DATE_____

_____ RO NUMBER_____

_____

STANDARDS USED			

STANDARD READS	UNIT UNDER TEST READS	MFG TOLERANCE

WE CERTIFY THAT THE ABOVE LISTED UNIT WAS DULY TESTED AND CALIBRATED WITH THE GENERAL ELECTRIC COMPANY STANDARDS. THE GENERAL ELECTRIC CO. STANDARDS ARE TRACEABLE TO THE NATIONAL BUREAU OF STANDARDS, TO THE EXTENT ALLOWED BY THE BUREAU'S FACILITY.

TESTED BY_____